



2000W BLACK GLASS PORTABLE ELECTRIC PANEL HEATER

KAHTP20BLKA

 
SAFETY & WARNINGS



- Read all instructions carefully before use.
- Ensure the voltage supplied matches the requirements indicated on the rating plate of the heater.
- Do not operate this appliance if the cable or plug has become damaged.
- Keep the appliance and cable away from other sources of heat, sharp objects or anything else that may cause damage.
- If the cord is damaged, it must be replaced by Kogan.com in order to avoid a hazard.
- Ensure the appliance is switched off before connecting to the mains power supply.
- Switch off the power supply at the switch and remove the plug from the outlet when the heater is not in use, is being cleaned or undergoing any other maintenance.
- To disconnect the heater, switch it off, then remove the plug from the outlet. Do not pull on the cord to disconnect the plug.
- The heater must not be located immediately below its power socket.
- Do not operate in areas where fuel, paint or any other flammable liquids are used or stored.
- This heater is for indoor use only.
- In order to avoid overheating or possible, do not cover the heater or block the air intakes or exhaust vents in any manner.
- Do not touch the hot surfaces directly.
- Do not insert or allow foreign objects to enter into any ventilation or exhaust openings, as this may cause electric shock, fire or damage to the appliance.
- Always ensure that your hands are dry before operating or adjusting any switches on the product or touching the plug and socket-outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the heater.
- Do not leave the heater unattended while it is in use.
- The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by disconnecting the appliance from the power supply, then vacuum cleaning the air vents and grilles.
- Do not place the heater on carpet and don not allow the cable to run under carpets. Route the cord away from high-traffic areas so that it will not be tripped over.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not store away until the heater cools down, store the heater in cool dry location when not in use.
- The heater must not be used if the glass panel is damaged.


OVERVIEW

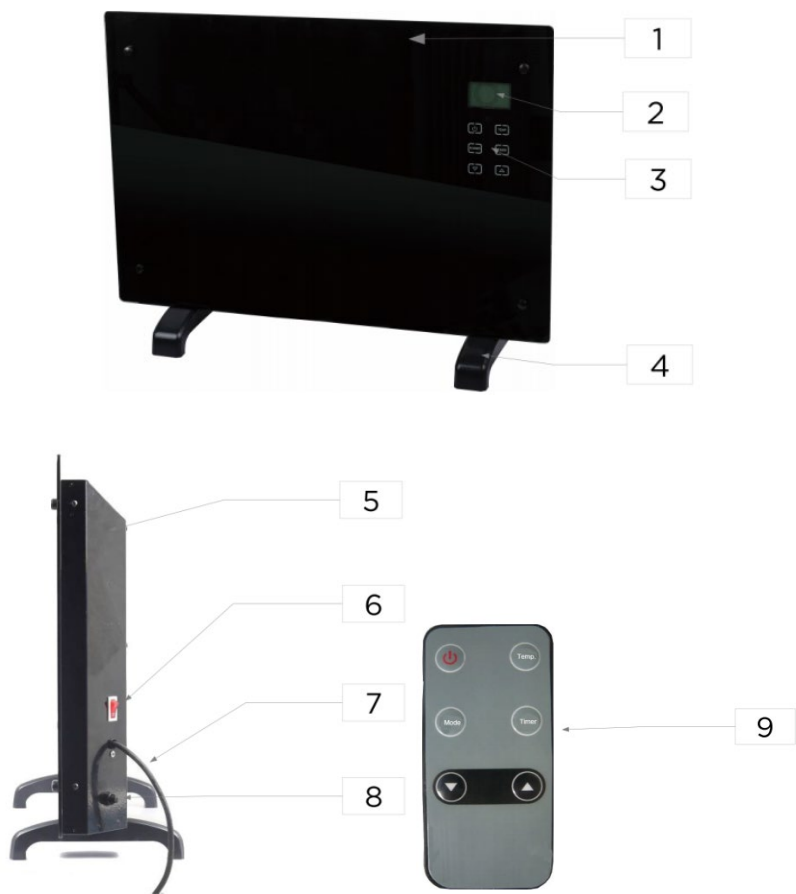

1. Decorative Glass	4. Feet	7. Power Cable
2. LCD Screen	5. Rear Cover	8. Sensor
3. Control Panel	6. Power Switch	9. Remote Control


ASSEMBLY

 Free-Standing

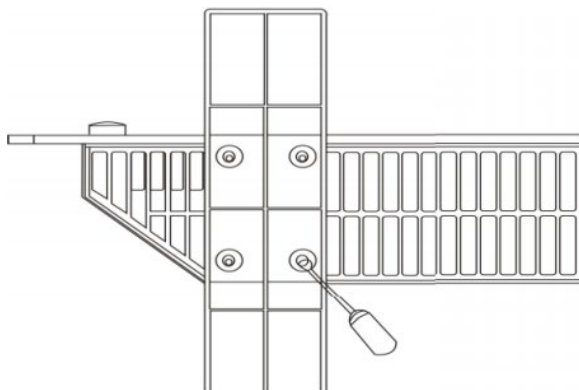


- Attach the two plastic feet to the bottom and use the provided screws to secure them. Each foot should be secured with 4 screws.
- Install the heater on a flat, stable surface.

 Wall Mounting

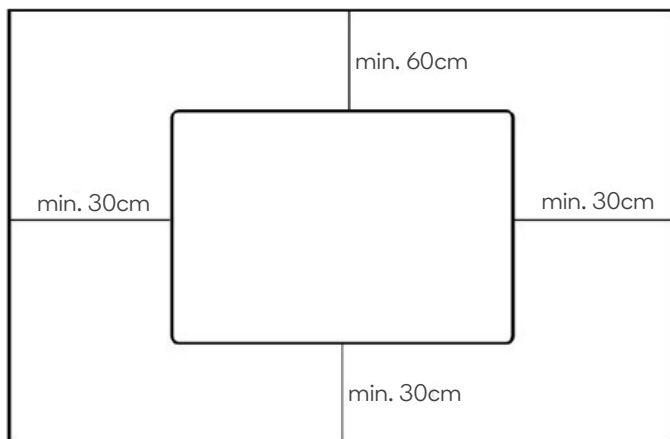


Installation location and important notes:

 
- Ensure airflow is not obstructed.
 - The wall mounting should be performed by a qualified person to avoid hazards.
 - Observe the minimum distances between the device and ceilings, ground and walls.
 - Ensure there are no cables or other pipelines behind the wall to avoid damage prior to drilling.
1. Remove the wall brackets and expansion screws from the box, then insert the screws into the wall so that they line up with the holes of the wall brackets:

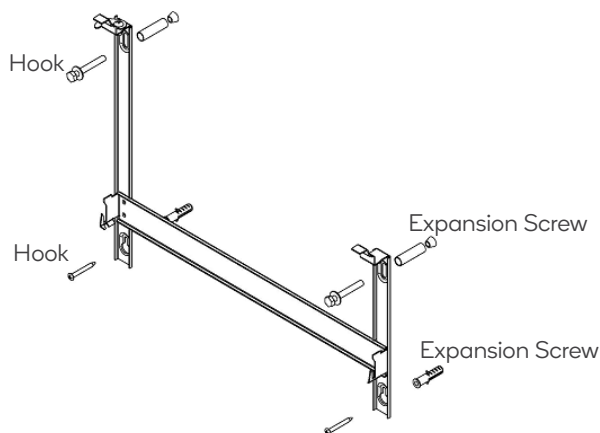

 2. Align the 4 holes in the back of the heater with the 4 hooks on the wall bracket and push it on, then slide them into the slots to click on:

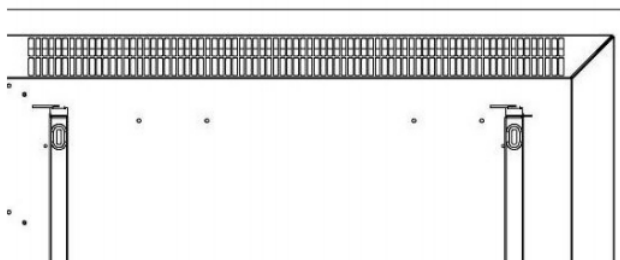

3. Attach the wall bracket lock piece onto the bracket with screws and slide the lock piece into the locking slot on the back of the heater. Tighten the screws:

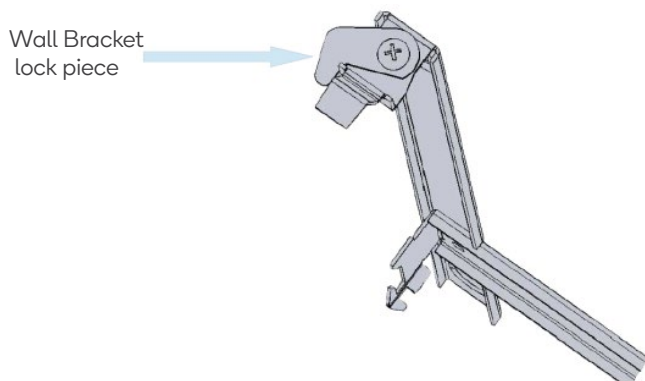 





- During installation, the heater must be kept a sufficiently safe distance from combustible materials/gases and away from water.





OPERATION


1. Connect the heater to a power socket, then turn on with the ON/OFF switch on the side panel.
2. Press the buttons on the operation panel or remote control to set the heating.

Setting	Mode
O	OFF (Stop)
I	1000W
II	2000W

3. Press the “” button on the heater and the machine will go into Standby Mode and Frost-Free mode

Press the power button to set to ECO mode, with “” displaying at Economic I power or alternately “” displaying at Comfort II power or Frost-free mode “”.

-  Flashing means the heater is in ECO mode
-  Flashing means the heater is at low power
-  Flashing means the heater is at high power
-  Flashing means the heater is in frost-free mode

Under heating status, the heating icon “” will appear on the LCD screen.
Under Frost-free status, the heating icon will disappear if the ambient temperature is higher than 5°C.

Setting Temperature

The temperature can only be set under Comfortable or Economical mode. Under ECO and Frost-free modes, the set temperature is locked to 18°C and 5°C respectively. Press the temperature button, then use the UP/DOWN buttons to set the temperature between 15°C to 50°C. The setting will be memorised and confirmed after 10 seconds.

- When the ambient temperature is equal to the preset temperature, the power will automatically switch from Comfortable mode to Economical mode.
- When the ambient temperature is 2°C higher than the preset temperature, the heater will stop heating.
- When the ambient temperature is 2°C lower than the preset temperature, the heater will switch to Comfortable mode again.

Note:

The set temperature must be set to a temperature higher than the ambient temperature; otherwise, the unit will not function.

Timer Setting

Press the Timer Button, then use the UP/DOWN buttons to set the timer from 0-24 hours. When the timer status is active, the "🕒" timer symbol will flash. The setting will be memorised and confirmed after 10 seconds.

- If the timer is set under Frost Free status, it will function to switch the heater ON.
- If the timer is set while the heater is running, it will function to switch the heater OFF.

For example, if you set the timer to 01:00 under Frost Free status, the heater will switch on after one hour. If you then set the timer to 01:00 while the heater is operating, it will switch off after one hour.

Note:

These functions may both be achieved using the remote control as well as the control panel.

SPECIFICATIONS

Rated Voltage	Frequency	Rated Power	Protective Class
230V	50/60HZ	2000W	1

MAINTENANCE

1. Always disconnect the heater and let it cool down completely before any maintenance.
2. Use a vacuum cleaner to remove dust and fluff from the grilles.
3. Clean the outside of the unit with a soft damp cloth, then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

Overheating Safety Device

The heater is fitted with a safety device to switch it off in the event of overheating. If the safety device has been triggered, please turn the heater off, unplug it and let it cool completely. Inspect for blockages of the air inlets or outlets, attempting to restart the heater after. If the heater fails to operate or the safety device switches the heater off again, contact the Kogan.com customer support team for further information.

Storage

1. Always disconnect the heater, allow it to cool and then clean it before storing it.
2. If you are not going to use the heater for an extended period of time, put the unit back into its original carton and store it in a dry, well ventilated location.
3. Do not place heavy items on top of the carton during storage as this may damage the unit.

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan