



**USER'S MANUAL**

**Air Cooler**

## WARNING

- Do not let the wind inlet be too close to the wall, curtain and so on, or it will block the air flow and affect the wind effect.
- When using it for the first time, please check if your voltage is in accord with the nameplate for the air cooler.
- Before use, please check if the power cord and plug are damaged. Do not make the power plug twisted and turned to avoid poor contact.
- If the power cord is damaged, it must be replaced by the manufacturer, or similarly qualified persons in order to cause a hazard.
- Do not cover the outlet, and keep the air fan away from the socket. You must choose the socket which it is up to more than 10A current, and do not use the same socket with other machines.
- When air cooler is working, absolutely forbid hand or foreign body inserting the network (specially pay attention to children).
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capability, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Please turn off the power before pulling out the plug. Do not pull the power cord and do pull the power plug in order to avoid a short-circuit, fire, electric shock.
- Do not pull the power plug by wet hand in order to avoid the risk of electric shock.
- Please pull the plug away from the socket when you do not use it .
- Please do not put the working air cooler on the declining position or unstable position.
- Please do not work the air cooler when it is outdoors, or around bath (or shower, or pool).
- At anytime, the water level display of the water tank must be less than "Max." While the water level display of the water tank must be more than "Min." when air cooler is with cooling (humidifying) function.
- After water tank is injected fair water, please do not lean (or bump) air cooler when removing air cooler.
- Please do not put anything on air cooler.
- The outlet and inlet of the air cooler must not be covered.

## Dear customer,

We thank you for purchasing our Air cooler and kindly ask you to read and save this instruction manual carefully.

## Function Control Panel



### 1. ON/OFF (Speed) button

- After plug the power cord, the buzzer responds a sound.
- Press the button of "LOW", air cooler is working with low speed.
- Press the button of "MID", air cooler is working with medium speed.
- Press the button of "HIGH", air cooler is working with high speed.

### 2. Cool button

- Press the button of "COOL", the wind will be cooled if you have added the ice box.

### 3. Swing button

- Press the button of "SWING", the blades will be left and right swing.

### 4. Timer button

- Press the button of "TIMER", set the time by pressing the timer button to select a desired timing level, the range is between 2-12 hours.

### 5. Mode button

- Press the button of "MODE", you can choose your desired wind mode as per the following sequence: Normal - Natural - Sleep.


## How to inject water in the water tank

Pull out the water tank from the bottom of the back (air cooler), and leak 1/3 of water tank while injecting fair water into it.

- Please note the display of water level when injecting water.
- The water level of water tank must be less than "Max." when injecting water.
- The water level of water tank must be more than "Min." when air cooler is with cooling (humidifying) function.
- The frozen ice boxes (or ices) are put into water tank when the user wants to get the cooler wind.

Warning:

The water level of water tank should be less than "Max." after ice boxes(or ices) is put water tank.

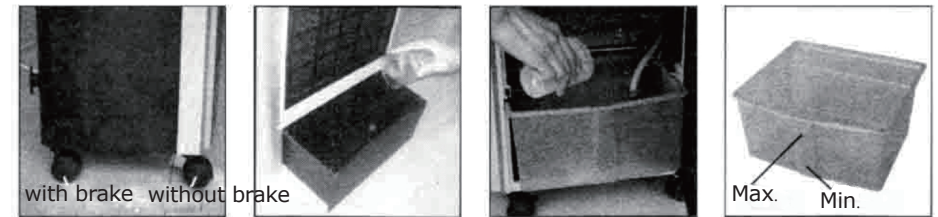


## How to use ice boxes


Ice box can keep cool and slowly absorb the heating from water while ice boxes can make the temperature of water in the water tank less than it of the surrounding, so Air cooler with frozen ice boxes can blow the cooler wind.

- Put ice boxes in fridge. After ice boxes are frozen successfully, take ice boxes out the fridge.
- Pull the water tank out, and put the frozen ice boxes into water tank.
- One-piece air cooler is with 2 ice boxes in order that the user can make them continuously.

## Component

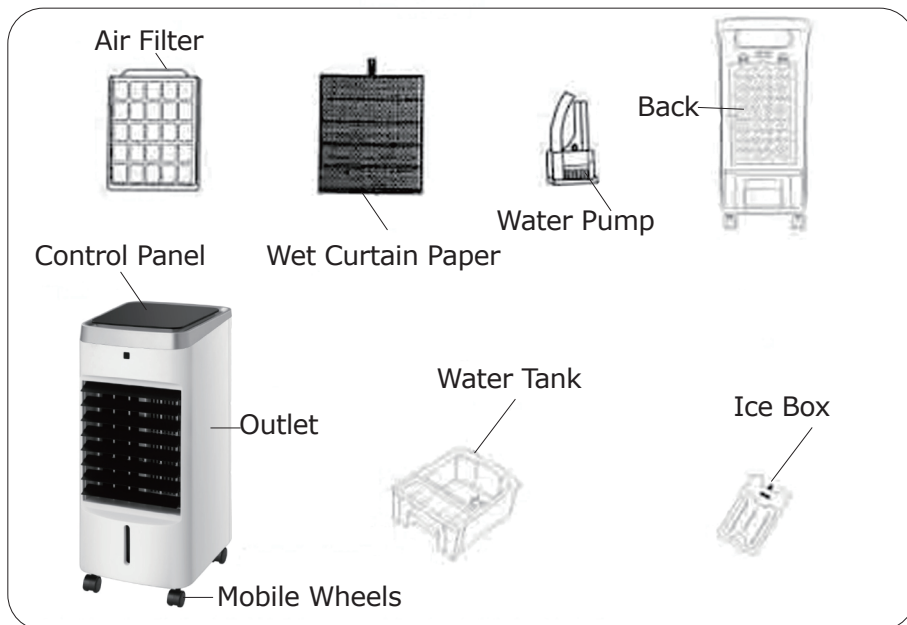

## Clean

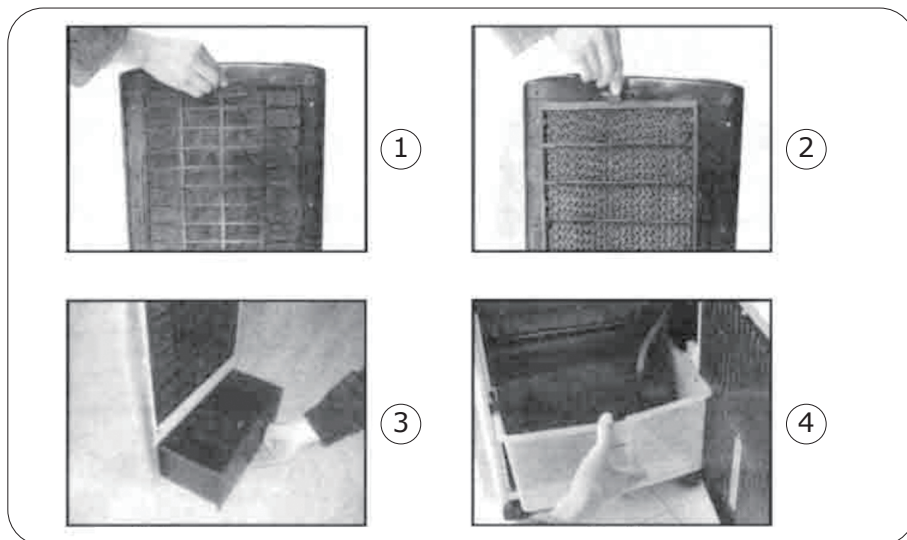

### • Clean air filter:

Pull off the plug, and pull the holder of air filter by hand while the air filter is took apart, and then clean air filter by neutral cleaner and soft brush, and then clean it by clean fair water, later take the air filter back into the air cooler.

### • Clean the wet curtain paper:

Pull off the plug, and take the air filter off, and take the wet curtain paper out of air cooler. And clean the wet curtain paper by fair water after cleaning it with cleaner and soft brush, later put back into the air cooler.

Important:

In order to avoid leak, wet curtain paper must be installed smoothly.

### • Clean water tank:

Pull off the plug, and take the water tank out while wiping off much scale in the water tank by the towel with little cleaner, and then clean water tank by fair water, and later put back into the air cooler.

### • Clean the housing:

Wipe off the housing by neutral cleaner and soft cloth.

### Important:

When cleaning the air cooler, the user must pull off the plug and cut off the power while any part of control panel cannot be into water.

