 




Clock Radio

 
with Wireless Charging
Model: QDCLRD

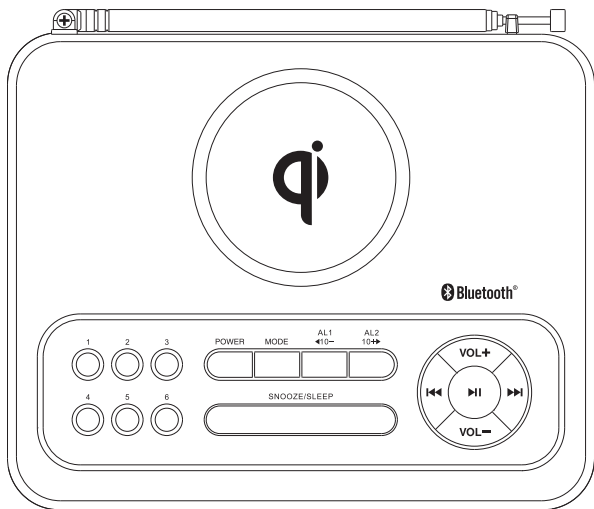 


INSTRUCTION MANUAL



CONTROL LOCATION

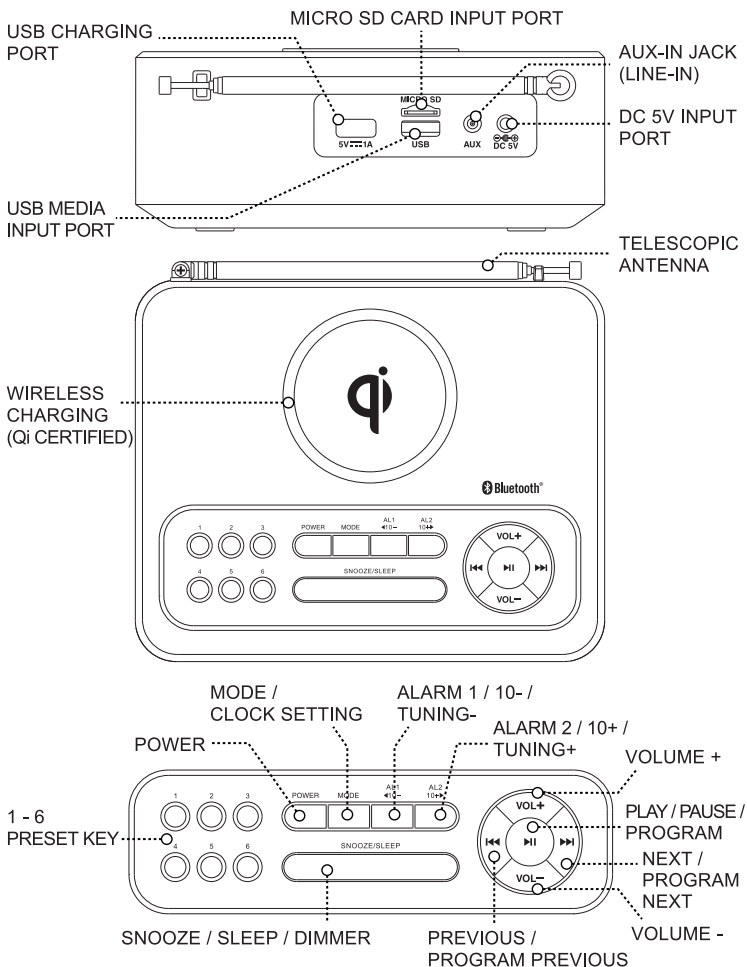

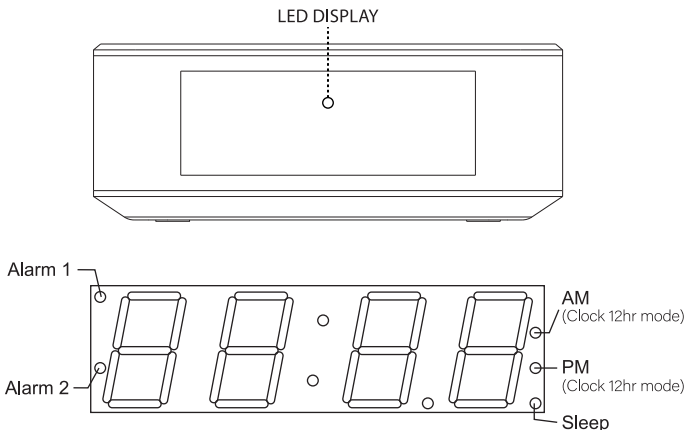

WARNING:

- Do NOT use in a hot, humid or corrosive environment.
- Do NOT place the wireless charger too close to magnetic stripes or chip cards (credit/debit card).
- Keep away from children. (This is not a toy)

OPERATING INSTRUCTION

AC/DC Adaptor Operation

Insert one end of the AC/DC 5V adaptor to the DC 5V Port on the back of the unit, and the other end to the power outlet. The unit will be automatically in standby mode when connecting to the power adaptor.

To disconnect the set from the power supply completely, unplug the power adaptor from the power outlet.

Notes

Warning: Before using the unit, check that the local mains supply is compatible with the unit. Do not plug or unplug the power cable when your hands are wet. When planning not to use the unit for long periods of time (i.e. vacation etc.) disconnect the plug from the wall outlet.

WIRELESS CHARGING

Put your Wireless Charging enabled smartphone on the WIRELESS CHARGER area. Wireless charging pairing process will automatically start, and the charging icon/indicator of smartphone will display once the charging starts. Reposition the smartphone on the WIRELESS CHARGER area if charging process does not start.

USING the USB CHARGING OUTPUT

The USB Charging provides 5V=1A charging current. Connect compatible USB charging cable to the device being charged and connect the end of cable to the USB charging output port of the clock radio.

SWITCH ON THE RADIO

1. Press **POWER** to switch on the radio.
2. Press **MODE** to select different play mode (FM / Bluetooth / USB / Micro SD Card / Aux).
3. To switch to standby mode, press **POWER** once.

Setting the Clock

Auto time calibrating

1. Press **POWER** to turn on the unit.
2. Press **MODE** to select FM play mode.
3. Select radio station with good signal reception.
4. Time calibration through RDS radio station might take up to 20 minutes to complete depending on the signal strength and availability of RDS radio station.

Manual Setting

1. During Standby Mode, press **MODE** for seconds to enter setup clock mode.
2. Adjust the 24H & 12H by pressing **PREVIOUS** or **NEXT**, and press **MODE** to confirm.
3. Adjust the hour by pressing **PREVIOUS** or **NEXT**, and press **MODE** to confirm.
4. Adjust the Minute by pressing **PREVIOUS** or **NEXT**, and press **MODE** to confirm.

Setting the Alarm

1. There are two groups of alarm settings, respectively AL1 and AL2.
2. During Standby Mode, press **AL1** or **AL2** for seconds to enter alarm setting.
3. When indicator AL1 flashed, adjust the alarm AL1 hour by press **PREVIOUS** or **NEXT**, and press **AL1** to confirm.
4. Adjust the alarm AL1 minute by press **PREVIOUS** or **NEXT**, and press **AL1** to confirm.
5. Adjust the alarm type (Buzzer / Radio / USB) by press **PREVIOUS** or **NEXT**, and press **AL1** to confirm.
6. Adjust the alarm volume by press **PREVIOUS** or **NEXT**, and press **AL1** to confirm.
7. Repeat the above step 3~5 for alarm AL2 setup. (Press **AL2** for confirm setting)
8. When the setting is over, both AL1 and AL2 are activated. The indicator AL1 and AL2 will light on.
9. Press AL1 or AL2 once and again to select the desired alarm mode. The AL1 or AL2 indicator will disappear while the alarm clock function shut off.

Notes: The alarm volume minimum is level five.

The alarm features a step-up volume increase to the volume level preset by the user when the Alarm goes off.

Snooze Function

1. When your alarm rings, you can press the **SNOOZE** to temporarily suspend the alarm. The alarm will ring again 9 minutes later. (The Snooze interval time is 9 minutes).
2. Alarm will continue until **POWER** is pressed.

Sleep Function

1. When listening to FM / BT / USB / Micro SD, hold the **SLEEP** to enter the sleep function menu. Once sleep time is displayed, press sleep button once to increase one preset sleep time level (OFF/ 15 / 30 / 45 / 60 / 75 / 90 minutes).
2. The indicator will light up at the bottom right of the clock once sleep mode is activated.
3. To turn off the radio at any time, press **POWER**, the indicator will be extinguished.

FM MODE

Manual Tuning

1. Press **POWER** to turn on the unit.
2. Press **MODE** to select the FM Radio function.
3. Press **TUNING-** or **TUNING+** briefly, once or more until the right frequency is found.

Automatic Tuning

1. Press and hold **TUNING-** or **TUNING+** until the display frequency starts to run.
2. When a station of sufficient strength has been found, tuning will stop, or you can stop automatic tuning by pressing **TUNING-** or **TUNING+** again.

Presets

You can store the frequencies of up to 50 radio stations in the memory. A stored frequency can be erased from the memory by storing another frequency in its place.

Automatic Preset

1. Press and hold **PLAY PAUSE** until the display frequency starts to run. The automatic search for FM full frequency bands will clear setting the station frequency.

Manual Preset

1. Tune to your desired station.
2. Press **PLAY PAUSE** once to enter programming mode.
3. Press **TUNING+** or **TUNING-** to select the desired memory location.
4. Press **PLAY PAUSE** once again to confirm the selected station.

Manual Preset for Preset 1 - 6 Keys

1. Tune to your desired station.
2. Hold **1 - 6 PRESET KEY** until the desired memory location flashed.

To listen to a preset station:

1. Press **1 - 6 PRESET KEY** once.
2. Or press the **PROGRAM PREVIOUS** or **PROGRAM NEXT** to select your desired station.

To improve reception:

- For FM, pull out the telescopic antenna. To improve FM Reception, incline and turn the antenna. Reduce its length if the FM signal is too strong (very close to a transmitter).

BLUETOOTH FUNCTION

1. Press **POWER** to turn on the unit.
2. Press **MODE** to select the Bluetooth function.
3. Activate the Bluetooth function in your Bluetooth device.
4. Select **"QDCLRD"** on your Bluetooth device for pairing. The speaker will beep twice sound to confirm if successfully connected with your Bluetooth device.
5. Start the music playing on your Bluetooth device.
6. After connected, you can control the playback, pause, next, previous function by both your Bluetooth device or the unit directly.
7. Press and hold **PLAY PAUSE** button to disconnect the pairing of Bluetooth function. A beep sound will play to confirm the disconnection of the pairing.

Tips:

The device will be disconnected when the device is moved beyond the operational range. If you want to reconnect the device to the unit, place it within the operational range.

Note:

The operational range between this unit and a Bluetooth device is approximately 10 meters. Any obstacle between this unit and a Bluetooth device can reduce the operational range.

Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device. Compatibility with all Bluetooth devices is not guaranteed.

Keep this unit away from any other electronic device that may cause interference.

USB, MICRO SD CARD PLAYBACK

Able to decode and playback all MP3 files which stored in the memory media with USB media input port, Micro SD card input port.

- 1.Insert either the USB Flash Drive or MICRO SD Card for the playback of the storage media. (MICRO SD Card is required to insert with the metal pins face down)
- 2.Press **POWER** to turn on the unit.
- 3.Press **MODE** to select either the USB mode or SD mode.
- 4.The system will automatically start playing the MP3 files on the selected media source.

Button	Functions
▶II	PLAY / PAUSE
◀◀ / ▶▶	PREVIOUS / NEXT
◀10- / 10+▶	Skip BACK / FORWARD 10 tracks

Wrongly connecting the USB Storage Media or MICRO SD Card upside down could damage the unit or the USB Storage Media or MICRO SD Card. A locked MICRO SD Card cannot detected or used for playback.

LINE INPUT

- 1.Connect the AUX-IN cable from the output jack of your Personal Player such as portable MP3 player to the AUX-IN jack of the unit.
- 2.Turn on your Personal Player to ready for playing. Press **POWER** to turn on the unit. Press **MODE** to select the LINE input function.

Volume

Adjust the sound with the controls **VOLUME +** or **VOLUME -**.

Sound volume level can be affected by the volume control of the audio source.

Dimmer

Press **DIMMER** to cycle between the three levels of brightness for the LED display.

SPECIFICATIONS

Model:	QDCLRD
Officeworks Product Code:	QUODOCLKRAD
Bluetooth Version:	5.0
AC Adaptor Operate:	DC 5V 2A (Input 100-240V 50/60Hz)
Speaker Output:	3W
Wireless Charging:	Qi (For phones and other devices enabled with Qi wireless charging technology)
Wireless Power Output:	5.0W

PRECAUTIONS:

1. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.

For instances, never place the unit in bathing areas nor around stoves and radiators.

2. If you find the unit is not working properly, please take it to your nearest services center. Do not attempt to repair by yourself.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.

PRODUCT WARRANTY – VALID FOR AUSTRALIAN CUSTOMERS ONLY

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as specified during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product;
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competition & Consumer Act 2010. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Officeworks Ltd. is under license.

OFFICEWORKS LTD
236-262 EAST BOUNDARY ROAD
EAST BENTLEIGH VIC 3165 AUSTRALIA