



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Rad		TV/Radio /
	0		0
	TV / Sat		Display / Media
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	Menu		Menu / Home

Original	Replacement	Original	Replacement
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Group		Smart / List
	Page+		Shift + CH+ /
	Page+		>>I / Preset+
	Pause		Pause / Step / Freeze
	Color		Picture / Format
	Page-		Shift + CH- /
	Page-		I<< / Preset-





Original	Replacement
 UHF	 AV / Input / RDS
 Red / Recall	 Red / Netflix / Search
 Red / Recall	 Back / Return
 Green / Audio	 Green / APP / Repeat
 Green / Audio	 Audio / Lang I/II
 Yellow / Text	 Yellow / YouTube / Repeat
 Yellow / Text	 Text / Goto
 Blue	 Blue / Prime Video / Random
 RGB / YPbPr	 Setup / OPT /
 Subtitle	 Subtitle / EQ
 Wide	 Zoom / Size

Original	Replacement

