




CTSFA023.2

Steering Wheel Control Interface for Fiat Vehicles

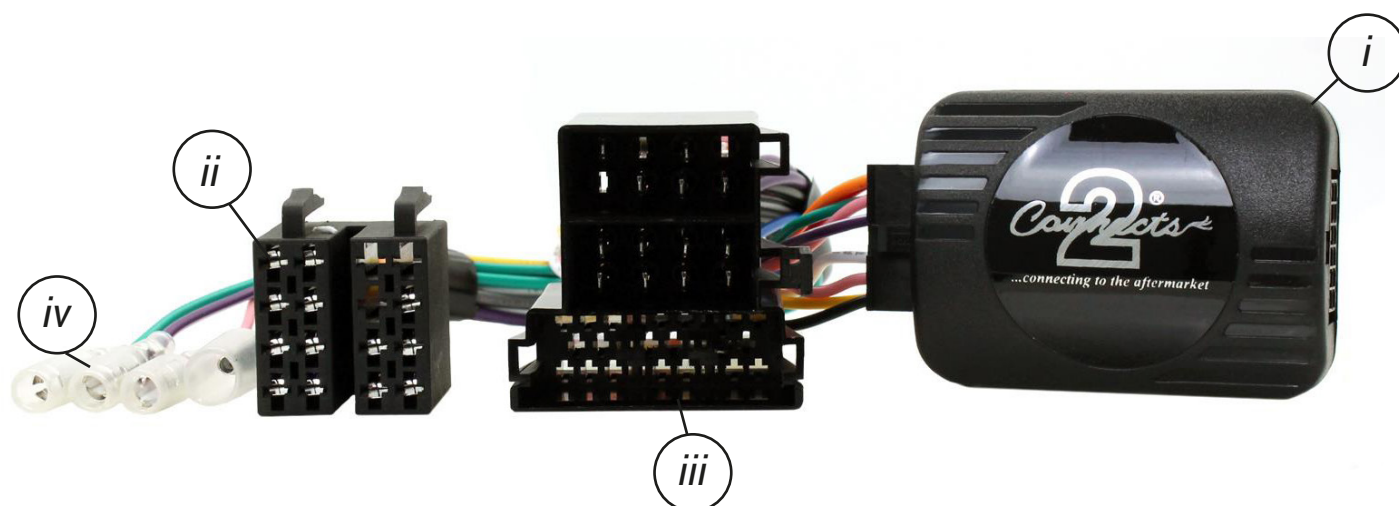

- i. Interface Box
- ii. Male ISO Connector (16 Pin)
- iii. Mini ISO Connector
- iv. Flying Wires

Designed and
Engineered
in the UK. 

APPLICATION

Note: Application data is subject to change at any time

Fiat Panda (312/319)

2012 - 2020

FEATURES

- **Retains Factory Steering Wheel Control Functionality** *(if vehicle is equipped)*
- **Retains Phone Button Functionality** *(if vehicle is equipped)*
- **Provides Park Brake, Speed Pulse, Reverse Gear & Amp Remote Outputs**
- **Updateable via USB** *(contact supplier for more information)*

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRODUCT INFORMATION

CTSFA023.2

The **CTSFA023.2** is a CAN-Bus wiring harness and interface for Fiat Panda vehicles. This interface aids in the retention of key steering wheel controls when upgrading to an aftermarket stereo. It also retains phone button functionality, and provides outputs for park brake, speed pulse, reverse and amp remote (if applicable).

WIRING KEY

IN WIRING HARNESS

Purple	Right Rear Speaker +
Purple/Black	Right Rear Speaker -
Green	Left Rear Speaker +
Green/Black	Left Rear Speaker -
Grey	Right Front Speaker +
Grey/Black	Right Front Speaker -
White	Left Front Speaker +
White/Black	Left Front Speaker -


Yellow	Permanent 12V
Black	Ground
Red	Ignition 12V
Orange	Illumination

ADDITIONAL CONNECTIONS

Pink	Speed Pulse
Lt. Green	Park Brake
Purple/White	Reverse Gear
Blue	Amp Remote

STEERING WHEEL CONTROL FUNCTIONALITY

The following diagram, though based on careful research, is an example only
Individual steering wheel control configurations may differ.

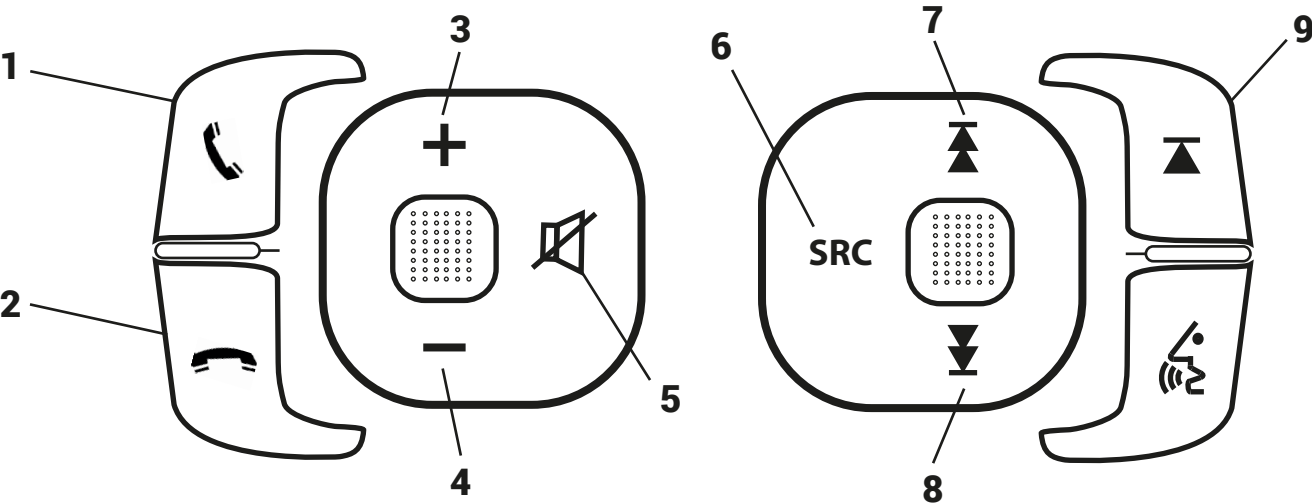

- | | |
|------------------------------------|--------------------------------|
| 1. Pick Up | 6. Source (Scroll Wheel Press) |
| 2. Hang Up | 7. Track + (Scroll Wheel Up) |
| 3. Volume + (Scroll Wheel Up) | 8. Track - (Scroll Wheel Down) |
| 4. Volume - (Scroll Wheel Down) | 9. Preset + |
| 5. Stereo Off (Scroll Wheel Press) | |

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

INSTALLATION GUIDE

See wiring diagram on Pg.4 for more information

Before installing the interface, the factory stereo must be removed and disconnected. To do this, please consult the vehicle owner's manual/handbook or contact a fitting professional.

A stereo connection (patch) lead is also required for the installation of this interface (supplied separately). Please ensure that you have the correct lead before proceeding. For universal patch leads, prepare the wiring loops in accordance with the instruction manual supplied with the product before installation.

1. Connect the 12 Pin connector from the stereo connection (patch) lead to the interface box
2. Connect the opposite end of the stereo connection (patch) lead to the steering wheel control input on the back of the aftermarket stereo

NOTE: This may be a 3.5mm jack connector or a wired input depending on the brand of aftermarket stereo being fitted. Please consult the aftermarket stereo installation manual for further information on where to make the connection

IMPORTANT: THIS STEP MUST BE COMPLETED BEFORE CONNECTING POWER TO THE INTERFACE. FAILURE TO DO SO MAY RESULT IN A LACK OF FUNCTIONALITY AND THE NEED TO REINSTALL THE PRODUCT

3. Connect the 14 Pin connector from the supplied wiring loom to the interface box
4. Connect the male power/speaker ISO connector to the female power/speaker ISO connector from the aftermarket stereo.

NOTE: For aftermarket stereos which do not have an ISO connector, please see "Wiring Key" on Pg.2 for information on which wires to connect. Some interfaces may also have additional 'flying' wires which can be connected to the vehicle to support various features ie. parking brake trigger, reverse gear and speed pulse. Details of these can be found under 'Additional Connections'.

5. Connect the Mini ISO connector on the supplied harness to the male equivalent connector from the vehicle.
6. Test stereo and steering wheel control functionality for correct operation before reassembling the vehicle dashboard. If steering wheel control functions are unresponsive, please uninstall the interface and wiring and reinstall carefully in accordance with the above steps.

***For further help, please contact and fill out a support ticket with the full details of your issue at:
support.connects2.com/tickets/technical***

WIRING DIAGRAM

