

INSIGNIA™

QUICK SETUP GUIDE


19"/24" 720p 60Hz LED TV

NS-19D310NA21 / NS-24D310NA21

ACCESSORIES
Remote control and two AAA batteries



TV stands

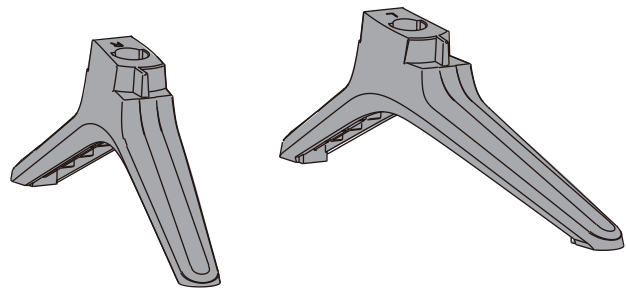

M3 screws (14 mm length) (2 pcs.)




1 INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

STANDS

- 1 Align the TV stand screw holes with the holes on your TV's bottom.
- 2 Use a Phillips screwdriver and the two provided screws to secure the stands to your TV.

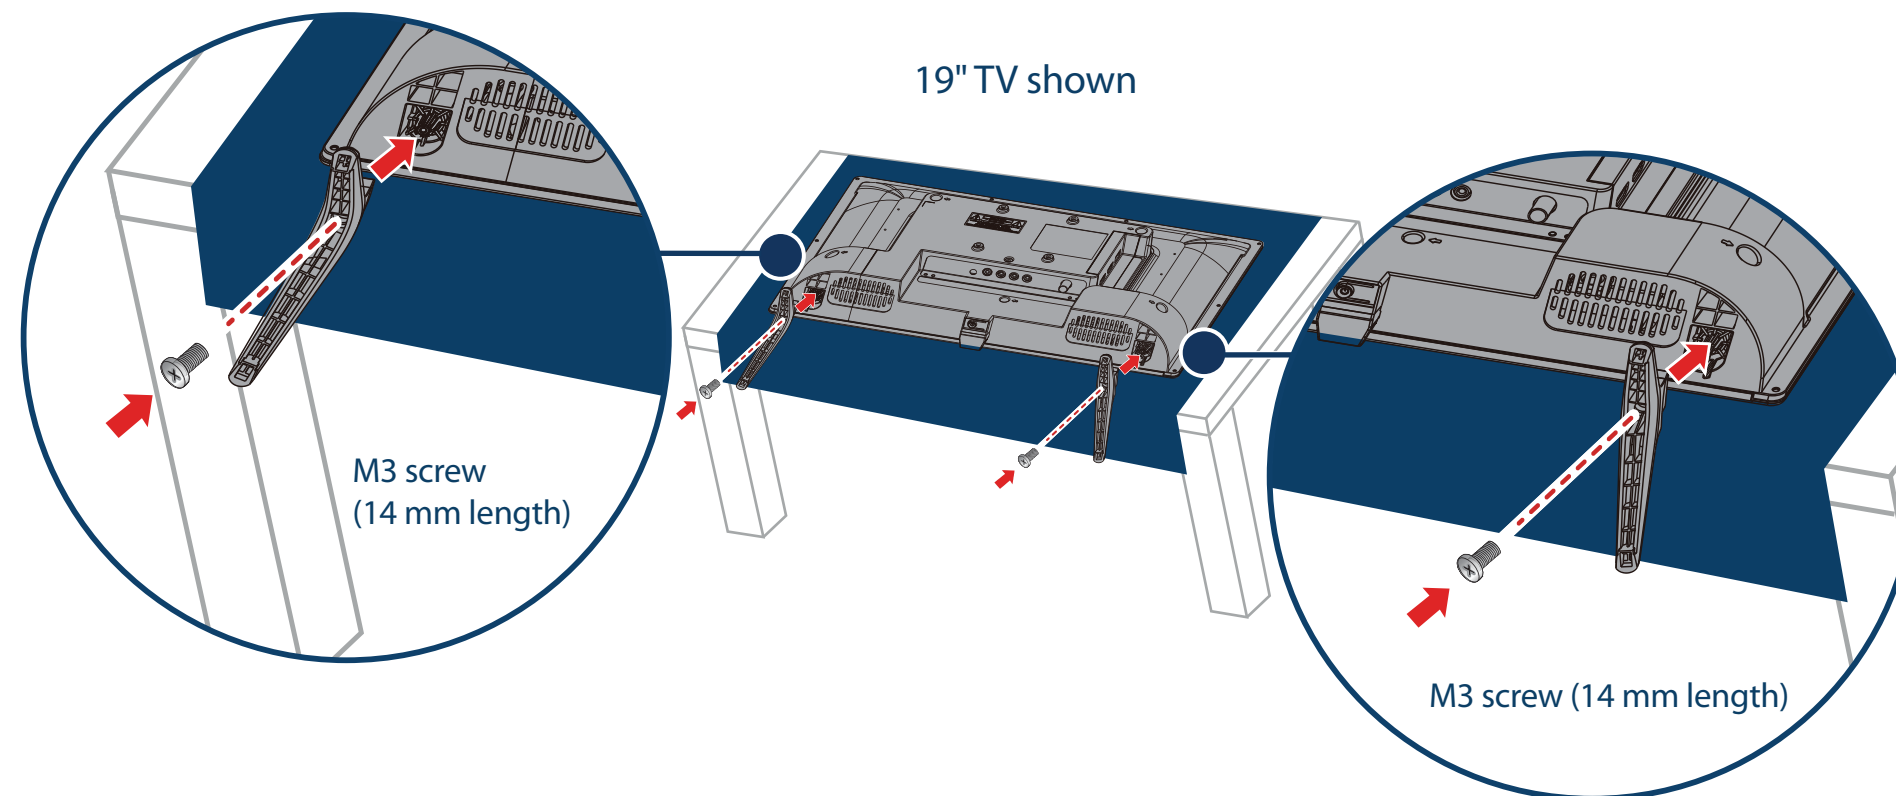


WALL MOUNT

Before you mount your TV, make sure that:

- You remove the stands.
 - The wall-mount bracket supports the weight of your TV.
- See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

Note: Wall-mount screws are not included.

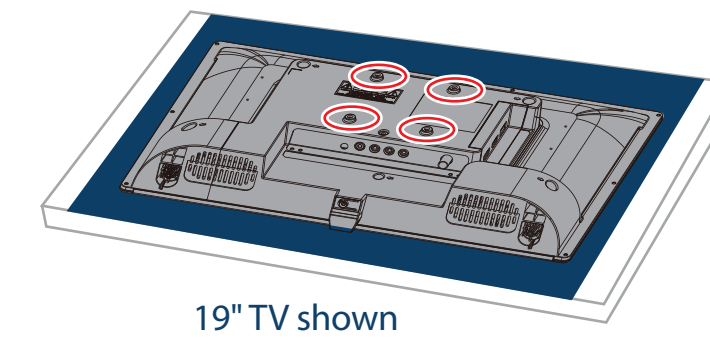

- 19" VESA Mounting Pattern**
75 × 75 mm
Screws: type M4, 10 mm minimum length depending on the wall-mount.
- 24" VESA Mounting Pattern**
100 × 100 mm
Screws: type M4, 10 mm minimum length depending on the wall-mount.

FEATURES




19" 24"



19" TV shown




Power/Input button
Press to turn your TV on or off manually. When your TV is on, a short press changes inputs and a long press turns off your TV.

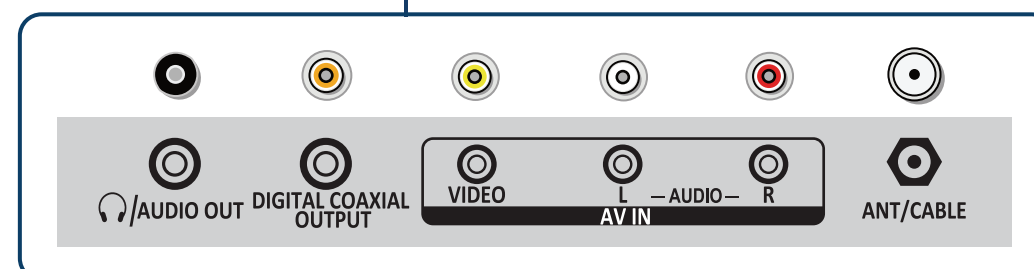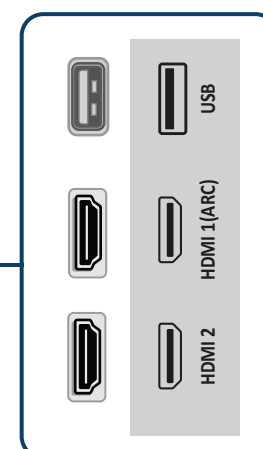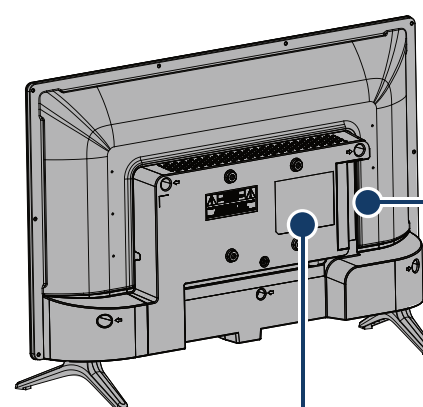

Note: Images do not necessarily represent the exact design of your television.

2 MAKING CONNECTIONS

 HDMI (best video quality)




HDMI OUT



DIGITAL COAXIAL OUTPUT




/AUDIO OUT

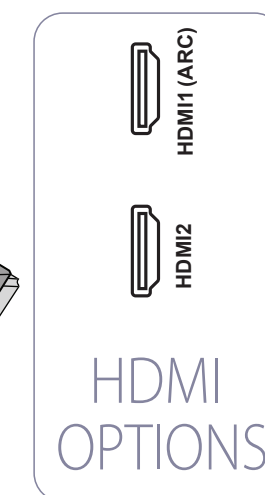


HDMI 1 (ARC)
HDMI 2
HDMI OPTIONS

DIGITAL AUDIO

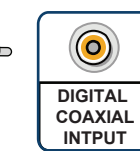

DIGITAL COAXIAL INPUT

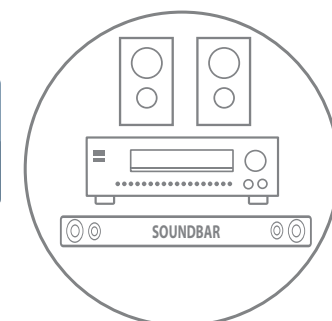


You can use the **DIGITAL COAXIAL OUTPUT** jack or the **HDMI 1 (ARC)** jack.
Note: If you need to change the digital audio format: From your TV's *Audio* menu, select **Audio Format/Audio Delay**, then press **ENTER**. Set **Audio Format** to **PCM**.


ANALOG AUDIO




L R AUDIO IN

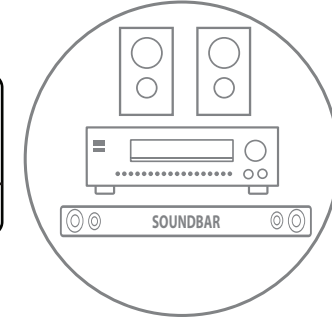

AV (good video quality)

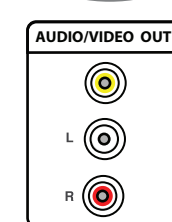

AUDIO/VIDEO OUT
L R

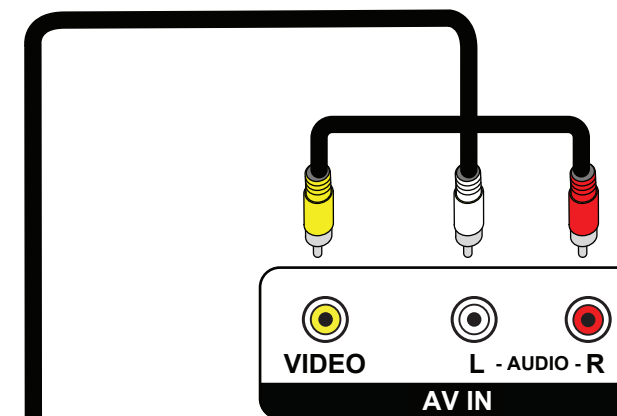


VIDEO L-AUDIO-R
AV IN



ANT/CABLE

Coaxial (good video quality)

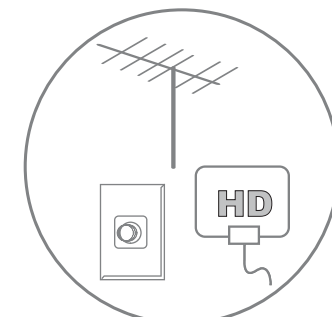


Connect an antenna to access live over-the-air TV.

STOP


Before using your new product, please read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

3 TURNING ON YOUR TV

1 Plug the power cord into a power outlet.

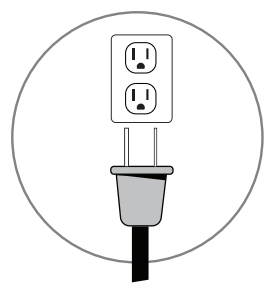

2 Remove the remote control cover and install the batteries.

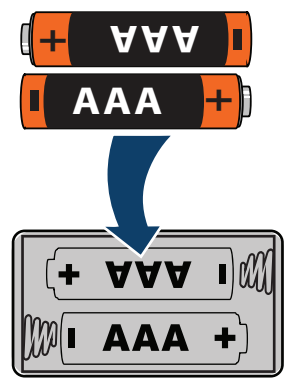

3 Press  on your remote .


4 Follow the on-screen instructions.



FIND YOUR USER GUIDE ONLINE

- 1 Go to www.insigniaproducts.com.
- 2 Use the search bar to find **NS-19D310NA21** or **NS-24D310NA21**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

USING YOUR REMOTE CONTROL

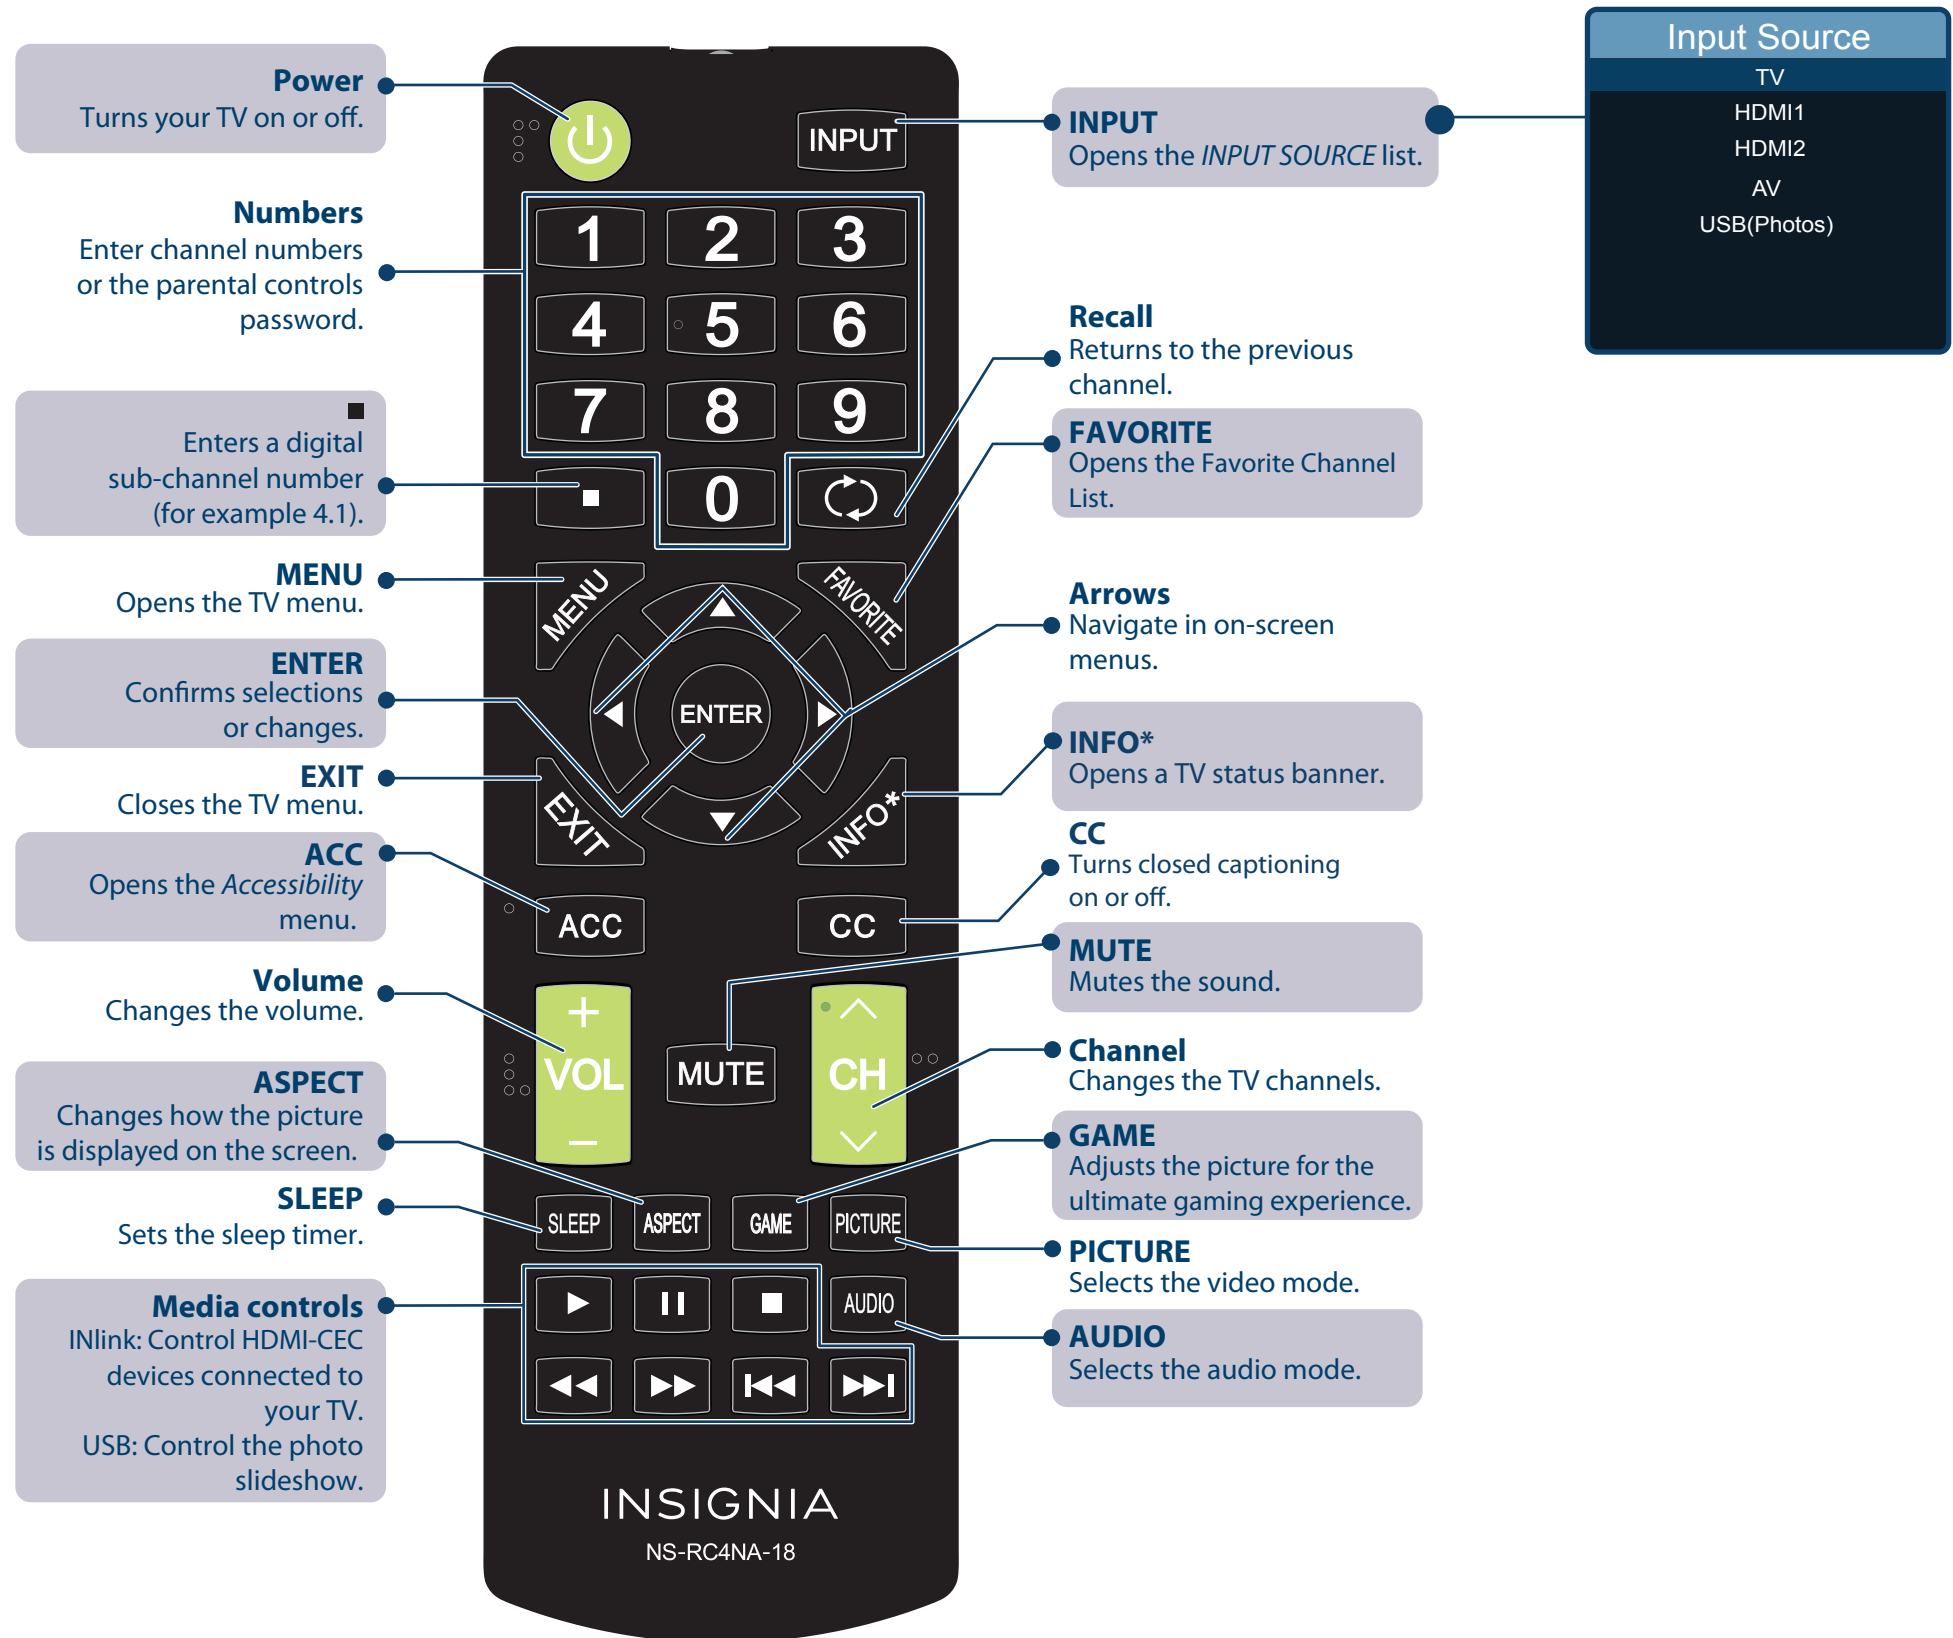

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you want to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
AT&T U-verse	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
Cox	1326, 1463
DirecTV	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
Dish Network	834, 720, 222, 898, 365, 777, 754
RCA	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Rogers	0463, 1326, 2049, 1785, 1780, 1423, 1963
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Verizon	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com
For customer service, call:
1-877-467-4289 (U.S./Canada)
01-800-926-3000 (México)



For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS, Inc. DTS, the Symbol, DTS and the Symbol together, and TruSurround are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries.
© DTS, Inc. All Rights Reserved.

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

Mexico:

01-800-926-3000
Best Buy Imports S. DE R.L. DE C.V.
Avenida Santa Fe No. 440 Piso 2 Ofna 202 Y 203 P3 Y P4
Colonia Santa Fe Cuajimalpa, C.P. 05348,
Delegación Cuajimalpa De Morelos, México,
Ciudad De México

©2020 Best Buy. All rights reserved.