



Original	Recharge	Original	Recharge
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 Left	 Left
 Pause/ Cancel	 Pause / Step / Freeze	 Enter	 OK
 Stop/ Hold	 Stop / Hold	 Right	 Right
 Rec	 Rec / Rec Mode	 Exit	 Exit / Cancel / Clear
 <</ Index	 << / Tune-	 Down	 Down
 >>	 >> / Tune+	 Vol +	 Vol +
 I <</ Sub. PG	 I << / Preset-	 Recl ist	 Smart / List
 >>/ Reveal	 >>/ Preset+	 CH+	 CH+ / Page+
 Subtitle	 Subtitle / EQ	 Vol -	 Vol -
 Aspect	 Picture / Format	 Display	 Display / Media
 Size	 Zoom / Size	 CH-	 CH- / Page-
 Tv/ Radio	 TV/ Radio /	 1	 1
 DTV/ ATV	 Set up / OPT /	 2	 2
 TTX	 Text / Got o	 3	 3
 Source	 AV / Input / RDS	 4	 4





Original	Recharge
5	5
6	6
7	7
8	8
9	9
GUIDE	Gui de / EPG / -/-
0	0
FAV	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
MTS	D. Menu / Top

Original	Recharge

