



Original	Recharge	Original	Recharge
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 Left	 Left
 Pause/ Cancel	 Pause / Step / Freeze	 Enter	 OK
 Stop/ Hold	 Stop / Hold	 Right	 Right
 Rec	 Rec / Rec Mode	 Exit	 Exit / Cancel / Clear
 <</ Index	 << / Tune-	 Down	 Down
 >>	 >> / Tune+	 Vol +	 Vol +
 I <</ Sub. PG	 I << / Preset-	 Recl list	 Smart / List
 >>I / Reveal	 >>I / Preset+	 CH+	 CH+ / Page+
 Subtitle	 Subtitle / EQ	 Vol -	 Vol -
 Aspect	 Pi ct ure / Format	 Di spl ay	 Di spl ay / Medi a
 Si ze	 Zoom / Si ze	 CH-	 CH- / Page-
 Tv/ Radi o	 TV/ Radi o /	 1	 1
 DTV/ ATV	 Set up / OPT /	 2	 2
 TTX	 Text / Got o	 3	 3
 Sour ce	 AV / Input / RDS	 4	 4





Original	Recharge	Original	Recharge
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Gui de	 Gui de / EPG / -/-		
 0	 0		
 FAV	 Fav / Marker / PC		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 MTS	 D. Menu / Top		

