# L1 LASER GNSS RECEIVER

Dear Users.

instruction in this guide.

also be released on it.

About SingularXYZ®

+86-21-60835489

+86-21-60835497

www.singularxyz.com

singularxyz@singularxyz.com

(i) Floor 2, Building A, No. 599 Gaojing Road, 201702 Shanghai, China

Thank you for choosing SingularXYZ L1 Laser GNSS Receiver. We recommend

Please kindly refer to the following steps to get started, each step has detailed

If you want to know further operations and details of L1, please refer to the user

manual (contact support@singularxyz.com). The latest upgrades and news will

SingularXYZ Intelligent Technology Ltd. is focused on high precision GNSS PNT

(Positioning, Navigation & Timing) technology, extending its coverage to horizontal

and vertical industries, which mainly include geospatial information, precision

stable and professional products, solutions and service. We are committed to

popularizing precision and intelligence into all aspects of people's lives,

contributing to building a digital, smart and efficient open society.

agriculture, machine control, robotics, IoT and etc., providing users with reliable,

that you spend some time reading this Quick Start Guide in order to fully

understand this product and get started easily.

Step 1: Unbox and check the package content.

Step 3: Select and apply the work mode you need.

Step 4: Initialize the IMU and start survey tasks.

Step 2: Turn on the receiver and connect to related products.

Singular XYZ®

# PACKAGE LIST

In addition to this Quick Start Guide, the following content is also provided with your package. If any of these is missing, please contact your SingularXYZ distribution partner.

INTRODUCTION

features to empower your tasks.

times every 100ms. N- Num of tracking satellites.

Power Button: Long press

Laser Receiver Port

to turn on/off the receiver.

Receiver Back

Satellite Indicator: Flash N

Front Panel

To make surveying smarter, SingularXYZ has added a precise laser module to the

While shrinking the device to the palm size, L1 provides an advanced GNSS

engine, non-contact laser surveying, 60° tilt IMU, 15km enhanced UHF, and rich

Correction Data Indicator:

Flash when TX/RX correction

Power Indicator: Red light

is on when the receiver is


flashes when charging and

stays on when fully charged.

turned on. Green light

Laser Emission Port

L1 Laser GNSS receiver, achieving deep fusion of multiple sensors.

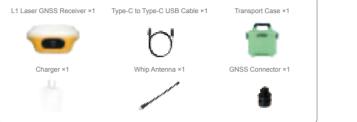


## Options For Rover




 
#### Standard



f J X in ▶ ⊙

@SingularXYZ-Geospatial



#### Options For Base

# INTRODUCTION

#### Receiver Interfaces



#### ⚠ Important Notice:

If the receiver is not used for an extended period, it is recommended to charge it every three months to prevent potential damage to the lithium battery cells.

# WARRANTY CARD

If you meet any issues during usage, please contact SingularXYZ support team or your local SingularXYZ distributor partner for supporting and debugging first.

Serial Number:  Date of Shipment:  Customer Name:
·
Customer Name:
Address:
Address:

To request warranty service, please contact your local SingularXYZ distributor or our support team at:

Support.SingularXYZ

# Quick Start Guide

# RELATED SOFTWARE



# Field Surveying Software

- Full Work Modes Support
- Various Survey & Stakeout Methods
- Bluetooth & Wi-Fi Interaction
- Abundant Data Formats
- Visual & Laser Survey Support
- o GNSS Receiver & Total Station



# Static Data Covert Software

- Converting binary XYZ data to standard RINEX data
- Flexible station and antenna type settings
- Full-constellation and frequency supported

 


## Post-processing Software

SingularXYZ post-processing software is a desktop software that supports multi-constellation processing and standard data format, delivering high precision positioning results in both static and kinematic post-processing.



To obtain the software installation package, please contact SingularXYZ support team.



# **HOW TO GET STARTED?**

In order to start your work fluently, please follow the workflow as below or directly scan the QR codes to watch the field software tutorials.

#### Method 1 - RTK Surveying

#### 1.1 Create a project





#### 1.3 Setup work modes

PDA CORS Work Mode





#### 1.4 Start Surveying

#### 1.4.1 Tilt Surveying & IMU Initialization

o L1 is in an open area and in a stable fixed status.

#### 1.2 Connect the device



Internal Radio Work Mode





The L1 Laser GNSS Receiver has a built-in IMU module that supports tilt surveying up to 60°. Before start tilt survey, make sure:

o Enter the actual pole height in the software

Go to Survey >> Point Survey, click to turn on tilt function, follow the prompt in the software to shake the pole and finish initialization.

## 1.4.3 Pole Surveying

Date for some ball

Before start laser surveying, make sure the tilt IMU function is turned on. Go to

Survey >> Point Survey, click of to turn on laser function and start surveying.

Aim at the target point via

surveying accuracy.

laser and click survey button.

It is recommended to use a bipod to assist laser

aiming to reduce human hand shaking and improve

Tips:

Please keep the bottom tip

point throughout the whole

of the pole at the same

initialization process.

and faith to complete

1.4.2 Laser Surveying

ment to the control

Telephone I



Learn more about SingularPad Tutorials

## Method 2 - Static Surveying

#### 2.1 Static Data Recording

Refer to 1.2 to connect L1 with SingularPad, then go to Device >> Static Record. You can set record Interval, Observation Time and Data Format (binary \*.xyz or RINEX) according to your needs.

Click Start to start static surveying, the data will be recorded in the receiver storage.



#### 2.2 Static Data Download

#### 2.2.1 - USB download:

Connect Orion ONE to PC via USB Type-C cable, copy the static files to your PC.

#### 2.2.2 - Web UI download:

- Connect PC or mobile devices to L1's WiFi (Name: SN of L1, Password: 12345678)
- o Open browser and enter the L1 web page via IP 192.168.10.12 (Username: admin, Password: admin)
- Go to Work Management >> File Download. select the corresponding record name, file type and date to filter and download the static data.



#### CONTACT US

For more technical questions please refer to the Orion ONE User Manual or contact SingularXYZ support team. You can scan the following QR code to access to SingularXYZ Product User Manual folder and download the Orion ONE User Manual



www.singularxyz.com



support@singularxyz.com Support.SingularXYZ







User Manual Folder Official Website

## What is covered by this Warranty

LIMITED WARRANTY NOTICE

- 1. SingularXYZ warrants that the Products (GNSS receivers, data collectors & external radios) are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period (defined below).
- 2. The Warranty is provided for a period of: twelve (12) months from the date of the original shipment of the Product ("Warranty Period")

### What SingularXYZ will do in the event of a Warranty claim

- 3. The repaired Product or part or the replacement shall be free from defect in materials and workmanship.
- 4. The consumer shall not be charged for the repair or replacement of a defective Product during the Warranty Period. All replaced defective Product, parts, boards or equipment shall become the property of SingularXYZ.

#### What is not covered by the Warranty

- 5. This Warranty does not cover defects and damage resulting from:
- a) Normal wear, tear and scratches of the equipment or otherwise due to the normal aging of the
- b) The Product being used other than in a normal and customary manner or outside of use permitted under the Product's user manual.
- c) Any disassembly, repair, alteration or modifications carried out by anyone other than SingularXYZ or an Authorised Service Center.
- d) Misuse, abuse, negligence, force majeure or an accident howsoever caused.
- e) Improper testing, operation, maintenance, installation, or any alteration or modification of the Product. f) Spillage of food or liquids, corrosion, rust or the use of wrong voltage.
- 6. This Warranty will not be available: a) if you are not the first purchaser who legally acquired the Products from SingularXYZ or Authorised distributor partners; or, b) without any proof of purchase.

#### Your responsibilities

- 7. The consumer will be required to provide the original purchase receipt or other information requested or required by applicable legislation in respect of the date and place of purchase. In the event that such information is not presented or if it is incomplete or illegible, SingularXYZ reserves the right to refuse providing the above service in respect of the Warranty claim.
- 8. Before delivering your Product to SingularXYZ or an Authorised Service Center for service under this Warranty, you should make a back up copy of the contents of your Product and remove all personal information and disable all security passwords.