 


Cirrus / Mistral

User Instructions



 
Quick Reference Guide

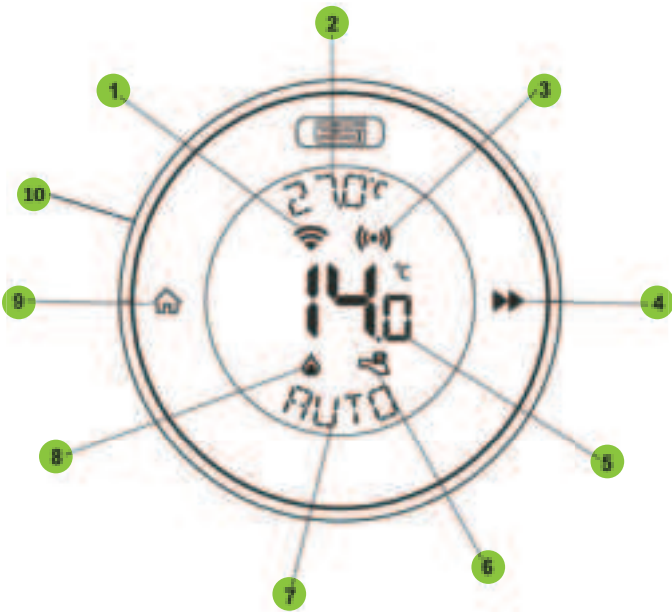

- 1. Wi-Fi Status Indicator
- 2. SET Temperature
- 3. RF Status Indicator
- 4. NEXT Button
- 5. Room Temperature & MODE Button
- 6. Hot Water ON Indicator (MISTRAL ONLY)
- 7. Current Heating Mode
- 8. Heating ON Indicator
- 9. HOME Button
- 10. Dial

Setting The Time & Date

If your thermostat is not connected to your home Wi-Fi, you will need to follow these steps during initial setup & after a power outage.

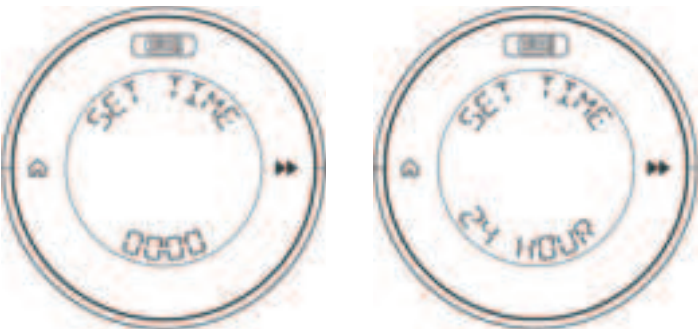

Tap the ►► button. The display will show SET TIME at the top of the screen & 00:00 at the bottom. Tap ►►

You will see either 24 HOUR or 12 HOUR at the bottom of the screen. Use ►► to select.

The hour digits will flash. Use the DIAL to adjust the digits and press ►► to proceed to the next digits. When you have finished setting the time, tap ►► and continue to the date, using the DIAL to change the digits and ►► to proceed to the next digit.

Setting Heating Programs

Your ESi MISTRAL/CIRRUS has a pre-set heating profile as shown below, which you can change to your own heating programs. As this product does the job of a time programmer and a thermostat, you must enter ON times & temperatures as well as OFF times & temperatures. OFF times and temperatures are known as Setback Events

EVENT	Time	Temp	EVENT	Time	Temp
Week Days	1 06:00 - 08:00	20°C	Weekends	1 07:30 - 09:30	20°C
	2 08:00 - 17:00	15°C		2 09:30 - 16:30	20°C
	4 17:00 - 22:00	21°C		4 16:30 - 22:30	21°C
	5 22:00 - 06:00	15°C		5 22:30 - 07:30	15°C



Press ►► and use the DIAL to select HEATING SCHEDULE or HEATING AND HOT WATER SCHEDULE. Press ►►

The display will show HEATING SCHEDULE, Press ►►



The display will show HEATING 5-2 DAY. Use the DIAL to select a heating schedule (see below) Press ►► to confirm.

- 24 Hour** – Every day will run the same programs.
- 5-2 Day** – One program for weekdays with a different program for weekends
- 7 Day** – Different programs for each day. Every day will need to be set independently.


When you have selected a heating schedule, you will see the day or group of days you are programming at the top of the screen. Use the DIAL to change the day or group of days MON - FRI. Press ►► to confirm the day/group of days.



The display will show the start time (flashing), and end time for Program 1, e.g. 06:00 TO 08:00 Use the DIAL to adjust the start time & press ►► to move to the end time. The end time will flash, use the DIAL to adjust the end time & press ►► to move on to the temperature. Use the DIAL to adjust the temperature & press ►► to confirm your settings for Program 1.

Repeat these steps until all programs have been set & use ►► to confirm your settings. When you have finished setting programs, tap the HOME button until you return to the home screen.

Setting Hot Water Programs (Mistral Only)

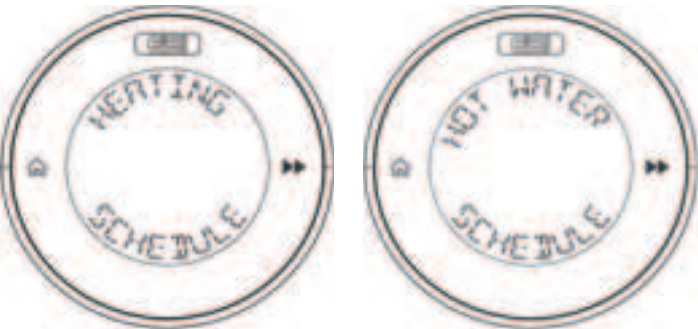

Press ►► and use the DIAL to select HEATING SCHEDULE or HEATING AND HOT WATER SCHEDULE. Press ►►

The display will show HEATING SCHEDULE Use the DIAL to select HOT WATER SCHEDULE. Press ►►



The display will show HOT WATER 5-2 DAY. Use the DIAL to select a schedule (see below) Press ►► to confirm.

 
- 24 Hour** – Every day will run the same programs.
- 5-2 Day** – One program for weekdays with a different program for weekends
- 7 Day** – Different programs for each day. Every day will need to be set independently.

When you have selected a schedule, you will see the day or group of days you are programming at the top of the screen. Use the DIAL to change the day or group of days MON - FRI. Press ►► to confirm the day/group of days.



The display will show the start time (flashing), and end time for Program 1, e.g. 06:00 TO 08:00 Use the DIAL to adjust the start time & press ►► to move to the end time. The end time will flash, use the DIAL to adjust the end time & press ►► to move on to the next program

Repeat these steps until all programs have been set & use ►► to confirm your settings. When you have finished setting hot water programs, tap the HOME button until you return to the home screen.

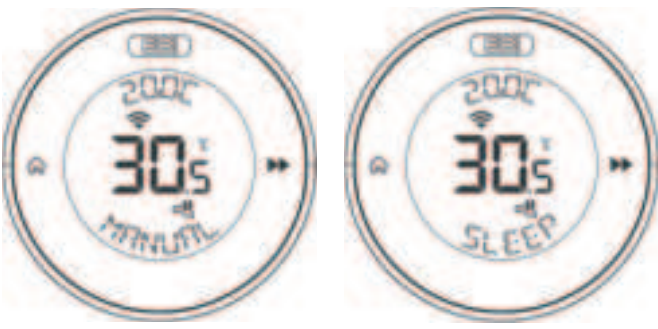

Heating Mode

To change the heating mode, tap the MODE button until the desired heating mode is selected:

 
AUTO – Programs will run.

MANUAL – Manual mode will maintain the SET temperature constantly. No programs will run.

AWAY – Away mode sets the user defined Away temperature. This is a permanent setting until the mode is changed.

SLEEP – Sleep mode sets the user defined Sleep temperature. This mode will continue until the first program of the following day.

Set Sleep & Away Temperatures

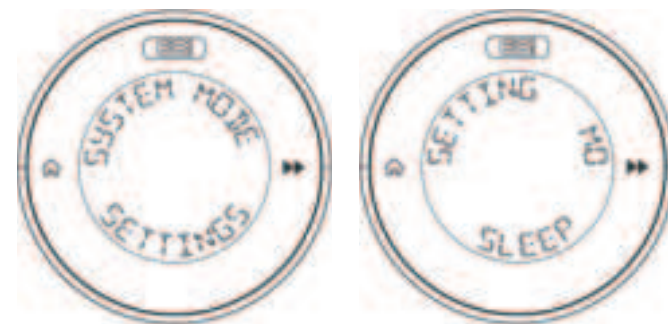

Press ►►. Use the DIAL to select SYSTEM MODE SETTINGS

Press ►► and use the DIAL to select between SLEEP & AWAY. Press ►►

Use the DIAL to set your SLEEP/AWAY temperature, Press ►► to confirm & press HOME to exit the menu.

Heating Temporary Override

When your ESi MISTRAL/CIRRUS is in AUTO mode, you can temporarily override the current SET temperature by using the DIAL. The temporary override will end when the next program starts which is indicated by the 'UNTIL' time.

Heating & Hot Water Boost (Hot Water For Mistral Only)

 


Hold the HOME button until HW BOOST is displayed at the top of the screen & 60 MINUTES shows at the bottom of the screen.

CIRRUS will show HEAT BOOST & 30 MINUTES
For MISTRAL, use the DIAL to choose between HW BOOST & HEAT BOOST. Press ►► to select. Use the DIAL to adjust the boost time. Press ►► to confirm. To cancel the boost, Press HOME.

Number of Programs

Your ESi MISTRAL/CIRRUS can run either 4 or 6 daily programs.

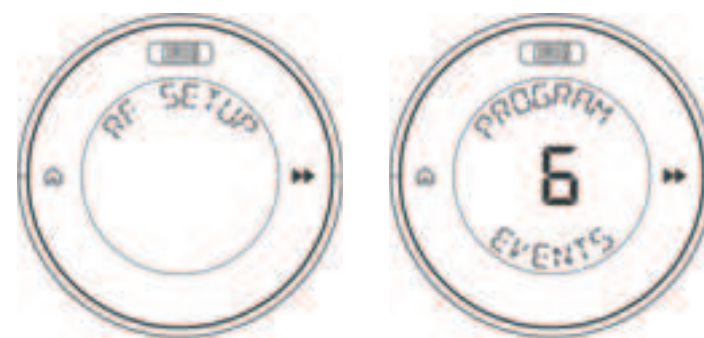


Hold the ►► button until the display shows RF SETUP

Use the DIAL to select PROGRAM 6 EVENTS. Tap ►►

Use the dial to choose either 4 events (2 ON & 2 OFF) or 6 events (3 ON & 3 OFF) When you have selected 4 or 6, tap ►► to confirm.

 Display Settings - Brightness

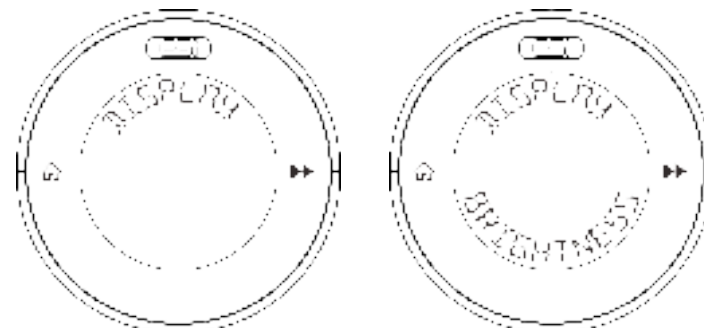


Tap ►► to enter the Menu.
Use the dial to select DISPLAY. Press ►►

The display will show DISPLAY BRIGHTNESS. Press ►►



Use the DIAL to adjust the screen brightness (1 to 10) Press ►► to save your setting and tap the HOME button to exit the menu.

 Display Settings – Display Mode

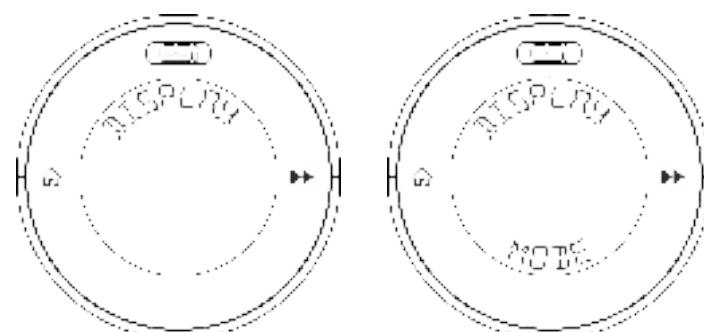

Tap ►► to enter the Menu.
Use the dial to Select DISPLAY Press ►►

Use the dial to show DISPLAY MODE Press ►►

Use the DIAL to choose from the Following options:

COMPLETE will show the set temperature, current room temperature, program & time.

CLOCK will show the current room temperature and the current time.

 
BASIC will show only the current room Temperature.

SIMPLE will show the set temperature, current room temperature and program mode.

When you have chosen a display mode, Press ►► to confirm and tap the HOME button to exit the menu.

Holiday Mode

Holiday mode will let you set a minimum temperature for the duration of the time you will be away. When Holiday Mode is set no programs will run.

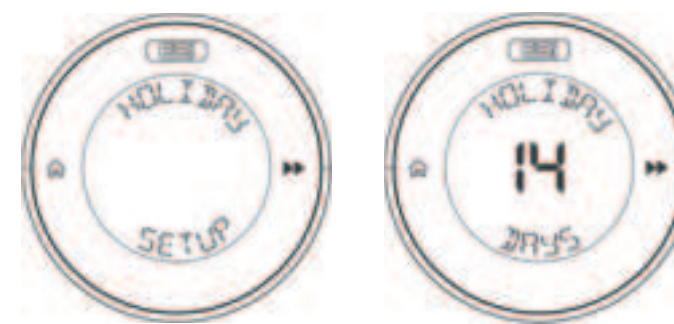

Tap ►► to enter the Menu.
Use the dial to show HOLIDAY SETUP. Press ►►

Use the DIAL to the select number of days you will be on holiday, e.g. 14. Press ►►

Use the DIAL to set a minimum temperature for while you are away. Press ►► The display will show the number of days remaining of your holiday at the top of the display. When Holiday Mode ends, your thermostat will revert back to AUTO or MANUAL mode. To cancel Holiday Mode at any time, tap the HOME button twice.

Pairing With The ESi Centro App

You can use your smartphone or tablet to regulate your heating and hot water (MISTRAL ONLY) remotely by downloading the ESi Centro app. Simply follow the instructions on the app to pair your thermostat to your home network. The ESi CIRRUS will require the ESWIFIHUB to enable smart functions.

Pairing ESi CIRRUS to ESWIFIHUB



On your ESWIFIHUB, hold the right button (Wi-Fi) until the left button (RF) flashes green. On your ESi CIRRUS, hold the ►► button until the display shows RF SETUP Tap ►►, the display will show RF PAIR PAIRING with a number counting upwards. When your ESi CIRRUS & ESWIFIHUB are paired, you will see SAVING at the bottom of the screen.

When your CIRRUS & ESWIFIHUB are paired, download the ESi Centro app & follow the instructions on Centro to pair your ESWIFIHUB with your home network.

We are continuously developing our products to bring you the very latest in energy saving technology and simplicity. However, should you have any questions regarding setting up your controls please email us at

tech@esicontrols.co.uk

Warning: Interference with sealed parts renders the warranty void.

In the interests of continuous product improvement, we reserve the right to alter designs, specifications and materials without prior notice and cannot accept liability for errors.

ESi

www.esicontrols.co.uk

Version 1.0