



## VS-6633

PORTABLE BLUEBOOTH SPEAKER SYSTEM

### Trouble shooting guide

Common problems	Possible Cause	Solution
There is no sound when power is on	1. No input source. 2. The main volume is at the minimum position.	1. Use better music signals. 2. Adjust the volume appropriately.
Distortion of sound	1. Volume is adjusted to max. 2. Speaker may be damaged.	1. Turn down the main volume. 2. Check whether the speaker is damaged or not. If it so, it needes to be repaired.
Mic is silent	1. The microphone switch is not on. 2. Mic volume is at 0 position. 3. Low battery of wireless microphone.	1. Turn on the microphone switch. 2. Adjust the microphone volume appropriately. 3. Replace the wireless microphone battery.
MP3 is silent	1. USB song format is wrong. 2. Improper operation leads to procedural chaos. 3. The USB /TF card is not inserted properly.	1. Convert the format to MP3. 2. Restart the machine. 3. Unplug and re-plug into the USB/TF card.

### Main technical specifications

Output power----- 200W  
 Input sensitivity----- 500 ± 30mV  
 SNR----- ≥65dB  
 Frequency response----- 70Hz~20KHz  
 Power supply----- DC 15V

\*Above specifications are the specifications of the sampling machine and are for reference purpose only.  
 \*Because of continuous product improvement, specifications will keep changing at any time without prior notification.

### Common function description

Vol: Adjust volume  
 Treble: Adjust treble  
 Bass: Adjust bass  
 Mic Vol: Adjust microphone volume  
 Echo: Adjust echo  
 Mic: Wired microphone input

### Product features

This system can be used with PC, DVD, VCD, MP3, Electronic Piano and any device with audio output.

The amplifying circuit is designed with high performance and high fidelity, and equipped with professional and high quality speaker, it can make the sound field positioning clear and layered.

The system voice effect is outstanding, the bass is surging and shocking, the middle tone is strong and bright, the treble is crisp and pleasant.

Professional electronic frequency division circuit, so that the division point of the machine more accurate, better effect.

The use of professional design and manufacture of large capacity batteries, as well as audio power supply capacitor makes the local power reserve margin more larger, more stable, better dynamic, higher SNR.

### Charging instructions

When charging, use the power transformer that comes with the package to connect AC 100V ~ 240V voltage for charging. The charging time should be 6 ~ 8 hours. After being fully charged, unplug the power supply to avoid damage to the battery due to long-term charging.

Battery level indicator: There is a battery level indicator on the display. When the battery power is too low, the battery indicator icon will flash, please charge it in time. The red light on the display will light up when charging, and the blue light on the display will light up when fully charged.

Note: If the battery is used out, please recharge the battery within 48 hours. Do not leave the empty battery for a long time, otherwise the battery will be damaged.



## Remote control instructions

 


1.Under normal circumstances, the remote control should be used within a range of about 20 feet and 30 degrees from the remote reception window.

2.When operating the remote control, point the remote control at the receiver window of the machine. There should be no obstacles between the remote control and the machine.

3.If the receiving window is in the position of strong light, the remote control may fail. In this case, please remove the machine to avoid direct exposure to strong light.

4.Please don't make both new and old batteries work together, and regularly check whether the remote control batteries need to be replaced.

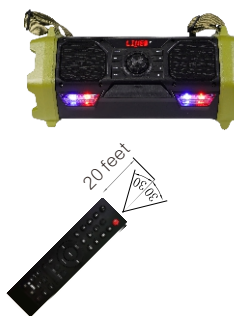

**\*Image diagram, for reference only**

## Guitar

Guitar jack: Connect guitar.

Guitar Volume: Adjust the guitar volume.

 
## USB/TF

Music files in USB and TF cards should be formatted as FAT32 on the computer.

The order about music play is based on file name, if the music file names are as "01,02,03" in sequence. This product will play the file "01" first.

Copy MP3 or WMA music files to USB/TF cards. It is recommended to delete unnecessary files and folders to speed up card reading and reduce card reading problems.


## Microphone controls and basic operation

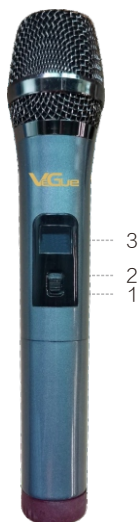

- 1.Microphone on
- 2.Microphone off
- 3.Screen

**\*Image diagram, for reference only**
 
## Description of controls

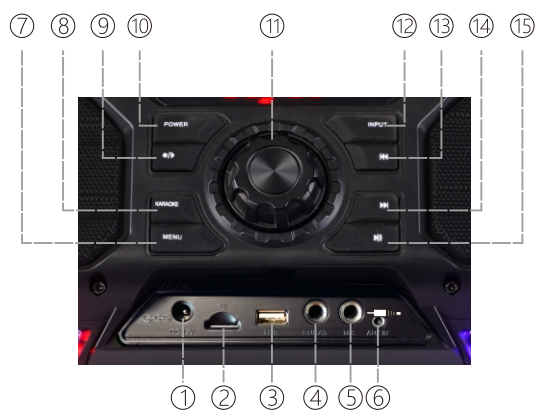

- 1.DC 15V IN  
(12V battery can be externally connected)
2. TF Interface
3. The USB Interface
4. Guitar input
5. Microphone input
6. Audio input (reset key)
7. The menu
8. Karaoke mode
9. Recording
10. Power(Long press)
11. Volume
12. Input selection
13. Prev
14. Next
15. Play/Pause

Key function:

1. Press "MENU" to enter the bass mode("b"), and then rotate the main volume knob to adjust the bass.
2. Press "MENU" twice to enter the treble mode("t"), and then rotate the main volume knob to adjust the treble.
3. Press "MENU" continuously for three times to enter reverberation mode("r"), and then rotate the main volume knob to adjust the reverberation.
4. Press "MENU" continuously for four times to enter the delay mode("d"), and then rotate the main volume knob to adjust the delay.
5. Press "MENU" continuously for five times to enter the microphone mode("m"), then turn the main volume knob to adjust the volume of the microphone.
6. Press "MENU" continuously for six times to enter guitar mode("g"), Turn the main volume knob to adjust the volume of the guitar.
7. Press "MENU" continuously for seven times to enter the LED mode("l"), Then rotate the main volume knob to change the color.
8. Press the "KARAOKE" key to switch the Karaoke mode, showing 0 as the Original("0"), 1 as the Accompaniment("1"), 2 as the Follow("2").
9. Single Press the "●/▶" button for recording, and long press to play the recording.
10. Insert a needle(more than 2" in length)into the audio input socket to press the reset button.

**\*Image diagram, for reference only**

## Recording function

Please insert USB or TF card first and then press "●/▶" into recording mode. When recording music at the first time, an new file "RECORD" will be created in the card and all recordings will be saved into the file. These recording files are automatically named as REC0001, REC0002, REC0003... in sequence. When recording music, press "●/▶" to pause it and press again to continue. Press INPUT or "●/▶" to quit recording mode.

Please press "●/▶" into recording-play mode(automatically play the musics recording before). Usually the machine will play the last recording music first. Press PREV(◀◀) or NEXT(▶▶) to select the music. Press Replay on the remote control to replay music. If you would like to replay single music or all musics, please press Replay repeatedly.

## Play function

USB port: insert USB and play music.

TF port: insert TF card and play music.

Supports MP3, WMA, and WAV music formats, outstanding sound performance, high fax stereo design.

INPUT: to switch external audio, MP3 / Bluetooth functions.

▶||: press this key to pause the music, and press again to continue.

|◀▶: when playing, select the PREVIOUS/NEXT music.

## Bluetooth operation

Bluetooth connection method: Turn on the speaker, press the "INPUT" key on the speaker panel, and the screen will show "bt". Use your phone to connect the Bluetooth of the speaker. The Bluetooth name is VS-6633.

If the connection fails, please restart the device or the phone and try again.

The use range of the Bluetooth is 32ft in the open area.