

 
# USE AND CARE GUIDE

## OVAL FLUSH MOUNT

32IN. X 18IN.


### PACKAGE CONTENTS

Part	Description	Quantity
A	Fixture Body	1
B	Diffuser Shade	1

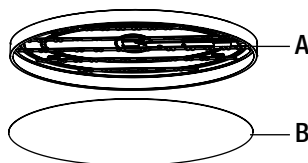

### HARDWARE INCLUDED

 Part	Description	Quantity
AA	Drywall Anchor	4
BB	Mounting Screw	4
CC	Wire Connector	3
DD	Lever	1



**NOTE:** Keep your receipt and these instructions for proof of purchase.

**WARNING: RISK OF ELECTRIC SHOCK.** Ensure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker before removing an existing light fixture or installing the new one.

If you are unfamiliar with electrical installations, we recommend you contact a qualified electrician to do the installation.

### INSTALLATION

Select a suitable location that can support the weight of the fixture. Determine the method for mounting the fixture before drilling, based on the type of ceiling. Two people are recommended for the installation of this light fixture.

- Drill a 1/8-in. pilot hole into each of the screw locations marked on the ceiling by the fixture. You can also use an awl or nail to dimple the screw holes.

- Install a drywall anchor (AA) and a mounting screw (BB) in each drilled mounting hole, but do not tighten fully.

**NOTICE:** The drywall anchors (AA) are only to be used for mounting the fixture to plaster or drywall surfaces.

- Open the insect-proof cover in the middle of the fixture body (A) and lead the J-box wires out.

- Make the mounting screw (BB) head cross the keyholes on the fixture body (A), slide the base towards the narrow hole, and fasten these screws well.

 
 
- Connect the hot and neutral (black and white) wires from the fixture body (A) to the same color wires from the J-box. Connect the green wire from the fixture body (A) to the grounding wire from the J-box. Cover the wire connections using the wire connectors (CC). Wrap the wire connectors (CC) with electrical tape for a more secure connection.

- Position the wires back inside the J-box and close insect-proof cover of the fixture body (A).

- Choose your favorite correlated color temperature (CCT) from five options: 2700k warm white, 3000k Soft White, 3500k neutral white, 4000k Bright White, or 5000k Daylight.


**NOTICE:** The factory setting is 2700K.

**NOTICE:** After the LED light is installed. If you want to change the color temperature again, you can use the lever (DD) to remove the diffuser shade (B) from the fixture body (A) to change the color temperature.

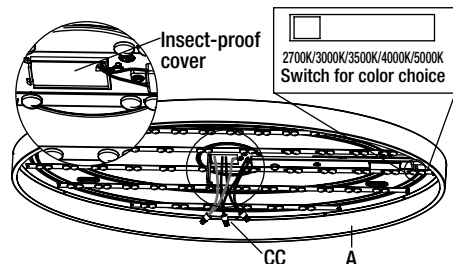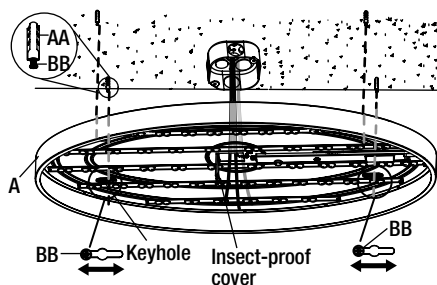

## INSTALLATION (CONTINUED)

 8. Tuck the diffuser shade (B) into the frame of the fixture body (A) and place it flat. Turn on the power and light the lamp.

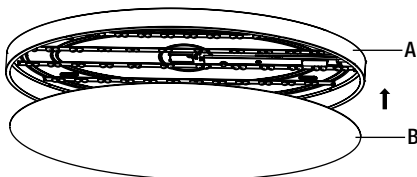

## CARE AND CLEANING

- CAUTION:** Before attempting to clean the tube and luminaire/light fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box. Clean with a soft, dry cloth. Do not use cleaners with chemicals, solvents, or harsh abrasives. Do not use liquid cleaner on the LEDs, LED driver, or wiring.

## TROUBLESHOOTING

Minor problems often can be fixed without the help of an electrician.

- WARNING:** Before doing any work on the fixture, disconnect power to the light fixture.

Problem	Possible Cause	Solution
The fixture will not light.	The power is off.	Ensure the power supply is on.
	The circuit breaker is off.	Ensure the circuit breaker is in the on position.
	There is a bad connection.	Check to ensure proper wire connections are made. Contact a qualified electrician.
	There is a defective switch.	Contact a qualified electrician.
The fuse blows or the circuit breaker trips when the light is turned on.	The wires are crossed or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call customer service 1-877-527-0313.

- WARNING:** Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire, or other injuries which could be hazardous or even fatal.
- Ensure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
  - Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
  - Do not install on a radiant-heating type ceiling.

**NOTICE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, increase the separation between the equipment and the receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, and consult the dealer or an experienced radio/TV technician for help.

## WARRANTY

### WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

### WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in anyway not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-527-0313 or visit [www.HomeDepot.com](http://www.HomeDepot.com).

Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313 | [HOMEDEPOT.COM](http://HOMEDEPOT.COM)

Retain this manual for future use.

