

pure acoustics®

Model #SBW-385

Deluxe Bluetooth Surround Bar
& Wireless Subwoofer



User manual
&
Safety Guide

www.pure-acoustics.com

Thank you for choosing Pure Acoustics. We hope you enjoy each and every use of this product. We suggest that you read this user manual carefully before primary use in order to utilize all of the features in functions installed. Please store it in a safe place for future reference and pass it on to the next owner.

Caution & Safety Guide:

Please power off the unit when not in use. If the unit will not be in use for extended periods it is suggested that you disconnect the unit from its power source.

To prevent damage to the unit do not install in areas of extreme heat or in areas with direct exposure to sunlight.

Don't install the unit in or near a place where it may come in contact with rain, moisture or other liquids.

Install the unit on a horizontal, flat and firm surface with good ventilation. Never block the speaker, blocking these vents may cause damage to the speaker as a result of overheating.

To clean the unit, simply wipe it down using a dry, soft cloth. The unit should never be cleaned chemicals or detergent.

In the rear occurrence of malfunction do not attempt to repair the unit on your own. Contact a certified service professional for a proper diagnosis and repair.

Caution: Dismantling the unit on your own is dangerous and may cause damage to your person or property and will void the warranty.



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure and touching the internal components may result in electric shock to your person.



The exclamatory mark is intended to alert the user to the presence of important operating instructions.



To reduce the risk of electric shock or fire, do not remove the cabinet cover simply contact a service professional.

Features:

Bluetooth - Enjoy wireless music streaming from any Bluetooth enabled device

2.1Ch Surround Sound - Full range true cinematic surround sound

Wireless Subwoofer - wireless pre-sync'd down firing subwoofer delivers rich deep bass

Optical Input - Provides delivery of digitally enhanced sound effects and audio

Dual Line Inputs - plug n play (line-in) 3.5mm and traditional direct connect (AUX) RCA input

 
FM Radio - Digital FM tuner including auto scan for programing local stations in presets

Exclusive Design - Deluxe fabric grilled offers an enhanced appearance on your wall or cabinet

Easy Setup - simple do it yourself plug and play connection will have you all setup in minutes


IR Remote Control - Full control over all modes and features

Multimedia Control Panel

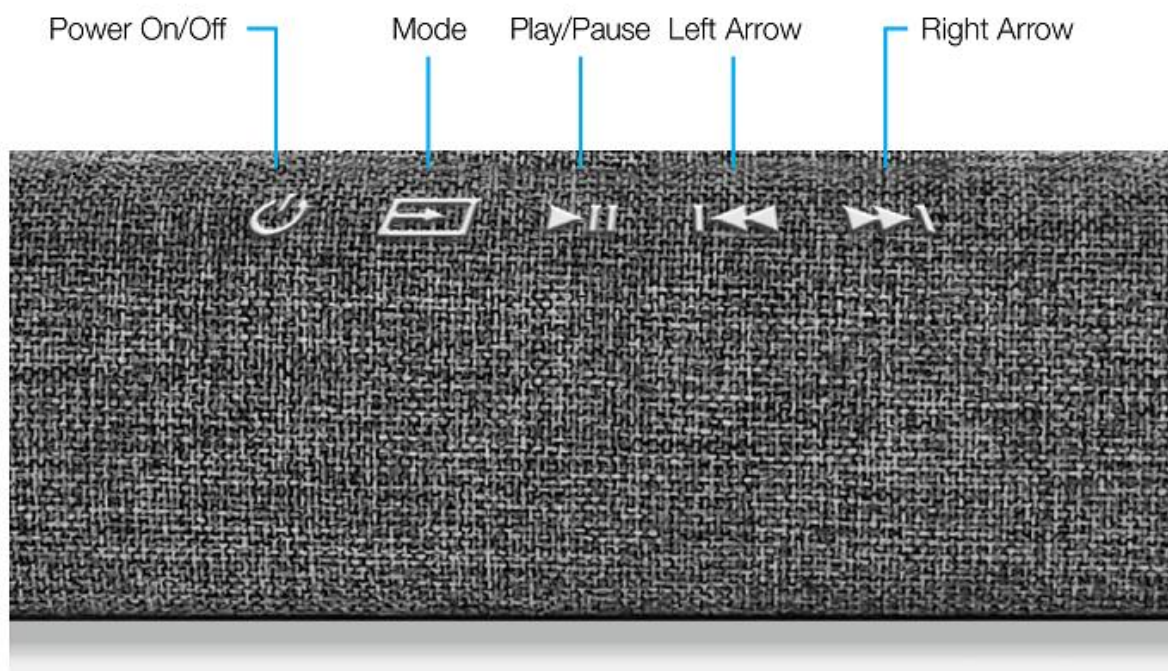


1. Power On/Off - press the On/Off button to power the unit on press again to power off
2. Mode - Press the mode button to switch between Bluetooth, AUX (RCA), Line-in (3.5mm) and FM Radio
3. Play/Pause - Operates in Aux (RCA) and Line-in modes to play or pause the current track
4. Left Arrow /Previous - Short press to go to the previous track. Long press to decrease the volume levels
5. Right Arrow /Next - Short press to go to the next track. Long press to increase the volume levels

 LED Indicator Map

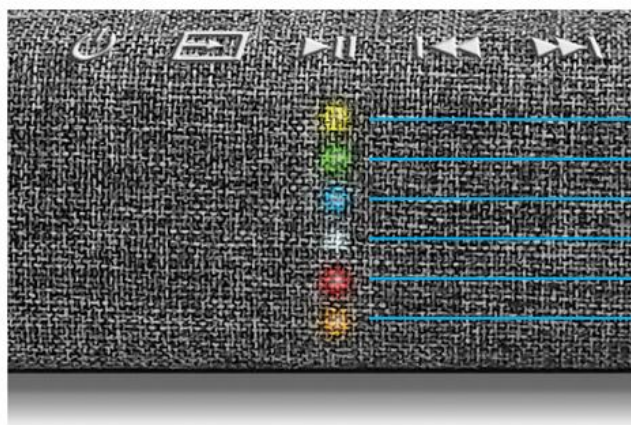

Audio Source	Color
USB	Yellow
AUX	Green
Bluetooth	Blue
Line In	White
Optical	Red
FM Radio	Orange

 Surround bar back panel:

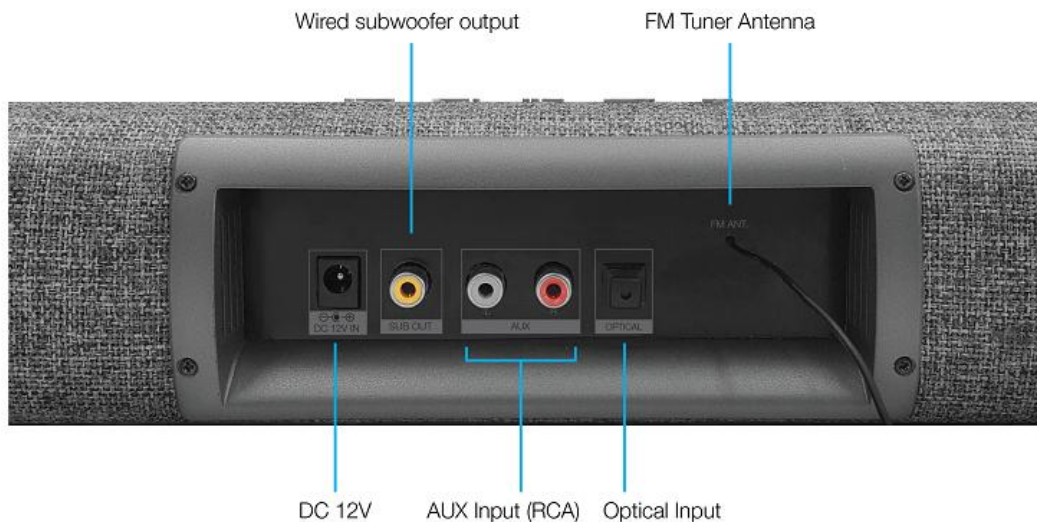

- 1.External 12V DC Connection
- 2.Wired Subwoofer Output*
- 3.AUX RCA Input
- 4.Digital Optical Input
- 5.FM Antenna

*Wired subwoofer option cannot be used simultaneously with wireless subwoofer

Connections

Line In

Use the provided AUX cable (3.5mm) to direct connect smartphones, tablets, and other music devices.

Or use an RCA cable to connect to your Smart TV or cable box in the traditional way.

Its corresponding signal source is LINE IN which can be available by pressing (mode) on the side panel or pressing (AUX) on the remote control.

Subwoofer Output

Power on the subwoofer, the subwoofer is equipped with a wireless transmitter, the manufactured default setting is set to automatically connect to the surround bar, should a disconnect between the subwoofer and surround bar occur simply reset the connection by switching the units off and then on again.

Bluetooth Connection

To pair the SBW-385 with your Smartphone or other Bluetooth enabled device hit mode to enter Bluetooth mode. Enable the Bluetooth function on your Smartphone or other bluetooth enabled device and hit scan for Pure SBW-385. When found choose it from the list.

If prompted to input a password insert 0000, once successfully paired select the Pure SBW-385 from the list of paired devices and select in order to connect.

Optical Input

Use the optional optical cable to connect the optical output of your television or amplifier to the player.

Digital FM Tuner

Press the mode button until the speaker enters FM mode or press FM on the IR remote control to tune into your favorite radio stations both indoors and out. Long press the Play/Pause button to auto scan upto 20 preset stations. To scroll to a specific preset station use the arrow keys while in FM mode

Remote Control

Remote Control Operation

Install the batteries into the remote control. Point the remote control at the remote sensor on the front panel. The remote control works within a distance of about 8 meters from the sensor and within an angle of about 30 degrees from the left and right side.

NOTE:

 
Remove the batteries when you don't intend to use the remote control for a long time.

Do not mix new and used batteries, or different types of batteries.

Weak batteries can leak and severely damage the remote control.

Be environmentally friendly and dispose of batteries according to your government regulations.

Remote Control

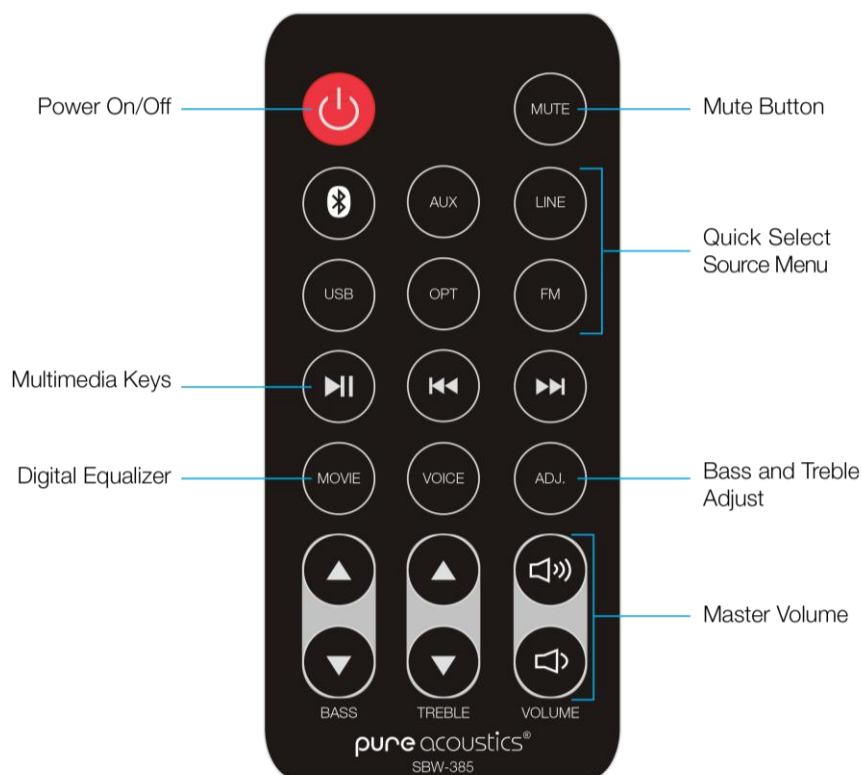

Troubleshooting

Issue	Possible Causes	Solution
No power	The unit is not connected to the power supply or the power cable is not properly connected to the outlet.	Make sure the unit is connected to the power supply. Try connecting the cable to a different outlet.
No sound or distorted sound	1.The audio cables aren't properly connected. 2.The volume is set to the minimum level. 3.The sound is switched off	1.Confirm that the audio cables are connected properly in the correct inputs. 2.Turn up the Volume 3.Press MUTE on the remote control to switch on the sound. 4.Press Play/Pause
The buttons on the unit are not working.	The unit is being interfered with static electricity etc.	Switch off and unplug the unit. Then connect the plug to the power supply and switch on again.
The IR remote control is not functioning properly.	1.Check to make sure that there are batteries inside and that they installed properly. 2.The batteries installed are depleted and in need of replacement. 3.The remote sensor is obstructed or the remote control is not pointed to the remote sensor 4.The remote control is out of its operating range. 5.The unit is powered off	1.Install 2 AAA/1.5V batteries in it. 2.Replace the batteries with new ones. 3.Remove any obstructions and make sure that the remote control is pointed at the remote control sensor. 4.Make sure the remote control is within the operating range 5.Switch off the unit and disconnect it from the AC outlet. Then power the unit on again.

Technical Specifications:

Power Supply	DC 12V / 1A
Power consumption	75W
Working environment(Temperature)	-10~+35C
Relative Humidity	5%~90%
Power output(Max)	150W + 75W SUBWOOFER
Frequency response	+/- 3dB (40Hz ~ 20KHz)

Once again we thank you for purchasing the SBW-385 sound bar and wireless subwoofer system. It is our hope that you enjoy this product every time it is put to use therefore, we suggest that you keep this user manual safe for future reference and so it may be passed on to the next owner.

Please feel free to visit our website www.pure-acoustics.com for information on this product as well as hundreds more

Enjoy!

pureacoustics®