

PHILIPS

Universal remote

Remote Control

Audio/Video

SRP2014C/27
SRP2014H/27
SRP9243B/27
SRP4222P/27



See reverse for easy-to-follow instructions and exclusive deals.

Thank you for your purchase!



Product instructions made easy

Scan to watch a step-by-step instructional video or visit byjasco.com/40599i



Register your Philips product

Get exclusive, web-only deals and more! Scan here or visit byjasco.com/deals



Need more remote control devices?

For additional Philips remote controls, visit our website! byjasco.com/remotes



Like our product?
Leave a review on your favorite retailer website or amazon.com



Having problems?
Let us know how we can help. Call 1-844-816-0320 between 7AM-8PM, M-F, Central Time.

Setup

Your universal remote requires two (2) AAA batteries (not included). Alkaline batteries are recommended.

Battery Installation

1. Press downward on battery cover latch and lift to remove.
2. Insert the batteries, making sure to match the (+) (-) polarity inside the compartment.
3. Replace cover and snap the latch into place.

Note: If your remote stops operating properly, replace the batteries with new ones.

Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.


Battery Saver

Your remote automatically turns off if the buttons are held down for more than 8 seconds. This saves battery life if your remote gets stuck in a place where the buttons remain depressed (e.g., between sofa cushions).

Code Saver


You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.

Button Functions

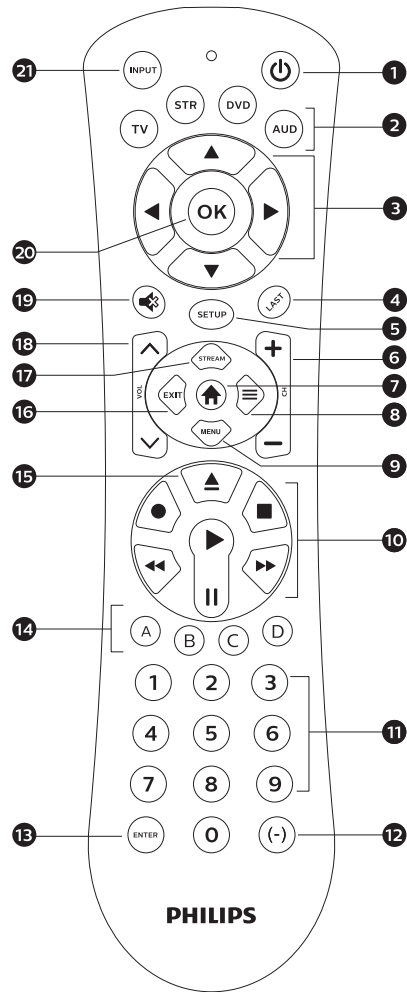

1. **Power** – Turns devices ON/OFF
2. **TV, STR, DVD, AUD** – Select the device to control
3. **Up/down/left/right** – Menu navigation
4. **Last channel** – Returns to the previously selected channel
5. **Setup** – Used to program the remote
6. **Channel up/down**
7. **Home/Guide** – Access streaming device features or Guide for cable/satellite receivers
8. **Info/Options** – Displays on-screen show/content information
9. **Menu** – Displays the on-screen menu
10. **Record, play, stop, rewind, fast forward, pause**
11. **Numbers** – For direct channel selection
12. **Dash (-)** – Use to select digital channels, e.g., 4.1
13. **Enter** – For devices that require Enter to be pressed after channel selection
14. **ABCD** – Access additional features for DVRs, cable and satellite receivers
15. **DVD/Blu-ray™ open/close** – Open/close a DVD/Blu-ray™ player or List features on cable/satellite receivers
16. **Exit** – Exit on-screen menus
17. **Streaming app hotkey** – Preprogrammed to access your smart TV or streaming device's top streaming app, such as Netflix, Hulu or Amazon Prime
18. **Volume up (+)/down (-)**
19. **Mute** – Mutes sound
20. **OK** – Selects menu items for the controlled device
21. **Input** – Selects video inputs

Direct Code Entry

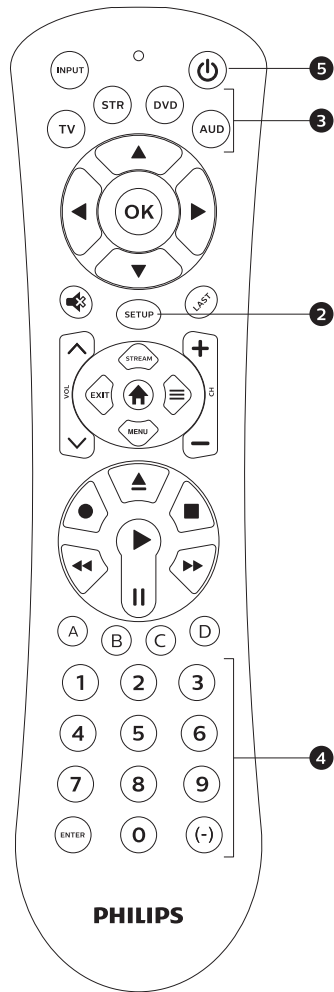

Direct code entry is recommended for quick and easy programming.


Note: The TV device button is preprogrammed for Samsung TVs, and the STR device button is preprogrammed for Roku boxes.

1. In the **Code List** included with remote, circle the 4-digit codes for the type and brand of device you wish to control.
2. Press and hold down the **SETUP** button until the remote's red light turns on. Release the **SETUP** button. The red light will remain on.
3. Press and release the chosen device button (**TV, STR, DVD** or **AUD**). The red light will blink once and remain on.
4. Enter the first 4-digit code circled in Step 1. The red light will turn off.
5. Point the remote at the device and test the buttons. If they don't work as expected, repeat Steps 2-5 with the next circled code.
6. Repeat the process for each device you wish to control.

Programming notes

- Some codes may operate only a few device functions, so test other codes for more functionality.
- Trouble finding a code? Program the remote using the auto code search method.
- For combination devices, such as a TV/DVD combo or TV/VCR combo, you may have to enter a code for each device.
- Keep your device codes for future reference.

Auto Code Search

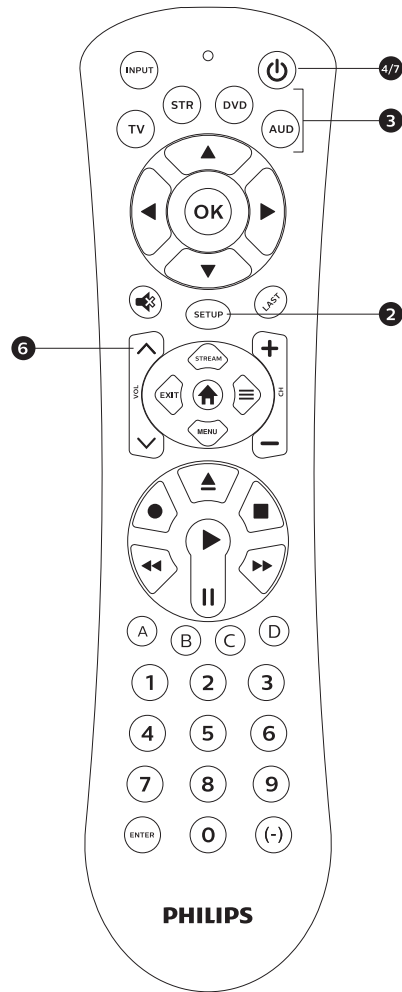


Auto code search cycles through all codes in the remote to find one for your device.

Before you begin, read through the steps below to familiarize yourself with the auto code search process.

1. Manually turn on the device you wish to control. (Use direct code entry method for devices without ON/OFF capability).
2. Press and hold down the **SETUP** button until the remote's red light turns on. Release the **SETUP** button. The red light will remain on.
3. Press and release the chosen device button (**TV, STR** or **AUD**). The red light will blink once and remain on.
4. Point the remote at the device, then press and release the **POWER** button. The red light will blink and then remain on after cycling through 10 codes.
Did the device turn off?
YES – Go to Step 5.
NO – Repeat Step 4 to test the next 10 codes.
5. Manually turn on the device.
6. Point the remote at the device, then press and release **VOL+**. The red light will blink once and remain on.
Did the device turn off?
YES – Press and release the same device button pressed in Step 3. This stores the code in the remote. Go to Step 7.
NO – Repeat Step 6 until the device turns off. Wait 3 seconds between each **VOL+** button press.
7. Use the remote to turn on the device. Test the remote's buttons. If they don't work as expected, repeat Steps 2-7.
8. Repeat the process for each device you wish to control.


Code Identification

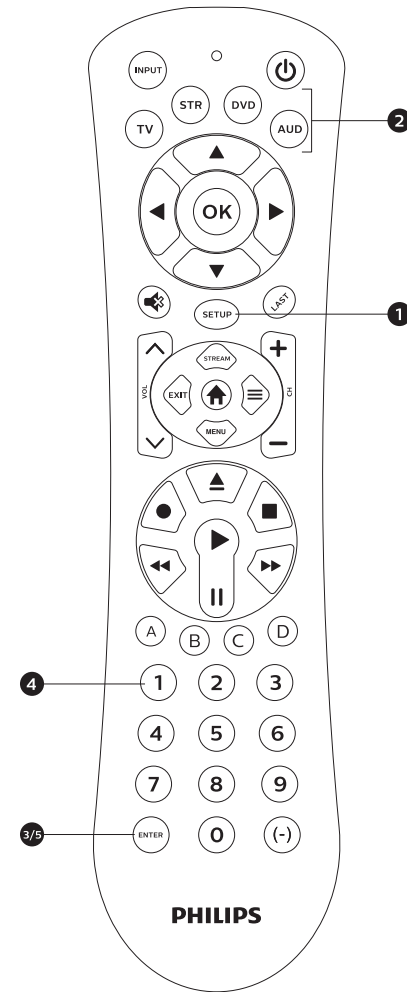

Code identification lets you retrieve the 4-digit code used to program each of your device buttons.

1. Press and hold down the **SETUP** button until the red light turns on. Then, release it. The red light will remain on.
2. Press and release the device button for the code you seek.
3. Press and release **ENTER**.
4. Press and release **#1** and count how many times the red light blinks. This is the first digit in your code. Repeat the process by pressing **#2, #3** and **#4** for the remaining digits.
5. Press and release **ENTER** to exit this mode.

Primary Audio Control

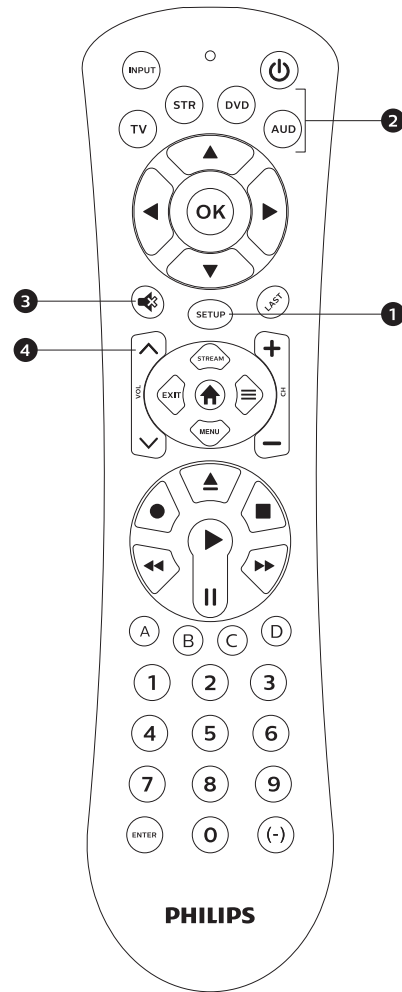

Primary audio control lets you select an audio device to control the volume no matter which component you're operating.

Enabling Primary Audio Control

1. Press and hold the **SETUP** button until the red light remains on, then release it. The red light will remain on.
2. Press and release the device button for the audio component you wish to use.
3. Press and release the **MUTE** button.
4. Press and release **VOL+**. The red light will blink twice and turn off.

Disabling Primary Audio Control

1. Press and hold the **SETUP** button until the red light remains on, then release it. The red light will remain on.
2. Press and release the device button previously programmed for primary audio control.
3. Press and release the **MUTE** button.
4. Press and release **VOL-**. The red light will blink twice and turn off.

MADE IN CHINA

 
 
 
 
 
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Jasco Products Company, and Jasco Products Co. LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product.

This product has a limited-lifetime warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320, M-F, 7AM-8PM, Central Time.

For product patent information, visit www.byjasco.com/patents.

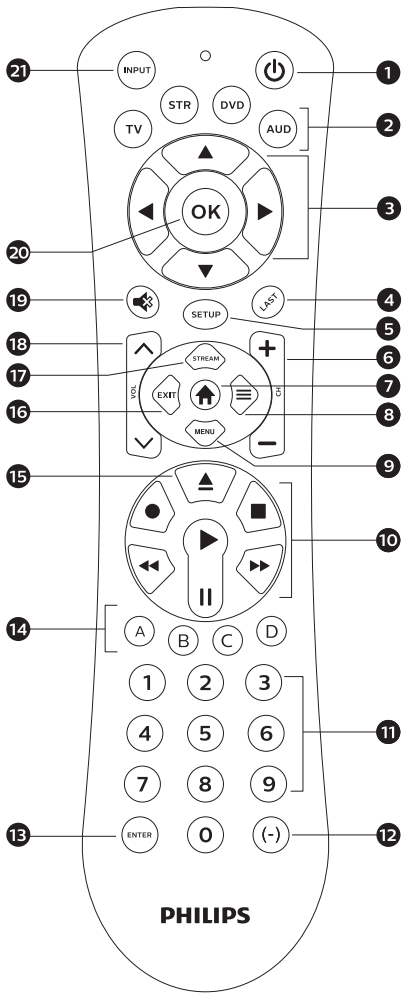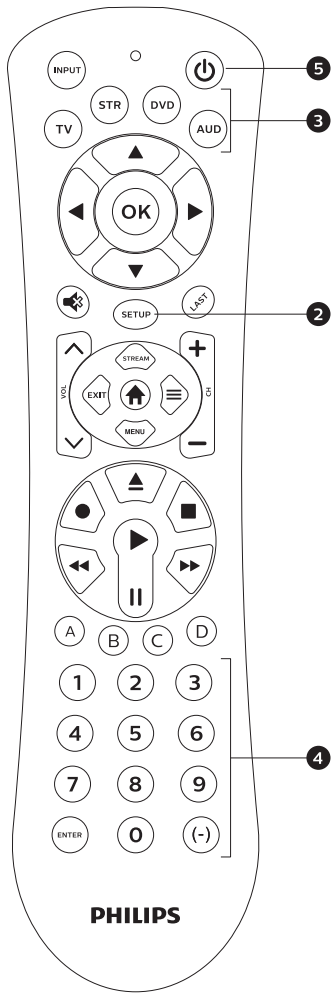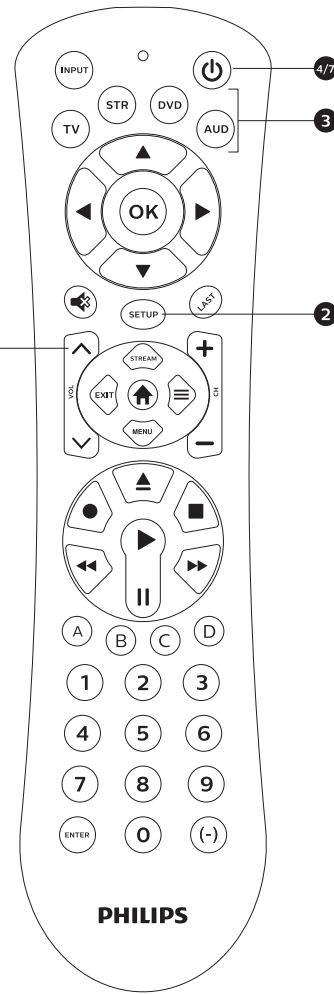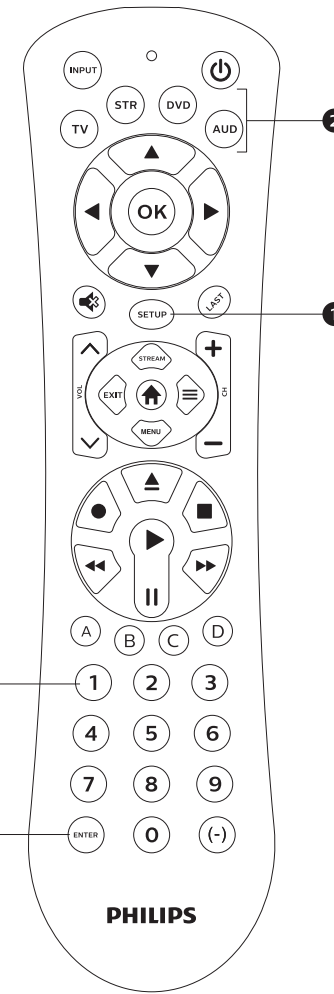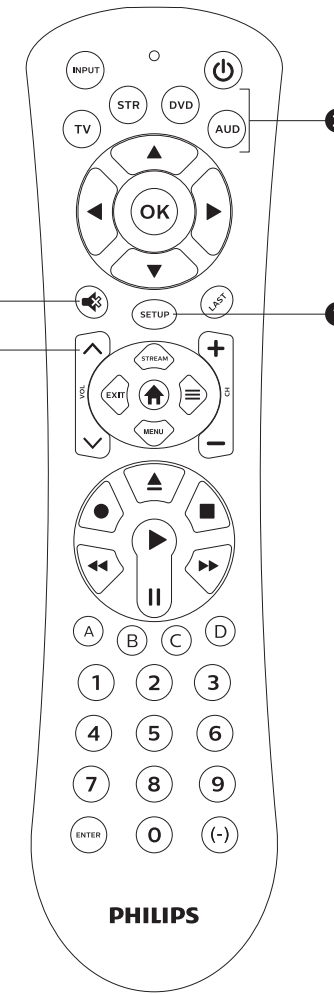

FCC Statement		Preparación		Funciones de los Botones		Entrada directa de código		Búsqueda automática de códigos		Identificación de Códigos		Control de audio primario	
Suppliers Declaration of Conformity Model #: SRP2014C/27, SRP2014H/37, SRP9243B/27 and SRP4222P/27 Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. ICES-3(B)/NMB-3(B).		Su control remoto universal requiere dos (2) pilas AAA (no incluidas). Se recomienda el uso de pilas alcalinas. Instalación de las pilas 1. Presione hacia abajo sobre el enganche de la tapa del compartimiento para pilas y levante para retirarla. 2. Inserte las pilas asegurándose de que coincidan con la polaridad (+) (-) dentro del compartimiento. 3. Vuelva a colocar la tapa y encaje a presión el enganche en su lugar. Nota: Si su control remoto no funciona correctamente, reemplace las pilas por otras nuevas. Precauciones con las pilas • No coloque pilas nuevas con pilas viejas. • No mezcle pilas alcalinas, estándar (carbono-zinc) o recargables (Ni-Cd, Ni-MH, etc.). • Retire siempre las baterías viejas, con poca carga o agotadas de inmediato y recídelas o deséchelas de acuerdo con las reglamentaciones locales y nacionales. Ahorro de energía Su control remoto se apaga automáticamente si los botones se mantienen presionados durante más de 8 segundos. Esto prolonga la vida útil de las pilas si su control remoto se atasca en un lugar donde los botones permanecen presionados (por ejemplo, entre los cojines del sofá). Protector de códigos Tiene hasta 10 minutos para cambiar las pilas en su control remoto sin perder los códigos que programó.											
Declaración de la FCC		Solución de Problemas											
Declaración de conformidad de proveedores Modelo #: SRP2014C/27, SRP2014H/37, SRP9243B/27 y SRP4222P/27 Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com Este dispositivo cumple con la Parte 15 de las normas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no podrá causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan causar un funcionamiento no deseado. NOTA DE LA FCC: El fabricante no se responsabiliza por ninguna interferencia de radio o TV causada por modificaciones no autorizadas a este equipo. Tales modificaciones podrían anular el derecho del usuario a hacer uso del equipo. NOTA: Este equipo se sometió a pruebas y cumple con los límites establecidos para un dispositivo digital Clase B de acuerdo con la Sección 15 de las Normas de la FCC. Dichos límites están diseñados para proporcionar una protección razonable contra la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se instala y usa de acuerdo con estas instrucciones, podría causar una interferencia perjudicial en las radiocomunicaciones. No obstante, no es posible garantizar que no ocurrirán interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, las cuales pueden comprobarse encendiendo y apagando el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas: • Reoriente o reubique la antena receptora. • Aumente la distancia entre el equipo y el receptor. • Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor. • Consulte al distribuidor o a un técnico experimentado de radio/TV para obtener ayuda. ICES-3(B)/NMB-3(B).		El control remoto no opera su dispositivo • Asegúrese de que las pilas sean nuevas y estén instaladas correctamente. • Apunte el control remoto directamente a su dispositivo y asegúrese de que no haya obstrucciones entre el control remoto y el dispositivo. • Apunte el control remoto directamente a su dispositivo y asegúrese de que no haya obstrucciones entre el control remoto y el dispositivo. • Asegúrese de seleccionar en el control remoto el dispositivo apropiado que desea controlar (TV para TV, STR para reproductor multimedia de transmisión, AUD para audio, etc.) • Intente programar el control remoto con un código diferente. Consulte la sección Entrada directa de código. El control remoto no opera algunas funciones de su dispositivo • A veces, un código en particular puede operar algunas funciones, pero no todas. Intente programar el control remoto con un código diferente de la Lista de códigos. Consulte la sección Entrada directa de código. • El control remoto puede no ser capaz de operar todas las funciones de su dispositivo o los nombres de los botones pueden ser diferentes a los de sus controles remotos originales.		Restablecer a la Configuración de Fábrica 1. Mantenga presionado SETUP hasta que la luz roja se mantenga encendida. 2. Presione y suelte el botón SILENCIO. 3. Presione y suelte el botón 0 (cero). La luz roja parpadeará dos veces.									