物料编码:BC1000011

物料名称:C10 APP指引卡(英语)

展开尺寸:170\*400mm

成品尺寸:170\*100mm


材质:128g哑粉纸

印刷:双面四色印刷

成型:竖向风琴折

日期:2025.5.30

版本:A1

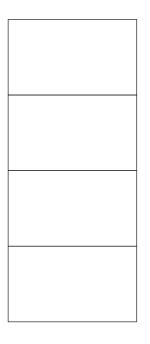





## How to adjust the Paper Width:




Paper guide switch

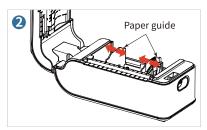

step 2: adjust the paper guide, load in paper

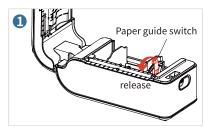

step 1: release the paper guide switch

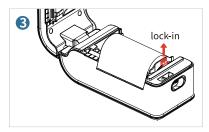

step 3: lock in the paper guide


## **APP Printing Quick Start Guide**

Scan the QR code below to download the newest "APP Printing Quick Start Guide", as the APP UI may update.





Scan or search "Jadens Printer" to download the APP.

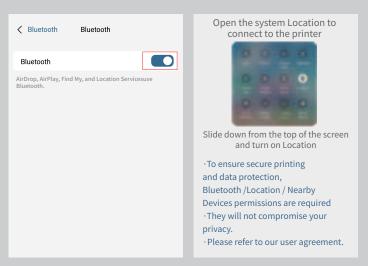

2 Turn on Bluetooth and location on your smart phone.







3 Allow "Jadens Printer" to use location, position and Bluetooth.




4) Turn on your printer, open the APP, and tap "+" to add a printer.

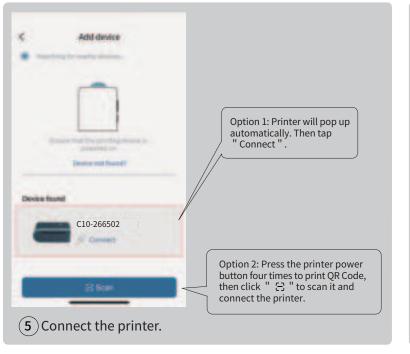

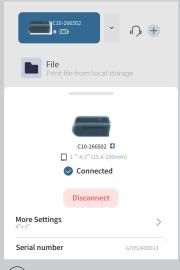

6 Tap "More settings" to enter paper settings.

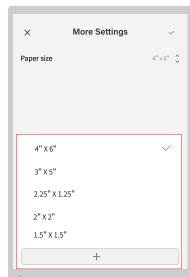

7 Choose paper size or, tap "+" to customize the width.



**Al:** provide Al functions, such as Al painting, cartoon avatar, and watermark remove.


File: support PDF/Image

**DIY:** create content with text or image you want

**Scan:** you can scan an existing bar code and then generate a bar code or QR code in the App

**Template:** create with provided template.

8 Choose printing options.

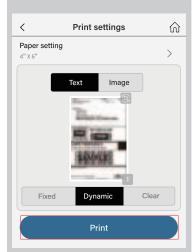


9 When print from File/ Image:Try different modes to preview and select the best printing effect.

## Tips: If you have just received documents (pdf. file) from Twitter, Facebook or Instagram, you can open and print it right away! After receiving it in the dialogue box, tap the file to open it, and then

"Open in Another App"

"Jadens Printer" APP.

to choose

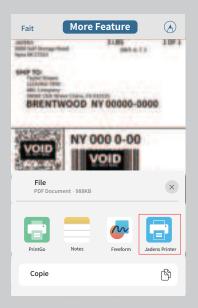



www.jadens.com

Scan and find us for high quality thermal papers.

Compatible Printing Paper Width 25.4mm to 109mm (1 inch to 4.3 inch)









4\*6"



Supported Folded Thermal Paper

3\*5"



4\*6"