

Brookstone®

Travel Clock with Flashlight

JUST PICK IT UP FOR LIGHT!



CAUTION

- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with any liquid containing alcohol, detergent, abrasive or corrosive materials. They may scratch the plastic parts and corrode the electronics.
- Do not subject the unit to excessive force, shock, dust, temperature or humidity, which may result in malfunction, a shorter electronic life span, damaged batteries or distorted parts.
- Do not tamper with the unit's internal components. Doing so may cause unnecessary damage. The unit contains no user-serviceable parts.
- Read the instructions thoroughly before operating the unit.

BATTERY PRECAUTIONS


- Dispose of old batteries properly. Do not dispose of old batteries in a fire.
- Do not leave batteries lying around where a young child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.

- Batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries or rechargeable batteries of different capacities.

LOCATION OF CONTROLS

1. DISPLAY
2. SNOOZE/BACKLIGHT
3. ON/SENSOR/OFF/LOCK
4. SNOOZE/ALM ON/ALM OFF
5. MONTH/HR.
6. DATE/MIN.
7. CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET
8. YEAR/12/24
9. C°/F°
10. BATTERY COMPARTMENT
11. BATTERY DOOR LATCH
12. TWO SUPER-BRIGHT LEDS

**PLEASE SAVE
THESE INSTRUCTIONS**

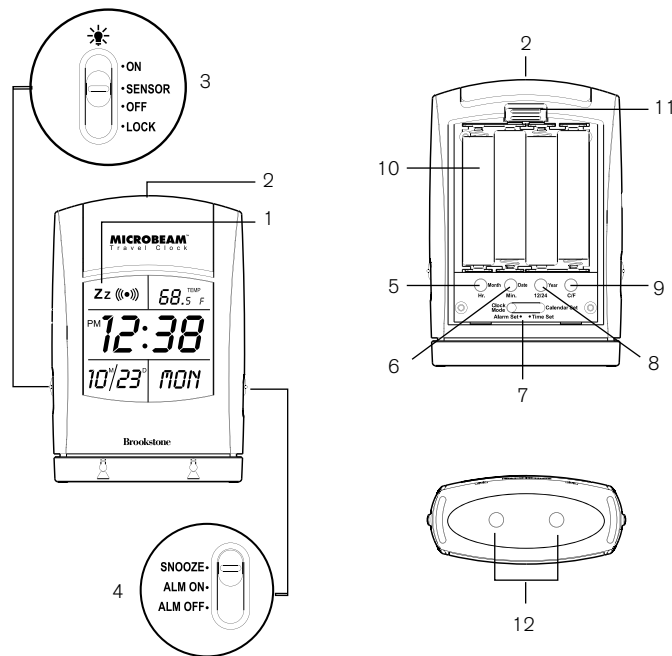

Brookstone®
A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire, USA 03054
800-846-3000 • www.Brookstone.com

641449


CLOCK OPERATION

INSTALLING THE BATTERIES

1. Lift the BATTERY DOOR LATCH.
2. Remove the battery cover.
3. Insert 4 AAA batteries (not included) into the BATTERY COMPARTMENT according to polarity indicators inside the BATTERY COMPARTMENT.
4. Replace the battery cover.

SETTING THE CLOCK


1. Lift the BATTERY DOOR LATCH.
2. Remove the battery cover.
3. Slide CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET to TIME SET.

Note: If the /ON/SENSOR/OFF/LOCK is in the LOCK position, the clock cannot be set.

4. Press the YEAR/12/24 to select either 12- or 24-hour mode.
5. Press the MONTH/HR. to set hour.
6. Press the DATE/MIN. to set minutes.
7. Slide the CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET to CLOCK MODE.
8. Replace the battery cover.

SETTING THE CALENDAR

1. Lift the BATTERY DOOR LATCH.
2. Remove the battery cover.
3. Slide the CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET to CALENDAR SET.

Note: If the /ON/SENSOR/OFF/LOCK is in the LOCK position, the calendar cannot be set.


4. Press the MONTH/HR. to set the month.
5. Press the DATE/MIN. to set the date.
6. Press the YEAR/12/24 to set the year.

Note:

- The day of the week automatically adjusts when setting the date.
 - The highest possible year is 2069.
7. Slide CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET to CLOCK MODE.
 8. Replace the battery cover.


SETTING THE ALARM


1. Lift the BATTERY DOOR LATCH.
2. Remove the battery cover.
3. Slide the CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET to ALARM SET.

Note: If the /ON/SENSOR/OFF/LOCK is in the LOCK position, the alarm cannot be set.

4. Press the MONTH/HR. to set the hour.
5. Press the DATE/MIN. to set the minutes.
6. Slide the CLOCK MODE/ALARM SET/TIME SET/CALENDAR SET to CLOCK MODE.
7. Replace the battery cover.

USING THE ALARM (ALM ON)


1. Slide the SNOOZE/ALM ON/ALM OFF to SNOOZE. Zz () appears on the DISPLAY when the alarm is activated.

Note: If the /ON/SENSOR/OFF/LOCK is in the LOCK position, the alarm cannot be activated.



2. When the alarm sounds, slide the SNOOZE/ALM ON/ALM OFF to ALM OFF to turn off the alarm.

Note: The alarm will not sound again.

 
USING THE MICROBEAM™ DUAL LEDS (SENSOR)

1. Slide the /ON/SENSOR/OFF/LOCK to SENSOR.
2. Lift the unit and the flashlight will turn on for 10 minutes.
3. Place the unit down and the flashlight will turn off.

USING THE MICROBEAM™ DUAL LEDS (ON)

1. Slide the /ON/SENSOR/OFF/LOCK to ON. The flashlight remains on.
2. Slide the /ON/SENSOR/OFF/LOCK to OFF to turn the flashlight off.

LOCKING THE MICROBEAM™ DUAL LEDS FOR TRAVEL (LOCK)


Slide the /ON/SENSOR/OFF/LOCK to LOCK. The flashlight will not turn on when the unit is lifted.

SELECTING C°/F°

1. Lift the BATTERY DOOR LATCH.
2. Remove the battery cover.
3. Press C°/F° to select Celsius or Fahrenheit.

ACTIVATING THE BACKLIGHT

Press the SNOOZE/BACKLIGHT to activate the backlight.

Note: If the /ON/SENSOR/OFF/LOCK is in the LOCK position, the backlight cannot be activated.

LOW BATTERY INDICATOR

The low battery indicator appears on the DISPLAY when the battery life is low.

CARE AND MAINTENANCE

- Wipe with a soft, dry cloth.
- If the unit is heavily stained or soiled, wipe with a moistened cloth.
- To avoid damage, do not use any cleaning agents or abrasive cleaners.

SPECIFICATIONS

Battery Power: 4 AAA Batteries

Light: 2 LED Bulbs

Dimensions (approx): 1"w x 2 1/4"d
x 3 3/4" h

Weight (approx): 4.5 oz. with Batteries

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers

other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.