

 
## QUICK SETUP GUIDE

# MINI WIRELESS PRO CONTROLLER FOR SWITCH

**NX-SWLCA**

## PACKAGE CONTENTS


- Mini Wireless Pro Controller
- USB A to C Charging Cable



Before using your new product, please read these instructions to prevent any damage.

# SAFETY INFORMATION

- Use the product only as instructed. Read all instructions before operating the product.
- Do not disassemble any of the components.
- Do not place or store the product in a humid area and do not expose it to water or rain.
- Failure to follow these directions may void the warranty.

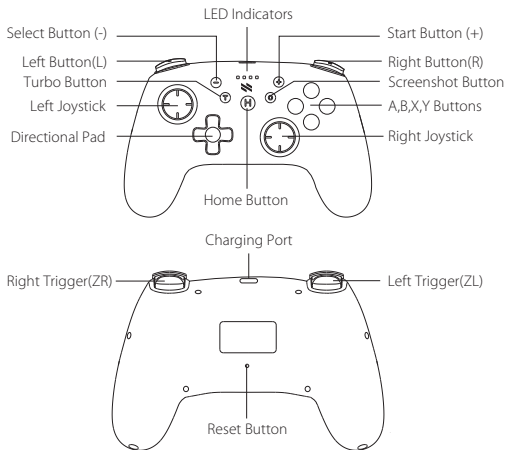

# CONNECT WITH NINTENDO SWITCH

## Wireless Connection

1. From the Switch HOME menu, select 'Controllers> Change Grip and Order.
2. Following the instructions on the screen, press and hold the 'Home Button' for at least one second on the controller to pair.

NOTE: After controller is paired once, press the 'Home Button' and it will autoconnect next time.



## Wired Connection

1. Turn on the 'Pro Controller Wired Communication' within the Switch System Setting>Controllers and Sensors>Pro Controller Wired Communication: On
2. Insert the USB cable into a USB port on the Nintendo Switch dock. Connect the other end of the cable to the controller.
3. The controller will automatically connect and the LED indicator light will blink slowly.

# CONNECT WITH PC

## Wired Connection

### X-Input Mode

1. Using the included USB-C Cable, connect to the USB-C port at the top of the controller and connect the other end to an available USB port on the PC.
2. The controller LED2 will light up after connection. You can play XBOX platform games on your PC in wired mode, which is the default mode for wired PC connection.

### Pro Controller Mode

1. Press and hold the '(-) Select button' and '(+) Start button' for 3 seconds.
2. The controller will be reconnected to the PC, and after successful connection, LED1 will light up after connection.
3. The device name recognized by PC is "Pro Controller". You can play Steam platform games on your PC in wired mode.

### D-Input Mode

1. Press and hold the '(-) Select button' and '(+) Start button' for 3 seconds.
2. The controller will be reconnected to the PC, and after successful connection, LED3 will light up after connection.
3. The device name recognized by PC is "PC Gamepad".

## **HARD RESET**

1. Find the small hole 'Reset Button' on the back side of the controller.
2. Use a straightened paperclip to press the button.
3. The controller will turn off. Press the 'Home Button' to turn the controller back on.

## **STANDBY MODE**

1. The controller is in wireless connection state and will automatically power off after 5 minutes without any operation;
2. Press the 'Home Button' to wake up the controller.

## **SENSOR CALIBRATION**

1. Turn off the controller.
2. Press and hold the 'Home Button', '(-) Select Button' and 'B Button' simultaneously for 2 seconds to enter the calibration mode, the LED LED1,2 and LED3,4 will flash alternately.
3. Place the controller on a flat surface and press the '(+) Start Button' to calibrate. The LED will turn off when calibration is complete.

# **TURBO MODE**

## **Configurable Buttons**

The A/B/X/Y, Left Button, Right Button, Left Trigger and Right Trigger.

## **Turbo Setup**

Press and hold the Configurable button, then press the 'T Button' once to enable the Turbo option. Repeat this operation to cycle through the Turbo option(Semi-automatic, Automatic, Off)

## **Clear all Turbo Buttons**

1. Hold the 'T Button' and the '(-)Select Button' simultaneously for 1 second.
2. Turbo will be automatically disabled if the power is off or disconnected.

## **Adjust Turbo Speed**

There are three speed option:

- Fast: 20 presses per second.
- Medium: 12 presses per second(Default)
- Slow: 5 presses per second.

Hold the 'T button' and press up or down on the 'Right Joystick' to select the desired turbo speed.

## TROUBLESHOOTING

### Controller will not power on

If the controller will not turn on, it may be out of battery. Allow the controller to charge for 30 min and try again.

### Controller keeps disconnecting

If the controller keeps disconnecting, make sure you are close enough to the Nintendo Switch console. Make sure there is no obstacles in the way that will impede the connection.

### Controller is unresponsive

The controller may need a hard reset. Use a straightened paperclip to press the 'Reset Button'.

## SPECIFICATIONS

<b>Input Charging Voltage</b>	USB-C input 5V
<b>Bluetooth Version</b>	5.3
<b>Connectivity Range</b>	25ft
<b>Battery</b>	500mAh
<b>Charge Time</b>	Approx 3hours
<b>Cable Length</b>	2.6ft (0.8M)

# LEGAL NOTICES

## FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**FCC ID: WP8-NX-SWLCA**

## ONE-YEAR LIMITED WARRANTY

Visit [www.next-accessories.com](http://www.next-accessories.com) for details.

This product is not approved, endorsed or affiliated with Sony.

©2025. All Rights Reserved.

Made in China

English V1-24-1014