

USER MANUAL

ELECTRIC FOOD WARMER

MODEL: BW601



Please read this manual carefully before using the machine

EN

IMPORTANT SAFEGUARDS

Please carefully read and follow these instructions below in order to avoid any injury or property loss. Failure to follow safety warnings or incorrect use may cause accidents.

1. Do not touch it or its plug with wet hands.
2. Do not touch it after its connecting main power socket to avoid any scald.
3. Do not immerse cord or parts in water or other liquid.
4. Do not place it close to flammable materials like curtains, gas, oil paper, alcohol etc.
5. Do not disassemble or repair it on your own to avoid the injury and any damage.
6. Do not allow childrent use it alone and keep it away from the place where infant or little children can touch to avoid shock or scald.
7. Do not use it on metal table or surface since it can heat the metal countertop.
8. Do not put airtight food like can, airtight container, etc directly on it to avoid thermal expansion.
9. Do not rinse it with water to prevent water from going inside.
10. Do not put heavy objects on it and scratch it by sharp objects.
11. Do not clean it with toluene, acid lotion, kerosene, alcohol or chemical reagents to avoid discoloration.
12. If you want to extend the food warming time, please cover the food with a lid or aluminum foil.

- 2 -

 
DO's

1. Please use a power socket of >10A separately for it.
2. Please plug off the power socket immediately after its surface is cracked.
3. Please remove some dirt or oil in time to avoid damage or discoloration.
4. Please contact us if the power cord is damaged and don't buy it by yourself.
5. Before clean it, turn it off and unplug it first.

Note:

- Household use only.
- It may have some amount of odor when it is used for the first time.

Product Parts

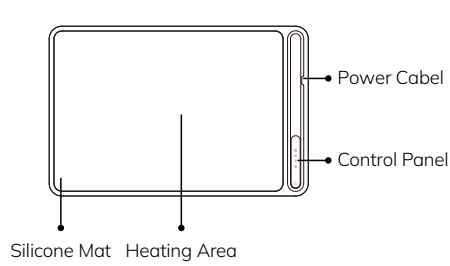

- 3 -

EN

Temperature Modes

Three temperature modes to select

How to use



1. Clean its appliance and panel to ensure that the heating surface and the bottom are no water, rice and other debris.



Temperature Mode Switch
Change temperature among three modes



Power Key
Turn it on or off



- 4 -



 
5. Press temperature mode switch to select your desired temperature.



6. Press power button again to turn it off and it will automatically shut off without any operation for 5 hours.

How to maintain and clean

1. Maintenance



- 1.1 Put it at dry environment and keep it dry.



- 1.2 Unplug its power if not use for a long time.

2. Cleaning



- 2.1 Unplug its power from socket and cool it down before clean it.



- 2.2 Clean its surface with a soft damp cloth if there is some dust on it, then store it after it is dry.

- 5 -

 


- 2.3 If there is oil on the surface, please use a soft damp cloth with a small amount of toothpaste or mild detergent to wipe until no residue is left. Do not clean it with toluene, acid lotion, kerosene, alcohol or chemical reagents.



- 2.4 Do not immerse it or its parts in water or other liquid to wash it.


How to store



1. After using it, please wait for 15 minutes to cool it down and unplug its cord from the socket.



 2. Roll up the plate from one side to the other as picture shows.



3. Put it and its cable into the bag.

- 6 -

Technical Parameter

Voltage	UK: 220-240V US: 120V 50/60HZ	Power	250W
Temperature	Low/Mid/High	Product Size	610*400*12mm
Heating Areas	Whole	Weight	1.3kg

Attached Parts



Trouble Shooting

Problem	Reasons	Solutions
The indicator light is not on	Its plug is loose It is damaged	Its plug is loose Please contact our customer service
Do not heat	No power It is damaged	Please turn it on Please contact our customer service
Buttons are no functions	The control panel is dirty It is damaged	Please clean it and try it again Please contact our customer service
All indicator light flash but not heat	It is damaged	Please contact our customer service

If any questions, please contact us freely.

- 7 -

FAQ

1. Can raw food be cooked on the Food Warmer?
• No, it is NOT a cooking appliance. It is designed to keep already-cooked food warm.
2. Can leftovers be reheated or defrosted on the Food Warmer?
• No, it is NOT designed to reheat food, only to warm already-cooked hot food.
3. Can I put plastic containers on the Food Warmer?
• No, you can only put heat-resistant containers, pots, and pans on the Food Warmer. Things like ceramic casserole dishes, metal cookware, and some glass containers are acceptable. Most Pyrex is ok to use on the Warmer but be sure to check that it's heat-resistant before using.
4. Can aluminum foil, plastic wrap, or plastic utensils be placed on the Food Warmer?
• No.
5. Can I use the Food Warmer on any surface?
• No, do not use it on metal tables or surfaces since it can heat the metal countertop.
6. Can the Food Warmer be kept warm all the time?
• NO, after selecting the temperature for food heating, If there is no button operation within 6 hours, it will automatically enter the standby state, and all LED lights will go out to stop heating.
7. How to keep food warm longer?
• If you want to extend the food warming time, please cover the food with a lid or aluminum foil.

Warranty

We offer a one-year limited warranty for the product. If you need any assistance, please make sure to have your Amazon Order ID ready when contacting us for service. Please write to us at support@laudlife.com.

The following are not covered under Laudlife's warranty:
1. Improper installation, delivery, or maintenance.
2. Misuse or abuse of the product, which results in failure.
3. Damage to the product due to accidents, fires, floods, or other acts of God.
4. Damage caused by the user attempting to repair or modify the product.
5. Damage caused by the use of an improper power supply or voltage.

- 8 -