

# OPTIMISES ROOT ZONE DRAINAGE WITH AUTOPOT WATERING SYSTEMS

## REMOVES THE NEED FOR A PEBBLE LAYER IN THE BASE OF YOUR POT

# DESIGNED FOR EASY OPTIONAL INTEGRATION WITH AIRDOME



AirBase Square fits AutoPot 8.5L / 2.2 gal and 15L / 3.9 gal plastic pots as used in 1Pot modules (pictured) and easy2grow modules





AirBase Round fits AutoPot 25L / 6.6 gal plastic and 20L / 5 gal fabric pots as used in XL and XL FlexiPot modules



AIRBASE SQUARE



AIRBASE ROUND















## PRODUCED FROM TOUGH ABS PLASTIC - EXTENSIVELY REUSABLE

## REMOVEABLE CENTRE SECTION ACCOMMODATES AIRDOME

## AIRDOME AERATES ROOT ZONE - FOR SUPERCHARGED GROWTH

AIRBASE SQUARE FOR: AutoPot 8.5L / 2.2gal & 15L 3.9gal plastic pots









AIRBASE ROUND FOR: AutoPot 25L / 6.6gal plastic & 20 L / 5gal fabric pots

#### SETUP GUIDE

Follow directions below for AirBase Square and AirBase Round













Prepare your pots with root control as usual. Refer to vour system instructions for relevant guidance.

If using AirBase without AirDome go to Step 2

If using AirBase with AirDome go to Step 3



#### If using without AirDome

Place AirBase into the base of your pot.

Go to Step 5




#### If using with AirDome

Remove AirBase centrepiece.

Place AirBase over your assembled AirDome

Ensure air pipe is fitted into notch on underside of AirBase.

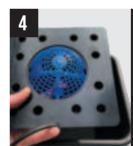

#### If using with AirDome

Lower the AirDome and AirBase into pot. Ensure air pipe is fitted into the notch on the side of the AirBase.

Your air pipe routes up over the pot edge to your air pump.



#### All configurations

Pour a small amount of medium into the pot (5a).

Push the medium down through holes in the Base [5b] - this is essential for capillary action to occur.



### All configurations

Fill pots with medium and pot up plants. Water through pots and allow to drain outside the tray.

your module trays.





