

Akai Fire Cheat Sheet

Note these helpful shortcuts as you get started with your Akai Fire.

Mode(s)	Button Shortcut	Function
All	 + 	Toggles between open windows in FL Studio.
All	 + 	Undo an action (navigates back through FL Studio's undo history).
All	 + 	Selects a channel.
All	 +    	Adjusts pad brightness / Adjusts pad saturation / Toggles pad visualizer on and off / Toggles display visualizer on and off.
All Except Performance	 + 	Selects a channel.
Step	 + 	Moves the view one step left or right.
Step	 (press)	Toggles between scrolling the channel view and assigning the selected channel to a mixer insert.
Step	 + 	Edits a single step's pitch.
Step	 +    	Edits a single step's Velocity / Pan / Mod X / Mod Y.
Drum	 (press)	Toggles between scrolling the channel view and selecting the drum pattern types.

Note	 (press) SELECT	Toggles between scrolling the channel view and selecting the note scale.
Note		Transposes the grid's pitch up/down by one octave.
Note	 + 	Transposes the grid's pitch up/down by one semitone.
Perform	 MUTE MUTE	Stops current track's playing clips.
Perform	 PATTERN 	Changes the pad layout position in the playlist.
Perform	 +  SHIFT SNAP	Selects how clips will move and quantize to the grid.
Perform	 +  + 	Scene+
Perform	 +  ALT SNAP	Triggers scene.
Browser	 (press) SELECT	Opens selected folder, opens context menu for current item, or selects current menu item.
Browser	GRID 	Selects current menu item (or previews, if applicable).
Browser		Closes current item's context menu.
Accent	 SELECT	Edits the Accent default pitch.
Accent	   	Edits the Accent default Velocity / Pan / Mod X / Mod Y.