

VORTEX

CORE
PLUS

User Manual

Connection

2.4Ghz

Fn1 + AltR + R (Press for 3 seconds)
LED Flashes Yellow Light

Bluetooth

Fn1 + AltR + Q (Press for 3 seconds)
LED Flashes Red Light **Device 1**

Fn1 + AltR + W (Press for 3 seconds)
LED Flashes Green Light **Device 2**

Fn1 + AltR + E (Press for 3 seconds)
LED Flashes Blue Light **Device 3**

1. Turn on the power switch, hold down
Fn1 + Alt(R) + Q / W / E for 3 seconds
to enter pairing mode.

2. The device will display Core plus #1 /
#2 / #3. Press confirm to complete
the pairing process.

USB

Fn1 + AltR + T USB Mode

Fn1 Combo Key

FN1 +

Esc = ~	<> = PgDn
Shift_L+Esc = ~	:: = Ins
Q = 1	A = F1
W = 2	S = F2
E = 3	D = F3
R = 4	F = F4
T = 5	G = F5
Y = 6	H = F6
U = 7	Z = F7
I = 8	X = F8
O = 9	C = F9
P = 0	V = F10
{[= -	B = F11
}] = =	N = F12
Backspace = Del	M = APP
Tab = Capslock	,< = End
K = Home	
L = PgUp	

Win_L = **Windows lock**

Alt_L+Alt_R
= **Hold for 5 seconds to reset to factory default settings**

The LED indicator light on top of the keyboard will flash white light for 5 times.

Fn2 Combo Key

FN2 +

I = ↑
K = ↑
J = →
L = →

LED Control

FN2 +

A = Lighting Effect 1
S = Lighting Effect 2
D = Lighting Effect 3
F = Lighting Effect 4
G = Lighting Effect 5
H = Lighting Effect 6
Z = Lighting Effect 7
X = Color Switch
C = Backlight Brightness +
V = Backlight Brightness -
N = Lighting Effect Speed +
B = Lighting Effect Speed -

Battery : AAA 1.5V *2(Alkaline or carbon zinc batteries)
Working Current : 7mA — Release the key for 3 seconds will enter into standby mode
Standby Current : 50uA — Standby for 15 minutes will enter into hibernation mode
Hibernation Current : 30uA
Rated Input Power : 5V ~ 500mA

Product Name : Mechanical Keyboard
Model Name : VTK-5000
Product Size :
L*W*H : 26.7*9.5*2.2 cm ± 0.3

CUSTOMER SERVICE
cs@vortexkeyboard.com

OFFICIAL WEBSITE
www.vortexgear.store

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Download VIA
Related Documents



Company Name : Vortexgear Co., Ltd.
Company Address : 4F., No. 14, Ln. 181, Sec. 2, Jiuzong Rd., Neihu Dist., Taipei City, 114709, Taiwan

VORTEXKEYBOARD

VORTEX

CORE
PLUS

使用說明

2.4Ghz

Fn1 + Alt(R) + R (長按3秒) 配對 2.4Ghz
LED指示燈閃黃燈

藍芽

Fn1 + Alt(R) + Q (長按3秒) 配對藍芽設備 1
LED指示燈閃紅燈

Fn1 + Alt(R) + W (長按3秒) 配對藍芽設備 2
LED指示燈閃綠燈

Fn1 + Alt(R) + E (長按3秒) 配對藍芽設備 3
LED指示燈閃藍燈

1. 打開電源開關，按著Fn1 + Alt(R) + Q / W / E 3秒後進入配對模式，
2. 設備端顯示Core plus #1 / #2 / #3，按下確認後即配對完成。

USB

Fn1 + Alt(R) + T 切換為 USB 模式

連接方式

Fn1 組合鍵

Fn1 +	Esc = [Esc]	[>] = PgDn
	Shift_L+Esc = [~]	[::] = Ins
	Q = 1	A = F1
	W = 2	S = F2
	E = 3	D = F3
	R = 4	F = F4
	T = 5	G = F5
	Y = 6	H = F6
	U = 7	Z = F7
	I = 8	X = F8
	O = 9	C = F9
	P = 0	V = F10
	[[= -	B = F11
]] = =	N = F12
	Backspace = Del	M = APP
	Tab = Capslock	[,<] = End
	K = Home	
	L = PgUp	

Win_L = 鎖定Window鍵
 Alt_L+Alt_R長按5秒
 = 恢復出廠設置
 LED 亮白燈五次

Fn2 組合鍵

Fn2 +	[I] = [↑]
	[K] = [↓]
	[J] = [←]
	[L] = [→]

LED 燈效

Fn2 +	[A] = 燈效切換 1
	[S] = 燈效切換 2
	[D] = 燈效切換 3
	[F] = 燈效切換 4
	[G] = 燈效切換 5
	[H] = 燈效切換 6
	[Z] = 燈效切換 7
	[X] = 顏色切換
	[C] = 背光亮度增加
	[V] = 背光亮度減弱
	[N] = 燈光效果速度加快
	[B] = 燈光效果速度減慢

電池規格: AAA電池 / 電壓: 1.5V *2
 (建議使用鹼性電池或碳鋅電池)
 工作電流: 7mA 鬆開按鍵3秒進入待機
 待機電流: 50uA 待機15分鐘進入休眠
 休眠電流: 30uA
 額定輸入: 5V 500mA

產品名稱: 機械鍵盤
 產品型號: VTK-5000
 產品尺寸: L*W*H: 26.7*9.5*2.2 cm ± 0.3

公司名稱: 沃特斯有限公司
 公司地址: 台北市內湖區舊宗路二段181巷14號4樓

下載 VIA 相關文件



> NCC警語

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

官方網站
www.vortexgear.store
 顧客服務
cs@vortexkeyboard.com

VORTEXKEYBOARD