 


RU-05

Beverage Refrigerator

User Manual

SKU: BR004-150BL-USZX

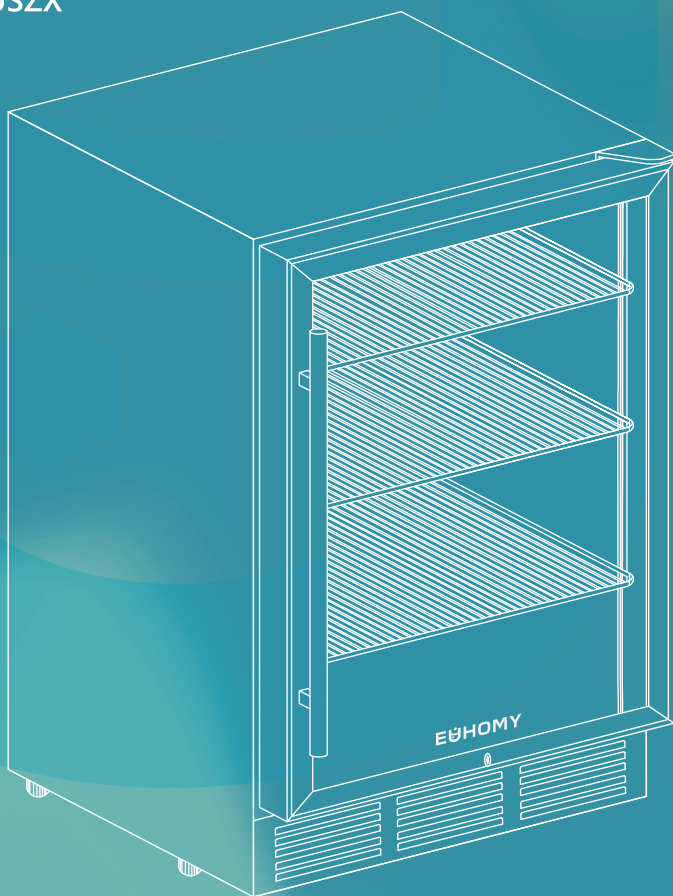

THANK YOU

for purchasing the Euhomy ice maker



Scan the QR code using
a mobile device

ACTIVATE YOUR WARRANTY

<https://euhomy.com/pages/activate-warranty>



RECORD THIS INFORMATION

Model Number RU-05

Serial Number _____

Date of Purchase _____

Store of Purchase _____
(Keep receipt)

TIP

Check the back or side of the
machine for the serial number
on the nameplate.

For ice maker, it's usually on the bottom
or side. If you can't find it, don't worry — it
won't affect your warranty registration.

CUSTOMER SERVICE



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

JOIN US



euhomyofficial



EuhomyOfficial



Euhomy_global



euhomy



SCAN HERE to share tips, get
support, and connect with fellow
enthusiasts!

Contents

Important Safety Instructions	02
Key Components and Structure	04
Installation Instructions	06
Control Panel and Display Overview	10
Cleaning and Maintenance	11
FAQs	12
Troubleshooting	13
Specifications	16
Warranty Policy	17

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using the appliance.



Risk of Fire or Explosion—Flammable Refrigerant Used

Risk of fire or explosion. Flammable refrigerant used. Consult repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.

Risk of fire or explosion. Dispose of property in accordance with federal and local regulations. Flammable refrigerant used.

Risk of fire or explosion. Due to puncture of refrigerant tubing. Follow handling instructions carefully. Flammable refrigerant used.

Child Safety

1. **NEVER** allow children to operate, play with, or enter the unit.
2. Remove doors, latches, and locks to prevent child entrapment, before you throwing away the unit.

Installation & Placement

3. **DO NOT** kink or pinch the power cord.
4. Ensure that power cord is **not** tangled or damaged when placing the unit.
5. Keep ventilation openings on both the unit enclosure and **built-in** structure unobstructed.

Electrical Safety

6. Unplug the unit or disconnect power before cleaning or servicing. Failure may cause electrical shock or death.
7. Plug the refrigerator into its own individual grounded **3-prong** electrical outlet. Match voltage to the rating label (**115 AC Only, 60Hz**).
8. **DO NOT** immerse, plug in, or submerge the unit in liquids.
9. Use non-switched outlets to ensure full insertion.

 
10. **DO NOT** operate with wet hands, on wet surfaces, or in water.
11. **NEVER** cut or remove the third ground prong from the power cord.
12. Disconnect by gripping the plug firmly and pulling straight from the outlet.
13. Replace frayed or damaged cords immediately. **AVOID** using cracked or abraded cords.
14. Replace damaged cords only through the manufacturer, service agent, or qualified personnel.

Hazard Prevention & Disposal

15. For storing and cooling beverages only. **DO NOT** store perishable foods or medical supplies.
16. **DO NOT** place electrical appliances in storage compartments unless recommended by the manufacturer.
17. **DO NOT** store explosive substances (e.g., aerosol cans with flammable propellants) in this appliance.
18. **DO NOT** use mechanical devices or other non-manufacturer-recommended means to accelerate defrosting.
19. **NEVER** clean the beverage refrigerator's parts with flammable fluids, as they pose fire or explosion risks.
20. Prevent drink contamination. Prolonged door opening will cause a significant temperature rise inside.
21. For long-term non-use, turn off power, defrost, clean, dry, and leave the door slightly ajar to prevent mold growth.

KEY COMPONENTS AND STRUCTURE

1. Outer Cabinet
2. Control Panel
3. Hinge
4. Shelves
5. Door with Handle
6. Front Air Vent
7. Leveling Legs

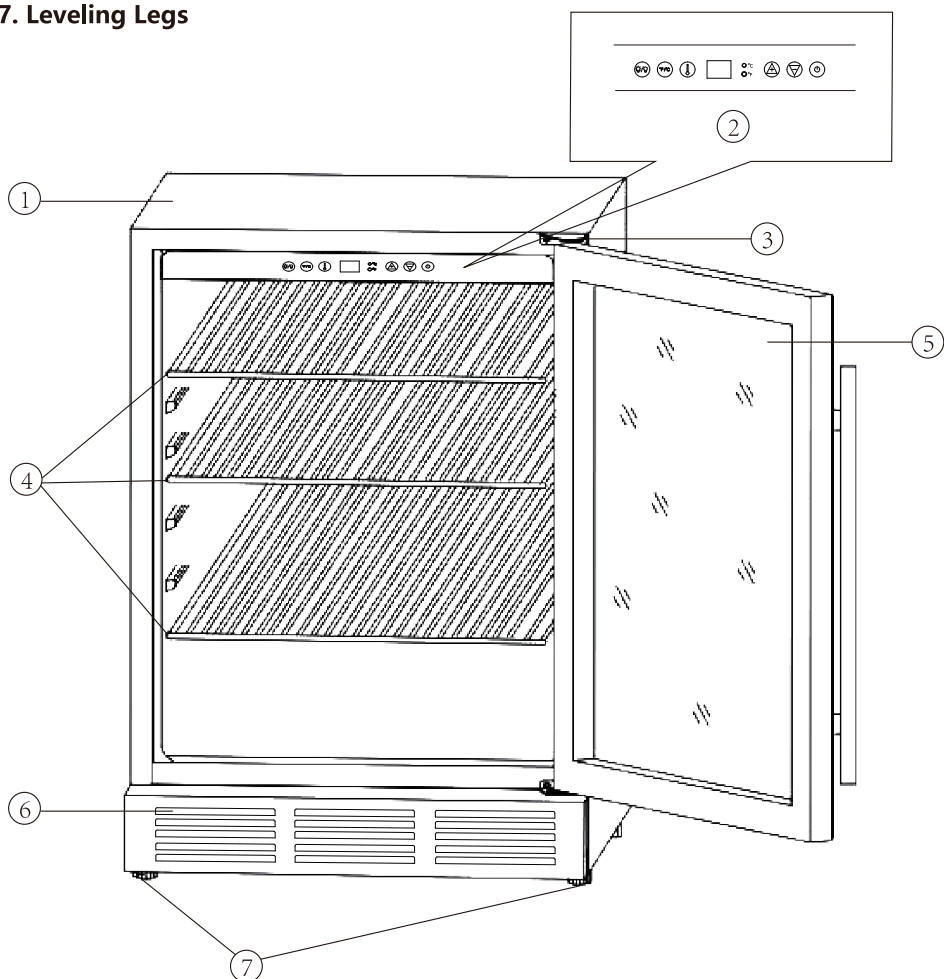

Accessories

1 x Stainless Steel Handle

6 x Screws

4 x Leveling Legs

6 x Plugs (used to block the screw holes of the hinges)

2 x Extra Plugs (used to block the screw holes if the door handle is not installed)

 
1 x Upper Hinge

1 x Lower Hinge

3 x Shelves (not pictured; these are inside the machine)




6 x Screws



1 x Lower Hinge



 1 x Upper Hinge



1 x Stainless Steel Handle



4 x Leveling Legs



 
6 x Plugs



2 x Extra Plugs

INSTALLATION INSTRUCTIONS

1.Installing the Beverage Refrigerator

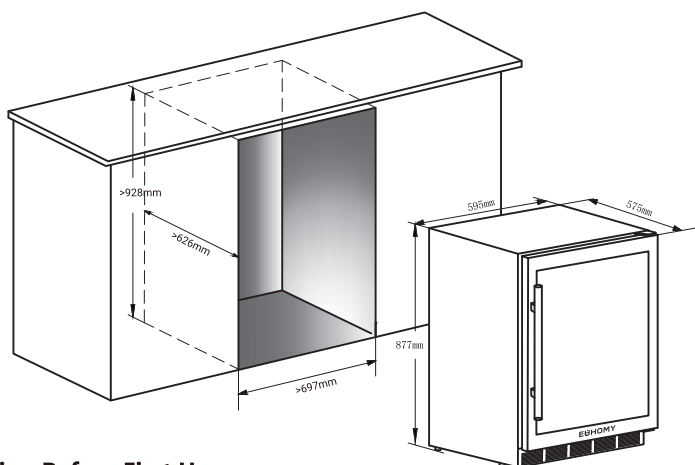

Step 1: Preparing Before First Use

- 1.Remove all packaging material. This includes the foam base and all adhesive tape holding the accessories inside and outside.
- 2.Check that all accessories are included. If anything is missing, contact our customer service. (email support@homyd.com or call us at +1-833-632-0897[US]).

Step 2: Choosing a suitable position

1. This appliance is designed for both **built-in** and **free-standing** installation. The air outlet of this beverage refrigerator is at the front, so it is sufficient to leave a **5cm(2 inches)** gap around the top, bottom, and all sides.
2. Keep away from high-heat sources such as ovens and grills.
3. Install in a location away from wind, rain, water spray, and dripping water.
4. Level the unit to ensure proper operation; multiple adjustments may be needed.
5. Place in a well-ventilated area with ambient temperature between **10°C (50°F)–32°C (90°F)** and humidity under **60%**.

Step 3: Allowing the unit to settle

Before plugging in the beverage refrigerator, let it stand upright for at least **24 hours** to let the refrigerant settle down.

Step 4: Cleaning the beverage refrigerator

Clean the interior surface with lukewarm water using a soft cloth before plugging.

2.Installing Stainless Steel Handle

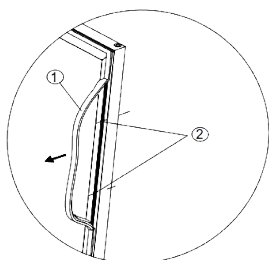 


fig 3.2.1

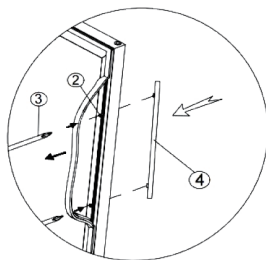 


fig 3.2.2

- 1 sealing
- 2 screws
- 3 Phillips screwdriver
- 4 Handle

Step 1:

Pull away the door gasket in the area where the handle is to be installed.(as in fig3.2.1)

Step 2:

Align the handle with the pre-installed screws on the door frame. Use the Phillips screwdriver to tighten the screws until the handle is firmly secured against the frame.(as in fig 3.2.2)

Step 3:

Return the door gasket to its original position.

Note:

1. The gasket can be easily removed by hand; no tools are necessary.
2. **DO NOT** over-tighten screws when installing the door handle.
3. This beverage refrigerator has a stainless steel handle, not essential for operation. If not using the handle, follow **Step 1** to access and remove pre-installed screws. Place 2 decorative plugs into the two holes. Then complete **Step 3** to reset the door gasket.

3.Installing the Shelves

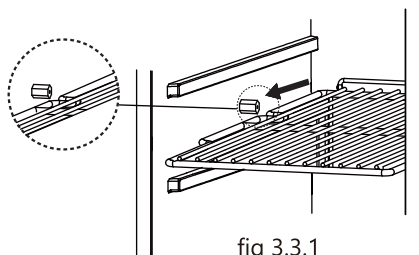 


fig 3.3.1

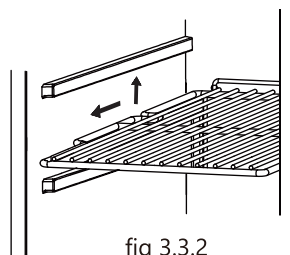 


fig 3.3.2

1. Set the shelves—Align each shelf with the stopper position and push it fully into the unit. Ensure it is securely seated before placing any bottles on it.

 
2. Remove the shelves—Pull each shelf out to the shelf post, as shown in **fig 3.3.1**. Lift it up again, then slowly pull the shelf out, as shown in **fig 3.3.2**.

Notes:

1. To prevent damage to the door gasket, make sure the door is fully open before pulling out the shelves.
2. The beverage refrigerator is equipped with three wire shelves. Each shelf is mounted on telescopic rails with stoppers on both sides of the track to prevent bottles from falling.

4. Reversing the Door

The beverage refrigerator is shipped with the door hinge brackets attached on the right side. The door may be reversed to allow it to be open from the left side.

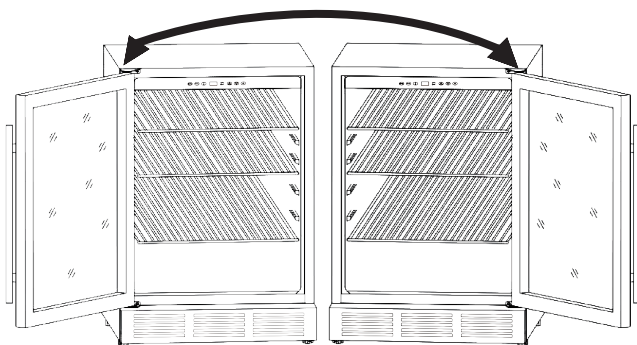

Step 1: Unplug the Power Cord

Before starting door reversal, ensure that the unit is unplugged.

Step 2: Remove Plugs

Use a sharp implement to lever out the plugs (there are three on the door frame, both at the top and bottom, and another one on the door). If the plastic plugs are broken, disregard the broken plastic plugs. The holes that will be used to move the hinges are already pre-drilled.

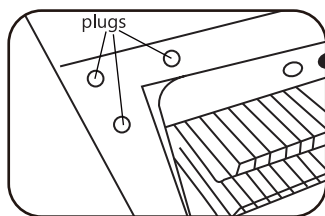 


fig3.4.1

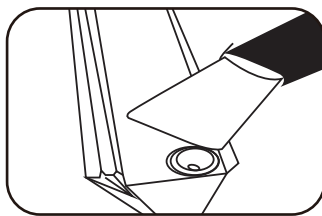 


fig3.4.2

Note: For correct reverse installation, follow the instructions as shown in **Steps 3–5** and refer closely to the illustrations.

Step 3: Take Off the Door

Commence disassembly solely from the bottom of the door following the below steps:

1. Lay the beverage cabinet flat or tilted with the door facing upward to change its opening direction.
2. Use a hexagonal screwdriver to remove the two screws connecting the door, as shown in the **figure 3.4.3** (be careful not to lose the metal anti-slip washers in between).
3. Lift slightly as depicted in the illustration to extract the connecting piece between the door and the hinges(i.e., lift from the hinge pin.)

Note: Ensure the preservation of the connecting piece under the door and hinges, for they will be required for subsequent steps.

4. Tilt the door(as shown in the **figure 3.4.6**) slightly to detach it.

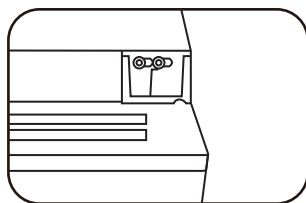 


fig 3.4.3

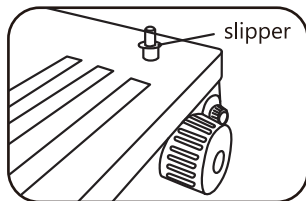 


fig 3.4.4

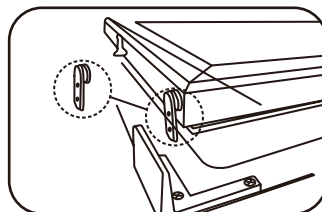 


fig 3.4.5

Step 4: Install the Door on the Opposite Side

- A. Use a Phillips screwdriver to disassemble the hinge brackets from the machine(save the removed screws for the next step).
- B. Utilize the screws removed earlier to affix the left hinge brackets found in the accessories onto the door frame of the opposite side of the machine.
- C. Transfer the saved the connecting piece(shown in the **Fig3.4.7**) to the underside of the door on the opposite side.
- D. Incline the door and insert it onto the hinge bracket above the machine.
- E. Proceed to move the lower part of the door into the hinge bracket pin.
- F. Secure the two hex screws for the lower hinge bracket, ensuring you don't lose the intermediary metal anti-slip washers.

Step 5: Insert the plugs removed in the second step into the holes on the side from which the door was removed.

Step 6: Settle Down the Refrigerant

Wait at least **24 hours** before plugging in the refrigerator to allow the refrigerant to settle down. Then, plug in the unit.

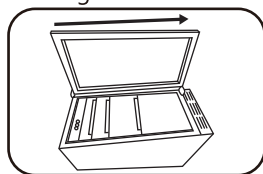 


fig 3.4.6

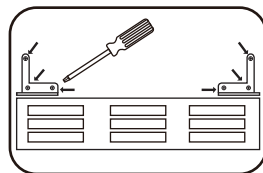 


fig 3.4.7


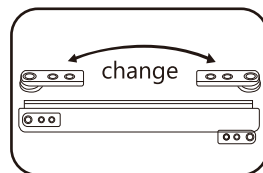 


fig 3.4.8

CONTROL PANEL AND DISPLAY OVERVIEW

 - 1. After plugging the beverage refrigerator into a wall outlet, the refrigerator will turn on automatically, and the LCD screen will display the temperature inside the unit.
- 2. After setting your desired serving temperature, allow the refrigerator to cool down for **3** to **4** hours before placing wine bottles in the beverage refrigerator.

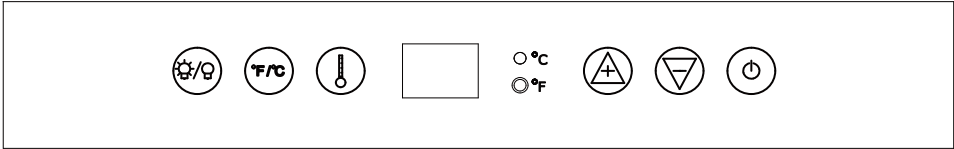

	Press once to turn ON the cooler. Press and hold about 3 seconds to turn OFF the cooler.
	Press to increase or press to decrease the temperature in 1 degree increments between 3°C and 18°C or between 37°F and 65°F.
	Press to begin adjusting the temperature.
	Toggles the temperature display between Celsius and Fahrenheit.
	Press once to turn the interior light ON or OFF.

Recommended temperature settings

- Beverage: 3°C - 10°C (37°F - 50°F)
- Sparkling wines: 5°C - 8°C (41°F - 46°F)
- Dry/white wines: 9°C - 14°C (48°F - 57°F)
- Rose wines 10°C - 11°C (50°F - 52°F)
- Red wines: 15°C - 18°C (59°F - 64°F)

CLEANING AND MAINTENANCE

Caution: Unplug the beverage refrigerator before cleaning or performing maintenance.
Never use harsh cleansers or scouring pads to clean any part of the beverage refrigerator.

Cleaning the machine

1. Turn off the power, unplug the beverage refrigerator, and remove all drinks, including shelves.
2. Remove and wash the shelves with a mild detergent solution.
3. Wash the inside surfaces with a solution of warm water and baking soda. The solution should be about two tablespoons of baking soda to one quart of water.
4. Wring excess water out of the sponge or cloth when cleaning the area near the controls, or any electrical parts.
5. Maintaining the cleanliness and suppleness of the gaskets is imperative to guarantee an effective seal. Adhere to the general guidelines to clean the door gaskets every three months. A light application of petroleum jelly on the hinge side of the gaskets will preserve their suppleness and ensure a secure seal.
6. Re-insert the shelves and dry the whole unit thoroughly.

Defrosting the machine

1. Turn off the machine using the button, and stop the compressor, and unplug the power cord to melt the frost layer.
2. Allow the frost to melt on its own, making sure that the internal drain is not blocked.
3. During this time, the melted frost will flow through the internal drain pipe into the water collection tray on top of the compressor. The heat of the compressor will evaporate the liquid.
4. Clean the interior with warm water and a soft cloth, thoroughly, wipe dry, and reset the temperature, and cool for **3-4 hours**.
5. Put the drinks back into the beverage refrigerator.

Note:

1. **Never** use mechanical devices or methods not recommended by the manufacturer to accelerate defrosting.
2. If the drip tray is overfilled, it will need to be cleaned manually.

Power Interruptions

Most power failures are corrected within a few hours and should not affect the temperature of your beverage refrigerator. If the power is off for an extended period of time, proper steps should be taken to protect the contents.

Saving energy tips

1. The beverage refrigerator should be located in the coolest area of the room.
2. Ensure that the beverage refrigerator is adequately ventilated. **Never** cover air vents.
3. Only open the refrigerator door for as long as necessary. Frequently opening the door will affect the internal temperature.

FAQs

Q: Is this beverage refrigerator suitable for outdoor use?

A: This beverage refrigerator is primarily designed for indoor use and is best suited for environments like home kitchens or bars. We recommend keeping it indoors to ensure optimal performance and longevity. If you have any more questions or need further assistance, please don't hesitate to reach out. We're here to help!

Q: Why can't the refrigerator maintain a stable temperature?

A: Due to external factors such as the compressor cycle switch, frequent door openings, high ambient temperatures, or overloading, slight temperature fluctuations are normal. Ensure good airflow around stored items and avoid overloading to maintain optimal performance. Minor temperature changes help sustain cooling efficiency.

Q: Is it possible to change the direction of the door?

A: The orientation of the beverage refrigerator door can be changed. Our manual contains detailed tutorials.

Q: Why is the cooling performance of this refrigerator not effective?

A: Environmental factors, such as ambient temperature, can affect cooling efficiency. Place the refrigerator in a well-ventilated area, away from direct sunlight, and connect it to a stable power source. If the cooling performance still differs significantly from expectations, there may be an issue with the unit. Contact our customer service team for assistance. We're here to help and ensure everything works perfectly for you!

Q: Can the shelves inside the refrigerator be moved?

A: The shelves inside the refrigerator are adjustable and can be moved.

Q: How many beverages can the refrigerator hold?

A: The number of beverages you can store in the refrigerator depends on their size. Typically, it can accommodate a variety of bottles and cans, but the exact number will vary. If you have specific sizes in mind, feel free to contact our customer service team. We're here to help!

Q: Does it keep food securely cold?

A: Our beverage refrigerator can be set to a temperature range of 3°C (37°F) –18°C (65°F), ideal for storing various beverages. It offers different temperature settings to keep drinks at their optimal temperature. It can also store some foods that don't require specific temperature settings. However, for items that need freezing, a freezer specifically designed for food storage is necessary.

Q: What are the warranty specifications?

A: We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team. Thank you very much.

Q: Does this refrigerator need to be installed?

A: This refrigerator requires no installation. Once you receive it, simply let it sit for 24 hours before plugging it in. This waiting period ensures optimal performance.

Q: What is the return and exchange policy for this product?

A: If the beverage refrigerator has any quality issues or arrives damaged, we'll cover the return shipping and provide a return label. For returns due to personal reasons (e.g. if it's no longer needed or the wrong product was ordered), return shipping will be at your expense. For help or more details, please contact our customer service team!


TROUBLESHOOTING

Problem	Possible Cause(s)	Solution(s)
The beverage refrigerator does not operate	The beverage refrigerator may not be plugged in, or the plug may be loose.	Ensure the refrigerator is plugged in and the power outlet has power.
	A house fuse has blown, or the circuit breaker is tripped.	Replace the broken fuse or reset the circuit breaker.
	The beverage refrigerator is turned off.	Press  to turn on the refrigerator.
The beverage refrigerator is not cold enough	Frequent door openings or incomplete door closures.	Close the door tightly and DO NOT open the door too frequently or for a long period of time.
	Temperature setting is not suitable.	Adjust temperature control to cooler setting.
	The door gasket does not seal properly.	Ensure the door gasket is not loose.
	External environment may require a higher setting.	Set a colder setting. Allow several hours for the temperature to stabilize.
	The beverage refrigerator has recently been disconnected for a period of time.	It takes 3–4 hours for the refrigerator to cool down completely.
The compressor turns on and off frequently	The room temperature is hotter than normal.	It's normal for the beverage refrigerator to work harder under these conditions.
	A large amount of contents has been added to the refrigerator.	A large amount of content causes the beverage refrigerator to run more often until the desired temperature is reached.
	Prolonged or frequent door openings.	Open the door less often.
	The temperature has not been set correctly.	Press either  or  to check the set temperature, and set the temperature properly.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.

Problem	Possible Cause	Solution(s)
The light does not work	Not plugged in.	Plug the refrigerator in.
	The circuit breaker tripped, or a there is a blown fuse.	Check the breaker and/or fuses.
	The light button is "off".	Press  to turn the light ON.
Vibrations	The refrigerator is not leveled.	Ensure the refrigerator is level.
	The bottles are vibrating.	Ensure the bottles do not touch each other.
	There is an object under the refrigerator.	Remove the object under the refrigerator.
The beverage refrigerator seems to make too much noise	The refrigerator is not level.	Level the refrigerator.
	Normal noise from the flow of the refrigerant.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your refrigerator. Contraction and expansion of the inside walls may cause popping and crackling noises.
The door will not close completely	The refrigerator is not level.	Level the refrigerator.
	The door was reversed and not properly installed.	Reinstall the door properly.
	The gasket is dirty.	Clean the door gasket.
	The shelves are out of position.	Place the shelves properly.
Moisture build-up on interior or exterior of the beverage refrigerator	This is normal during high humidity periods.	Lower the room humidity.
	This is normal in a high -temperature environment.	Move the refrigerator to a cooler place, and avoid heat and sunlight.
	Prolonged or frequent door openings.	Open the door less often.
	The door does not seal completely.	Check door gaskets for proper seal.

Problem	Possible Cause	Solution(s)
Error Code: E1-E2-E3-E4-E7-E8	A sensor has failed	Contact customer service
The beverage refrigerator was damaged upon receipt	It may have been caused by bumps during transportation.	Contact support@euhomy.com
The beverage refrigerator arrived missing legs or other parts	The machine comes with four legs, plus four extra legs as spares, placed together with the manual. The handle, screws, legs, and other accessories are located inside the refrigerator. Check inside the beverage refrigerator for these accessories.	If you still can't find them, feel free to contact our support team at support@euhomy.com They will respond within 24 hours on business days.

 SPECIFICATIONS

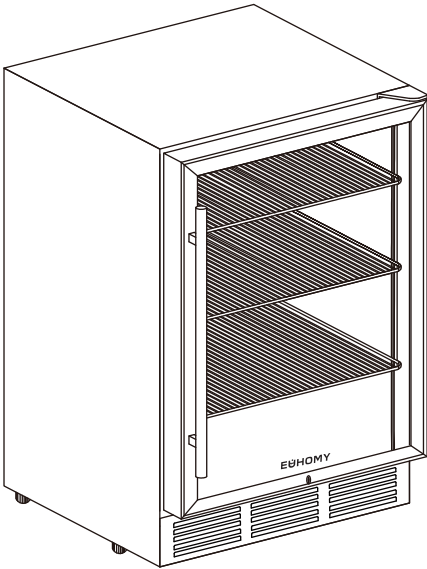

BR004-150 Beverage Refrigerator	
SKU	BR004-150BL-USEH
MODEL	RU-05
VOLTAGE	115V~60HZ
RATED CURRENT	1.5A
REFRIGERANT	R600a,1.1Oz/30g
FOAMING	CYCLOPENTANE
DIMENSIONS(W×D×H)	23.4*24.4*34.5 inches
NET WEIGHT	74.96lbs

WARRANTY POLICY

Euhomy is dedicated to delivering top-notch products and outstanding customer service. We back our products 100% and are here to support you every step of the way.

To activate your warranty, please visit **<https://euhomy.com>**

To request customer service, feel free to contact us anytime!

For further support, feel free to reach out to the Euhomy support team!



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

Business Time: Mon to Fri, 9 AM- 6 PM (ET)

Euhomy 1-Year Limited Warranty

The One-Year (1) Limited Warranty is valid for purchases from this website or official Euhomy purchase channels such as Amazon, TikTok, and Walmart. It covers the original owner and product only, and it isn't transferable. For purchases made through unauthorized resellers, we recommend you contact them directly. Euhomy guarantees the unit is free of material and workmanship defects for one year from the purchase date, as long as it's used under normal household conditions and maintained per the User Manual. This is subject to certain conditions and exclusions as follows:

What is covered?

If the original unit or non-wearable parts are found defective, as determined by Euhomy, we will arrange repair or replace it within one year from the purchase date. If you receive a replacement unit, the warranty lasts for the remainder of the original warranty.

What is not covered?

- (a) Normal wear and tear on the unit or parts, as well as any parts lost or damaged due to human factors after delivery; replacement parts are available for purchase. Feel free to contact us using the methods provided below.
- (b) Damage from misuse, mishandling, accidents, or not following the operating instructions.
- (c) Damage caused by exposure to liquids other than water or foreign substances.
- (d) Repairs or modifications not performed by Euhomy.
- (e) Use in commercial settings or non-household environments (except for commercial models).

How to get service?

If your appliance isn't working properly or if you need any assistance, we offer several ways for you to get in touch with us.

You can reach us by calling **1-833-362-2655** or emailing **support@euhomy.com** directly. For specific product categories, we also offer potential upgrades to enhance your warranty to our VIP service. Our phone lines are open from **Mon to Fri, 9 AM - 6 PM (ET)**, and we normally respond to emails and forms within **24 business hours**. To help us assist you better, we recommend that you register your product online at **1-833-362-2655** and have the appliance with you when you call us. If you reach out via email, sometimes our emails might end up in your spam folder, so please check there to make sure you don't miss our response. The proof of purchase will be needed when you request a warranty service. In addition to our one-year warranty, we offer lifetime technical support. After the warranty expires, you can arrange for service at an additional cost.

Feel free to contact us anytime with any issues.

EUHOMY

Live the *cool life*



support@euhomy.com



<https://euhomy.com>



1-833-362-2655(US)