


Step 4.
Insert HANLDES (F) into BAGS (E).

Hang bags on crossbars to finish.

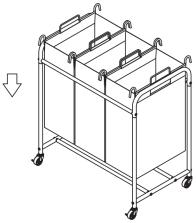

Congratulations! Enjoy your new laundry sorter!

Care Instructions

Remove handle bars from bags and wash in cold water with non-chlorinated bleach. Lay flat to dry.

Specifications

Weight capacity: 10 lbs. per bag, 30 lbs total Dimensions: 19.5" D x 30" W x 33" H

Additional Laundry Bags (WEB127) available for purchase at www.SevilleClassics.com

Customer Service Information

Telephone: (800) 323-5565 **Fax**: (310) 533-3899 **Hours**: 8:30 AM – 4:30 PM (PST)

Email: <u>Support@SevilleClassics.com</u> Homepage: <u>www.SevilleClassics.com</u>

seville classics®

3-Bag Laundry Hamper Sorter Cart




Model: WEB919

Thank you for choosing Seville Classics! We hope that you enjoy your new laundry sorter. Please read through this user guide for parts list, assembly instructions, frequently asked questions and contact information.

072021 072021


Parts List

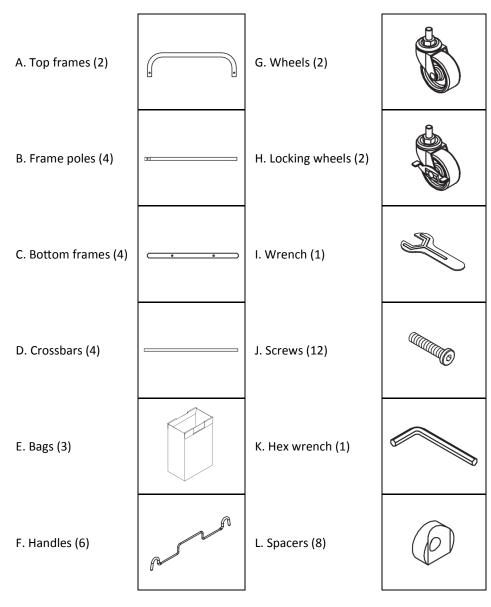

Please make sure you have all the parts on this list.

If you're missing parts, contact us for replacements at (800) 323-5565 or send an email to Support@SevilleClassics.com

Assembly Instructions

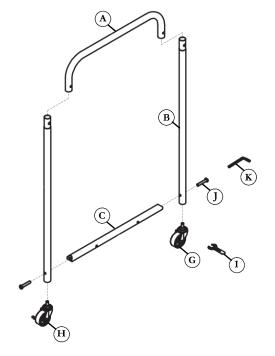

Step 1.

Fit **TOP FRAMES (A)** over the tops of **FRAME POLES (B)**.

Attach BOTTOM FRAMES (C) between FRAME POLES (B) with SCREWS (J) using HEX WRENCH (K).

Repeat steps for second frame.

Step 2. Attach WHEELS

Attach WHEELS (G) and LOCKING WHEELS (H) to opposite ends of frames using WRENCH (I).

Step 3.

Fit curved side of **SPACER (L)** over screw hole on inside of frame.

Fit **SCREW (J)** through outside of frame and through **SPACER (L)**.

Hold the SCREW (J) steady with HEX WRENCH (K). Screw on the CROSSBAR (D) by hand.

Fit curved **SPACER (L)** onto opposite frame, and attach with **SCREW (J)** using **HEX WRENCH (K)**.

Repeat for the remaining CROSSBARS (D).

