 


# FOHERE

## Instruction Manual

Coffee Grinder  
MODEL NO: HY-1428S

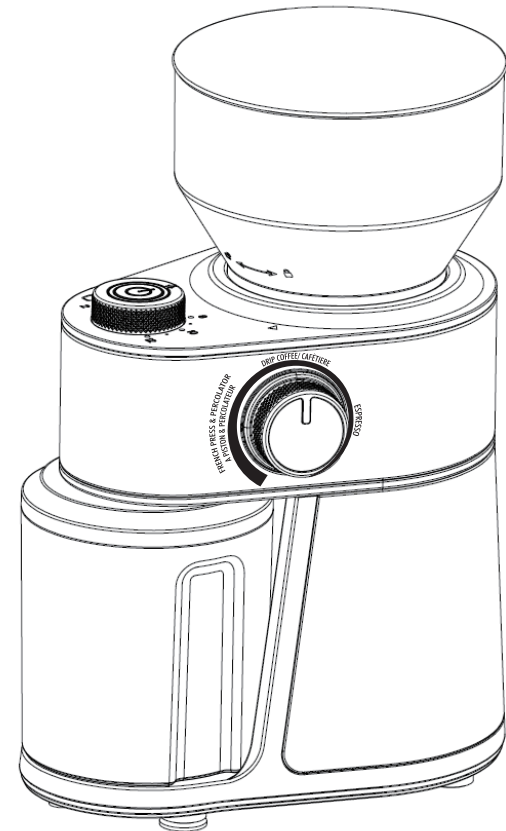

VISHTEC UK Co.,Ltd  
275 ISLINGTON SUITE 1405 NEW NORTH  
ROAD LONDON ENGLAND N1 7AA  
Email: Vincent.feng@vish-tec.com  
Phone/Fax+ 44 1584 879 384

### HOUSEHOLD USE ONLY



Manufacturer/Hersteller: Shenzhen Foduosi Trading Co., Ltd.  
Address/Adresse: 1403, Block 4, Haixuan Plaza, No.89 Jinlong Road,  
Luogang Community, Buji Street, Longgang District, Shenzhen  
Facebook Page: <http://www.facebook.com/foherehome>  
Email: service@fohere.com  
Web: [www.fohere.com](http://www.fohere.com)  
MADE IN CHINA



# IMPORTANT SAFEGUARDS

1. Read all instructions carefully before using this product.
2. Basic safety precautions should always be followed when using electrical products, especially when children are present.
3. **Warning: To avoid the risk of electrical shock, always make sure the product is unplugged from the electrical outlet before relocating, servicing, or cleaning it.**
4. This product is intended for grinding coffee beans to brew coffee for human consumption
5. Do not use the product for any other purpose.
6. Keep the product out of the reach of children and pets. This product is not intended for use by children. Close adult supervision is necessary when this product is used near children.
7. Do not leave the product unattended while in use. Always unplug the product from the electrical outlet when not in use.
8. Always place the product on a flat, steady, stable surface.
9. Keep the Power Cord and product away from heated surfaces.
10. Do not place this product in or expose it to water or other liquids.
11. Do not use attachments not recommended or sold by the product manufacturer as a risk of fire, electrical shock, or serious personal injury may result.
12. To avoid the risk of serious personal injury or damage to the product, keep hands, hair, other body parts, clothing, and utensils away from the grinding blades while operating the product.
13. Plug the product into a standard AC electrical outlet.
14. Never plug the product into an electrical outlet unless it is completely assembled and the Lid is securely in place.
15. Before removing the Lid, unplug the product from the electrical outlet blades and make sure the grinding have completely stopped.

16. Do not plug or unplug the product into/from the electrical outlet with a wet hand.
17. Do not allow the Power Cord to hang (i.e., over the edge of a table or counter) where it tripped over or pulled.
18. Disconnect the plug (do not pull on the Power Cord) from the electrical outlet.
19. Unplug the product from the electrical outlet prior to putting on or removing parts.
20. Never operate this product if it has a damaged Power Cord or plug, is not working properly, has been dropped, damaged, or if the Motor Housing has been exposed to water or other liquids. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing. Return the product to a service center for examination and repair.
21. This product is intended for indoor, non-commercial, household use only. Do not use outdoors.

#### NOTE:

A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

If a longer cord -is required, extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can accidentally be pulled on or tripped over by children or pets.

## Using the Coffee Grinder:

NOTE: Before using the coffee grinder for the first time, thoroughly clean the Lid, the Hopper, the Motor Housing, the Container Lid, and the Container (Reference the "Care and Maintenance" section): then thoroughly dry them.

Remove any foreign objects or debris from the Container and Hopper before each use.


1. Securely attach the Hopper and Lid onto the Motor Housing.

2. Pour the coffee beans into the Hopper.

NOTE: The Hopper have a capacity of 250g. \*Do not fill the coffee grinder beyond the brim of the Hopper.

3. Securely attach the Container and Container Lid into the Motor Housing.

NOTE: The Container have a capacity of 95g. \*Do not fill the ground coffee beyond the max line of the Container.

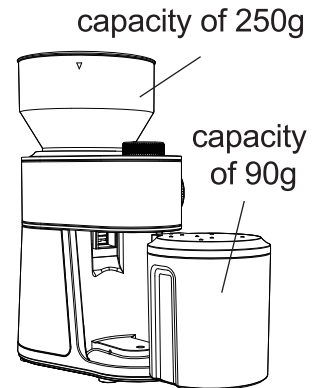

4. Figure A: doser/time switch and power control button.

- 1) (A) is a volume doser/time switch, which range from 2 dosers to 12 dosers
- 2) (B) is an power indicator
- 3) (C) is the on/off button

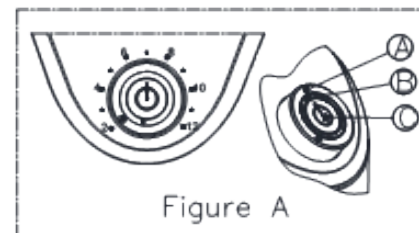 


Figure A


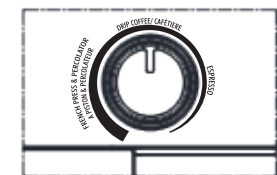 


Figure B


5. Figure B: coarse grinder to fine grinder range switch

## 6. OPERATION

 
- 1) Assemble the parts together. Make sure the Hopper is empty and clean.

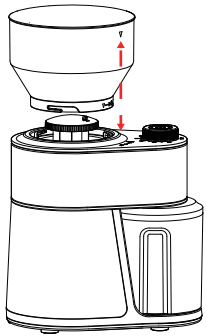

 Step 1. Alignment

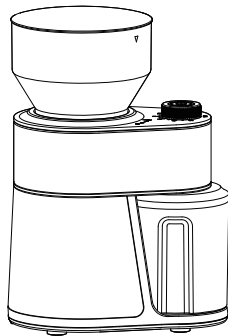

 
Step 2. Install

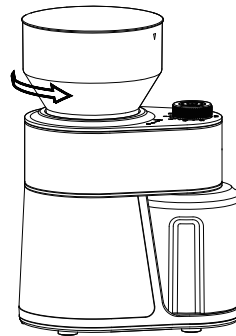


Step 3. Tighten  
counterclockwise

- 2) Fill to Hopper with whole coffee beans. chamber of your coffeemaker.

 
- 3) Plug the product into a standard AC electrical outlet.
- 4) Set the variable grind selector as showed in Figure.B.

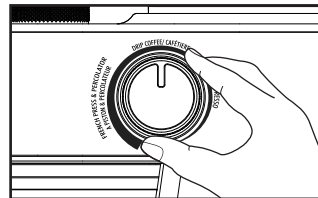

 - 5) Turn the doser/time switch to the number of cups you wish to grind.

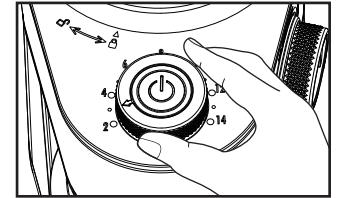

 - 6) Press the on/off button

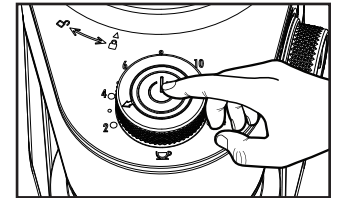

- 7) Start the grinding by pressing down the top lid and keep it pressed down during its working.

7. Unplug the product from the electrical outlet when it is not in use or left unattended.

## Care and Maintenance:

**CAUTION: Ensure the product is unplugged from the electrical outlet before cleaning it.**

 
- . Always clean the product immediately after each use.
- . Wash the Lid in warm, soapy water; then rinse and dry thoroughly.
- . Wipe clean the inside of the Container and Motor Housing with a soft, damp cloth; then thoroughly dry them. **CAUTION: Do not immerse the Motor Housing into water or other liquids.**

- . Do not use abrasive cleaners or scouring pads to clean the product.
- . Do not oil or sharpen the grinding blades.
- . Store the product in a cool, dry place.
- . If found the fineness knob too tight, you can idle the motor to solve the problem .


## How to Clean Your Coffee Grinder?




Step 1. Remove the hopper and clean

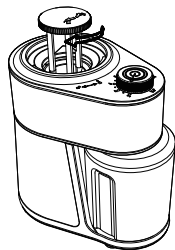

 
Step 2. Pull apart your burrs

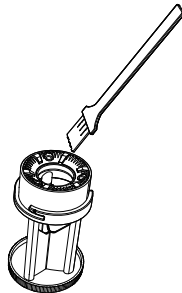

 
Step 3. Clean your burrs

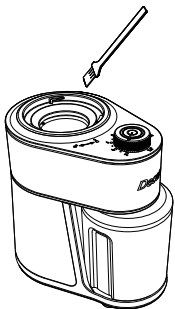

 Step 4. Brush the inside of your grinder and pour out these coffee grounds.

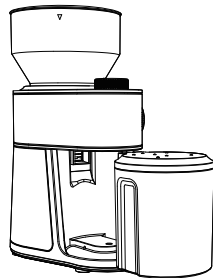


 Step 5. Remove the box and clean out the residual coffee grounds from the grind mouth.

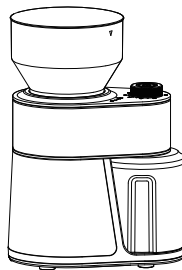

Step 6. After cleaning the box, hopper, and exterior of the product, please install the cleaned parts.

## Parts Identification:

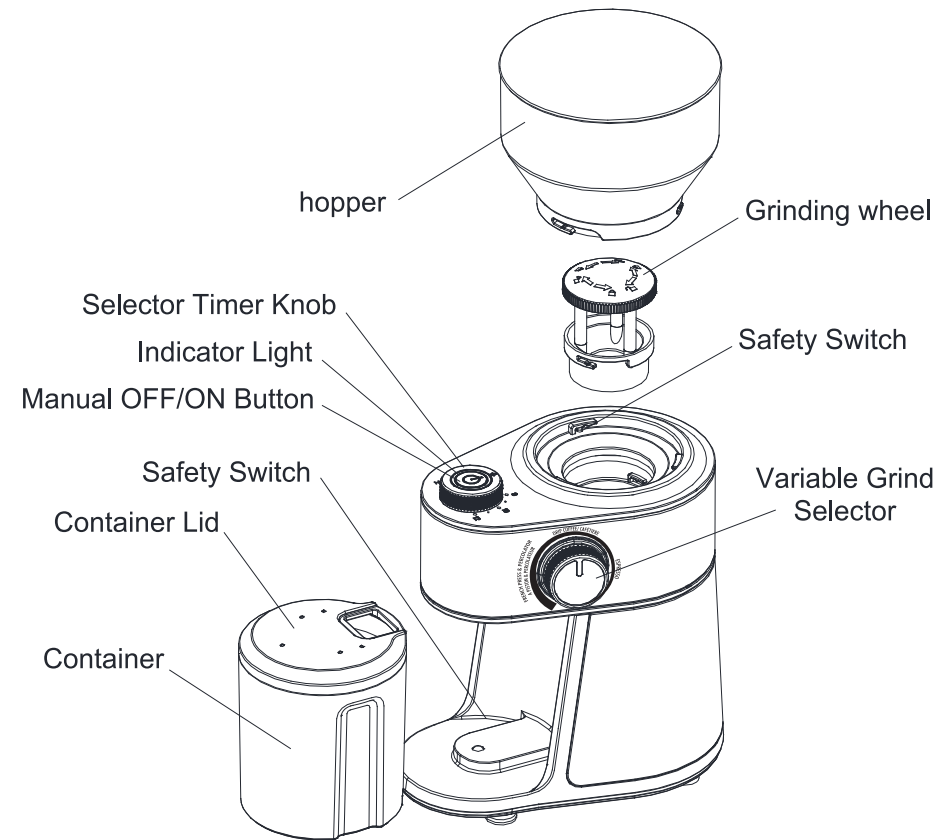 

# Trouble Shooting

The following simple issues can be handled by the user. Please contact the after-sale service department if the issues are not settled.

Problem	Reason	Easy solution
The product does not work when it is turned on.	1. Bad contact with the plug 2. Accessories not installed in place 3. Incorrect gear selection	1. Check whether the plug is loose/ Check whether the socket is suitable/ Check whether the socket is faulty 2. Please refer to product assembly guidelines: page 4 (Using the Coffee Grinder) 3. Please select the correct gear
Stopped working during use.	1. Too long working hours or improper assembly of accessories lead to jamming protection.	1. It takes $23\text{ S} \pm 2\text{ S}$ to grind 70g of coffee beans at medium speed. It must stop for 60 seconds each time it works continuously. After a maximum of 5 cycles, the machine needs to cool down for 30 min. 2. Please refer to assembly guidelines for products: page 4 (Using the Coffee Grinder) and reassemble the product before turning it on.
The product is difficult to disassemble/clean.	N/A	1. Please refer to assembly guidelines for products: page 3 (Using the Coffee Grinder) and cleaning guidelines for products: page 6 (Care and Maintenance)
Poor grinding effect.	1. Not selected to the appropriate coarse and fine gear 2. Coffee beans are damp	1. Please refer to assembly guidelines for products: page 3 (Using the Coffee Grinder) 2. Reuse freshly roasted coffee beans that are not damp, or newly unpacked