 


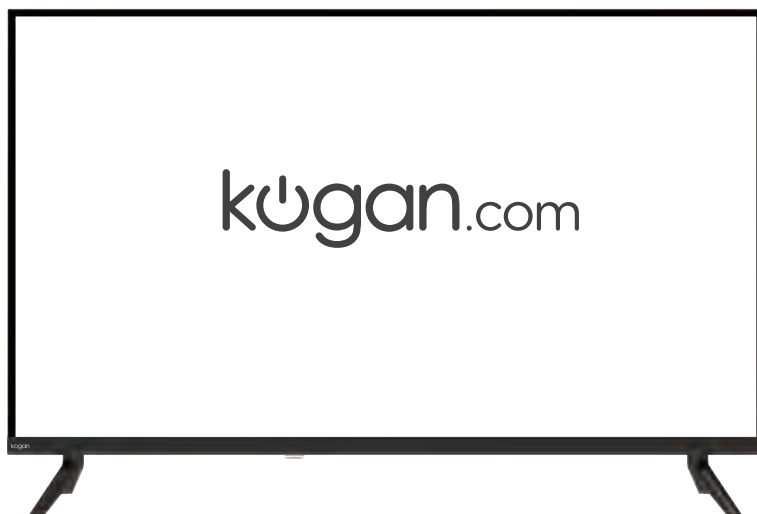


32" FHD LED Smart AI Google TV

SERIES 9 F98V

(KALED32F98VA)

 COMPONENTS

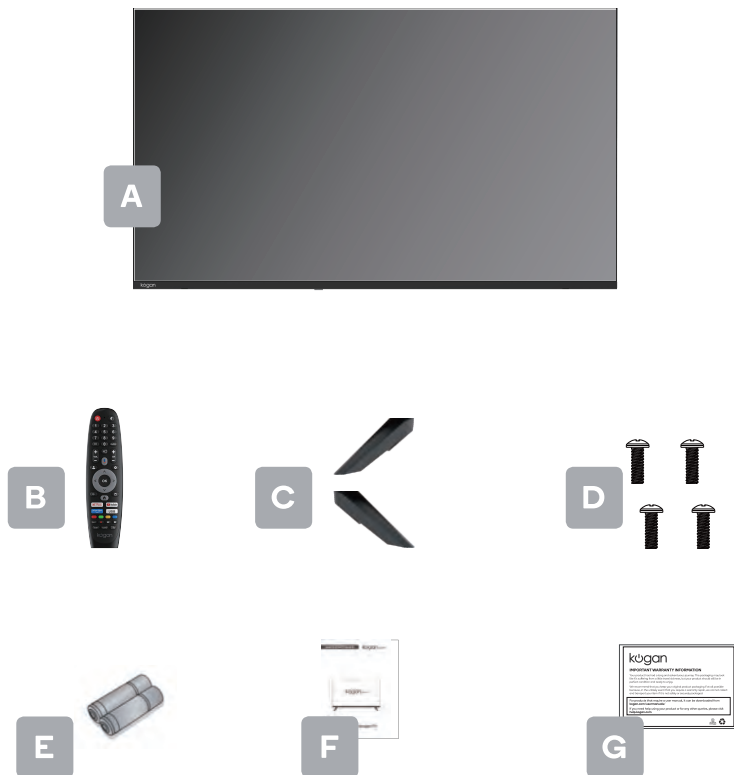

A Kogan 32" Smart HDR FHD LED TV

B Remote control

C Stand (x2)

D Ba4 x 18mm screw (x4)

E AAA battery (x2)

F Quick-start guide

G Warranty card

NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

REMOTE CONTROL OVERVIEW



①  : Switches the TV between on and standby mode.

②  : Indicator light.

③  : Mute or restore your TV sound.

④  : Displays the present channel information such as the current time and channel name.

⑤  : Open the Apps page.

⑥  : Display /S elect signal source options.

⑦  : Google Assistant: Talk to Google to control your TV using your voice.

⑧  : Switch to Kids mode.

⑨  : In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function

⑩  : Navigation butt ons :
Cursor UP/LEFT/RIGHT/DOWN

REMOTE CONTROL OVERVIEW



⑪ : Press to move back through menus.

⑫ : Open the Live TV EPG.

⑬ : Displays the home screen.

⑭ : Connects to YouTube (internet connection required).

⑮ : Connects to NETFLIX for viewing online TV shows and films (internet connection required).

⑯ : Connects to Prime video (internet connection required).

⑰ : Press to enter Multimedia Player.

⑱ : Exit the OSD menu.
PVR:Record Live TV programme.
Play the last/next program
Play/Pause/Stop program

⑲ : Press to enter Teletext when play the program.

⑳ : Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).

㉑ : Subtitles

*Google Assistant is not available in certain languages and countries. Availability of services varies by country and language

 
ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.


1. Stand assembly

- Attach stands to base of TV.
- Insert two 18 mm screws for each stand, and use Phillips head screwdriver (not supplied) to tighten.

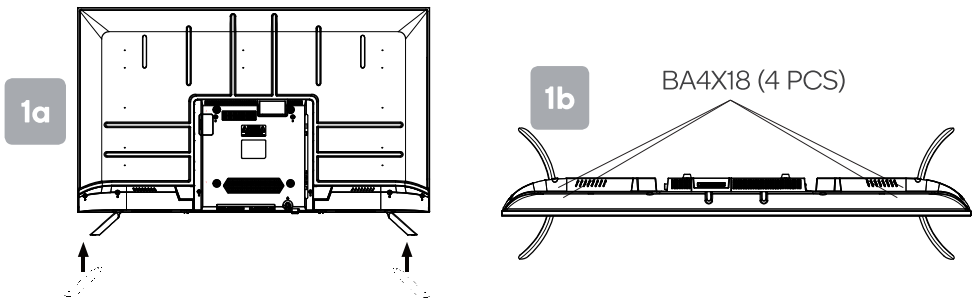

2. Remote control assembly

 - Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

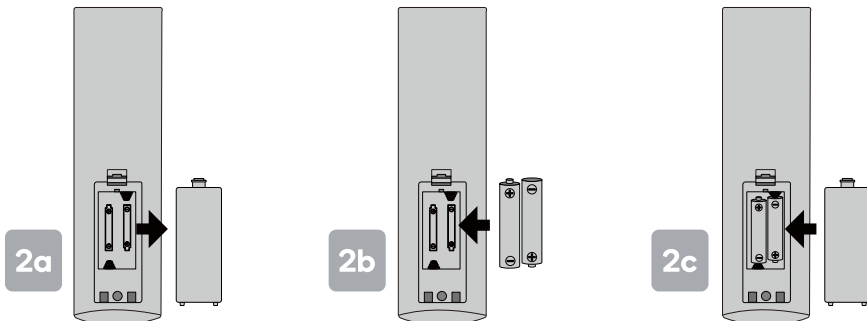



ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.



1. Stand assembly

  - Attach stands to base of TV.
- Insert two 18 mm screws for each stand, and use Phillips head screwdriver (not supplied) to tighten.

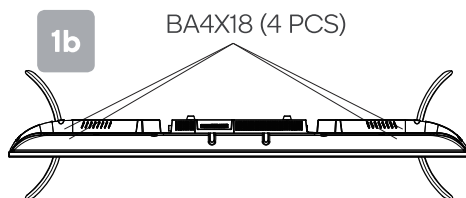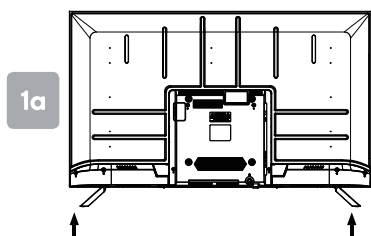

2. Remote control assembly

  - Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

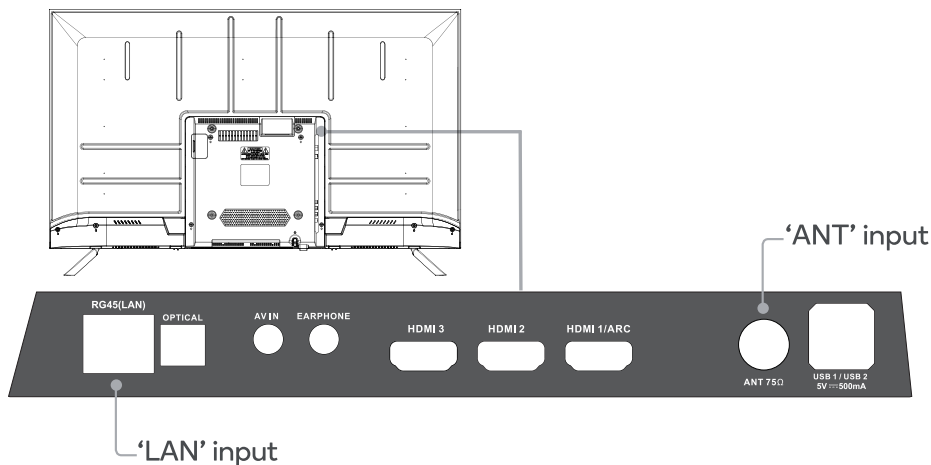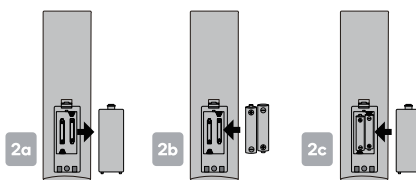


INITIAL SETUP

1. Initial Setup

For the first initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.


1.1 Language select

 Use **▲/▼** buttons to select system languages, then press **【OK】** to confirm.

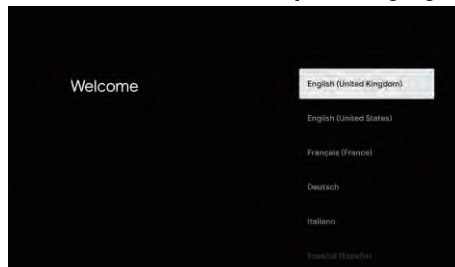


1.2 Region or Country select

 Use **▲/▼** buttons to select your region or country, then press **【OK】** to confirm.

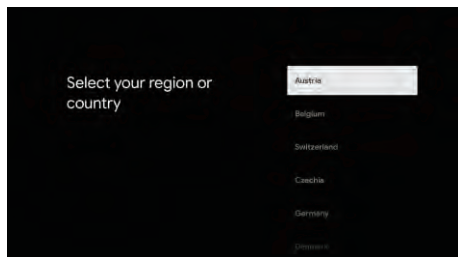

1.3 TV set-up select

 Use **▲ / ▼** buttons to select your TV setup, then press **【OK】** to confirm.

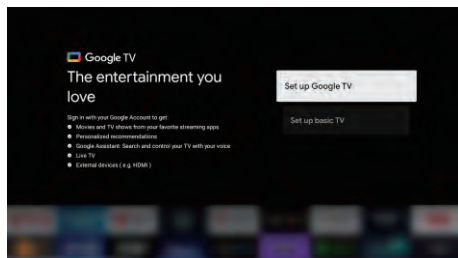

1.3.1 Set up Google TV

1. Use your Android™ smart phone to download and open the Google Home app on your phone.
2. Use the Google Home to scan the QR code on the TV device.
3. Follow the instructions in the Google Home App.

Note: Press "BACK" to cancel

If you just want to use your TV normally, please select "Set up basic TV"

INITIAL SETUP

NOTE: This interface is pushed by Google Service according to the actual region. Some regions may not have this interface. The actual push by Google Service prevails.

 


1.3.2 Set up basic TV

Press "OK" button enter to the next page to Select your wi-fi network.


1.3.2.1 Configure the Wi-Fi network

Press $\wedge$ / $\vee$ buttons to select Wi-Fi you wish to connect to, enter the password and then confirm to connect. If you select "Skip", it could be performed in homepage or settings menu.

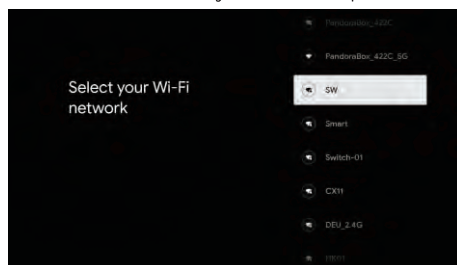

1.4 Terms of Service

 
By accepting the Google Terms of Service to improve the product experience, Select "Accept" to proceed with this condition.

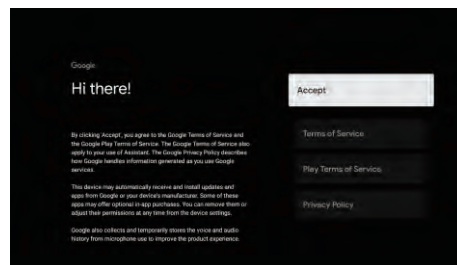

1.5 Google Services

Select "Accept" to confirm if you want your location identified on your Google TV™ and agree to automatically send diagnostic information to Google to help improve your Google experience.

 INITIAL SETUP

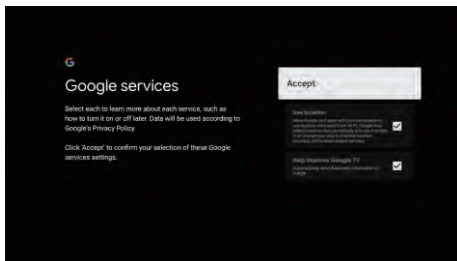

1.6 Pairing Bluetooth Remote

1. Press 'BACK' and 'Home' simultaneously on remote control to enter the Bluetooth pairing mode.

 
The Indicator light on remote control will flash when starting the pairing mode.

2. Select the "Skip" icon to skip the pairing mode.




1.7 Password set up

Press "OK" button to set up the password.

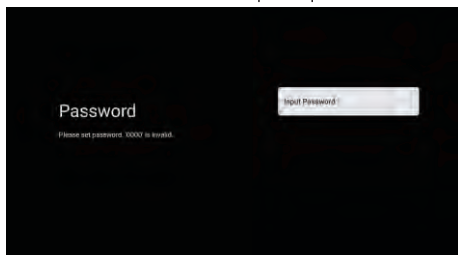

1.8 Select TV mode (Home/Retail)

 
Please be sure in this step, select "Home" if you are using this TV for use at home. Make sure to confirm once you have selected "Home".

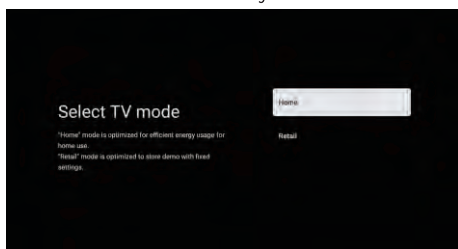

INITIAL SETUP

1.9 Chromecast built-in™


 
Select On/Off to make Chromecast built-in always available.

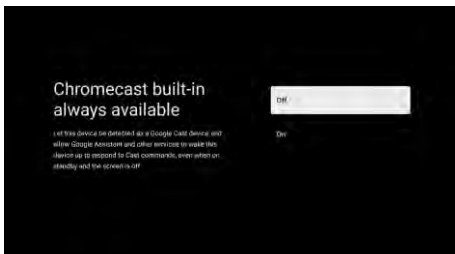


1.10 Tuner mode setting

Select Antenna/Cable/Satellite to scan TV channel.

  If you select "Skip", the channel scan could be performed in menu.

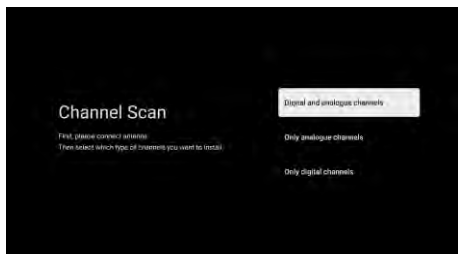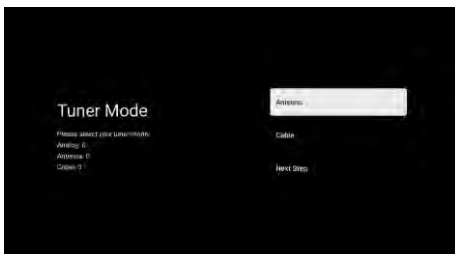


 
1.11 Setup completed and Disclaimer Terms

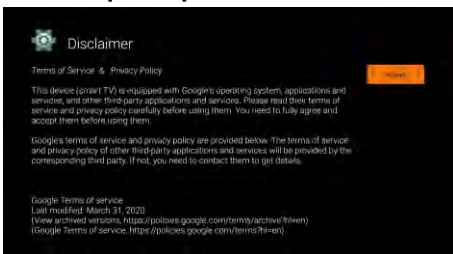

1.12 Play Auto Installs

Select install or un-install the recommended apps and Google apps by using this process.

  Select "Start exploring" to the next page.

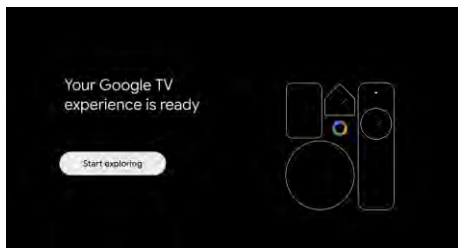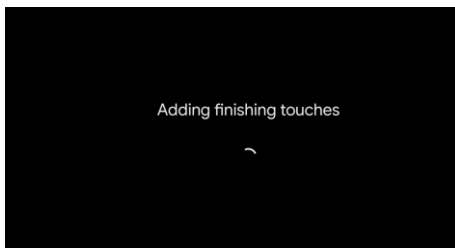


HOME

2. HOME

Once you have completed initial setup, you will now enter the home by screen or press

 🏠 button to display the homepage.

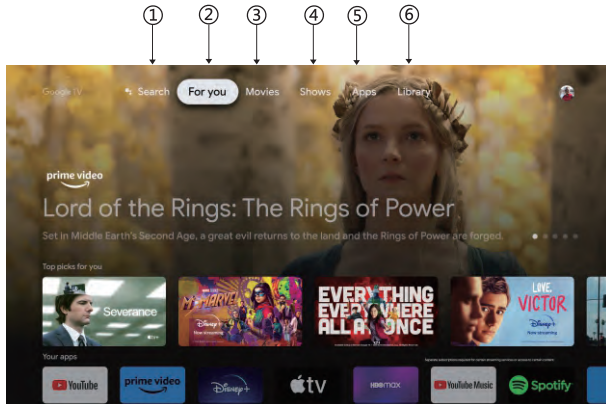

Some countries home screen UI may display different as above image, please refer to the product for details.

1. Search

Use your voice to jump to shows, control devices, and more—just ask Google.

2. For you

Selected the "For you" to browse content from across your apps, intelligently organized just for you.

3. Movies & Shows

Discover new movies and shows from across your subscriptions. Suggestions based on what you've watched and what interests you make it easier to find your next favorite.

4. Apps

Selected the "Apps" to have access to all your applications. Pre-installed applications are available for you in this row.

5. Library

 
One list for all your discoveries. When you see an interesting show or movie, add it to your Watch list to keep track of your new discoveries.

SETTINGS

3.Settings

Allows to set various performance of your TV .


1. Press </> button to select "Settings" which is in the upper right corner of the screen.
2. Press ▲/▼ button to select the option which you want to adjust in the Settings menu.
3. Press 【OK】 to enter.

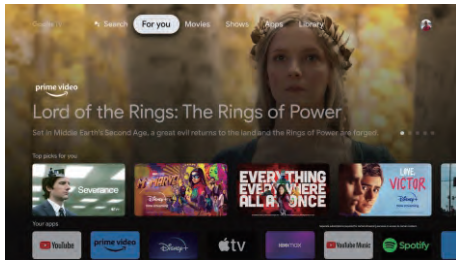

Channel and inputs

Display the scan sub-menu based on different channel installation modes.

 1. Press ▲/▼ button to select "Channel Source" & "Inputs".
2. Press 【OK】 to enter "Channels", then press ▲ / ▼ choose Analog, Antenna, Cable etc to scan the channels.
3. Press ▲/▼ button to select "Input", press ok to enter "Inputs", then press ▲/▼ choose HDMI1, HDMI2, HDMI3, HDMI4, Composite etc.

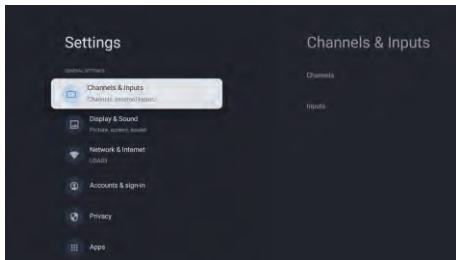


Network & Internet

Adjust all network setting and check connection if you have connection problems.

1. Press ▲ / ▼ button to select "Network & Internet" in the settings menu.
2. Press ▲ / ▼ button to select Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

 SETTINGS

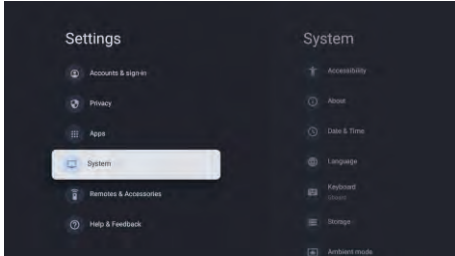


System

1. Press **▲ / ▼** button select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
2. Press **【OK】** to jump to the corresponding sub-option.

About

 
1. Press **▲/▼** button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press **←** button to return to the previous menu.
3. Press **←** button to exit the menu.

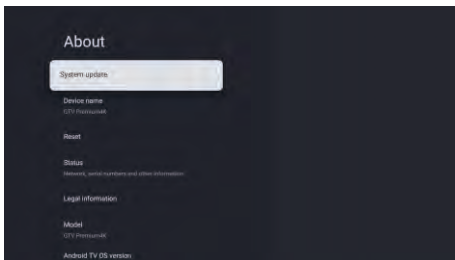

The above pictures are for reference only, please refer to the product for details.

Factory reset

 If Factory reset is selected, it will erase all data from your device's internal storage, including your Google Account, system and app data and settings, and downloaded apps.

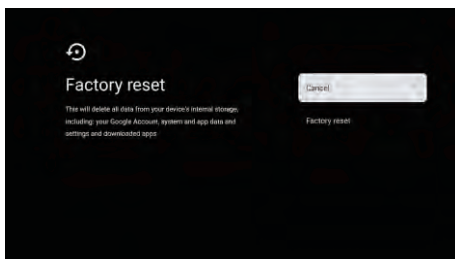


TV SOURCE SETTING

4. TV Source Setting

To enter TV source in Homepage:

 
1. Press  button to select input source.
2. Press  button, then select "Channels" and select "New Channels Available" to enter.

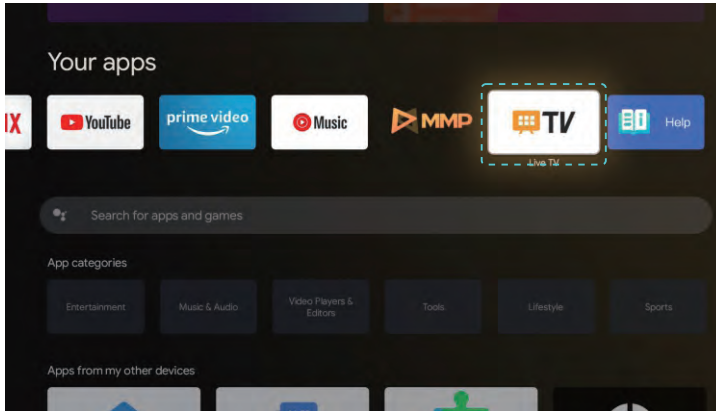


ACCOUNTS SIGN-IN

5. Accounts & sign-in


 
To have access and to download applications, you must sign in with a Google Account.

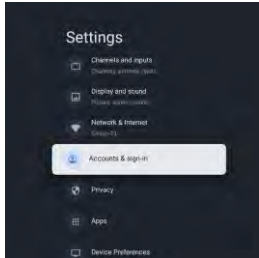

 Once you open Google Play, you will be prompted to sign in or create a new account.

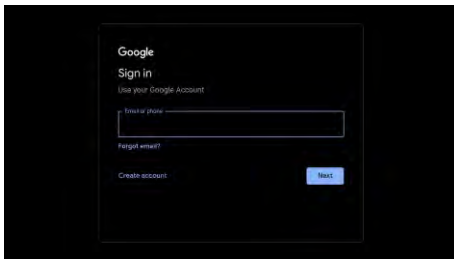

  Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or go to the search button, and search via entering text or by asking Google on your voice remote.

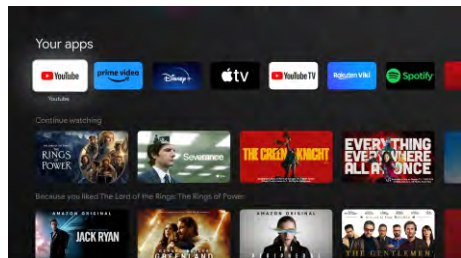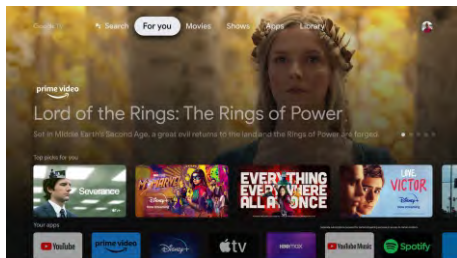

The above pictures are for reference only, please refer to the product for details.

BASIC TROUBLESHOOTING

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

"No Signal" on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com



NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Need more information?

This is a **Quick Start Guide** , and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **help.kogan.com**

kogan.com