


Mini Amplifier User's Manual

CONTROL FUNCTIONS

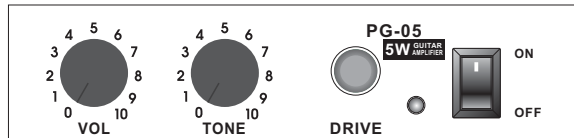


VOLUME-----Setting Power From Zero to full.

TONE-----Bass to Treble Tone Control.

DRIVE-----Select Between Drive and clean sounds.

ON/OFF SWITCH-----Power on and off.

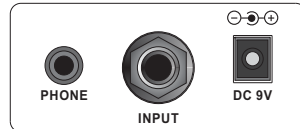

PHONES-----Output for stereo headphones.

Automatically disconnects the internal speaker.

INPUT-----Connection for instrument.

DC JACK-----(- + Requires DC9V adaptor 500mA(min.)not supplied.

SPECIFICATIONS

OUTPUT POWER-----5 Watt

SPEAKER-----3.0 inch. 4ohm

DIMENSIONS-----128(W)*128(H)*60(D)

WEIGHT-----0.61KG(including Battery)

ACCESSORIES

STRAP-----1.4M(With Strap Clip)

BATTERY-----9V 6F22 Type

MADE IN CHINA

WARNING

Caution! There is a danger of explosion if the batteries are inserted incorrectly. Use only the same battery types.

-Do not use old and new batteries or batteries of a different type or that are from different manufacturers together.

-Always insert batteries in accordance with the correct polarity (+ and -) as illustrated in the battery compartment.

-Batteries are life-threatening if swallowed. Store all batteries out of the reach of small children and domestic animals. Seek medical help immediately if batteries are swallowed.

-Do not allow children to change batteries without adult supervision.

-If the device is not to be used for an extended period, then the batteries should be removed.

-If the device functions weaken, replace all batteries.