



Original	Recharge
 Power	 Power
 TTX	 Text / Got o
 Fav	 Fav / Marker / PC
 Audi o	 Audi o / Lang I / II
 Mut e	 Mut e / Di mmer
 Pl ay	 Pl ay / Sl ow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Red / SOS	 Red / Netf lix / Search
 Green / Sous	 Green / APP / Repeat
 Green / Sous	 Subt itle / EQ
 Yel low / Enreg	 Yel low / YouT ube / Repeat
 Bl ue / Ti mer	 Bl ue / Pri me Vi deo / Random
 Bl ue / Ti mer	 Sl eep / Ti mer
 Gui de	 Gui de / EPG / - / -
 Up	 Up

Original	Recharge
 I nf os	 I nf o / Angl e
 Left	 Left
 OK	 OK
 Ri ght	 Ri ght
 Menu	 Menu / Home
 Down	 Down
 Qui t	 Exi t / Cancel / Clear
 Vol +	 Vol +
 Rec	 Rec / Rec Mde
 CH+	 CH+ / Page+
 Vol -	 Vol -
 St op	 St op / Hol d
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4





[Back](#) / [Return](#)

POWER DIMMER MUTE SHIFT
 TV DVD SAT AUX
 SLOW STEP-FREEZE HOLD REC MODE
 TUNE- TUNE+ PRESET- PRESET+
 TITLE LANG III EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV/ RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 CLEAR RETURN
 EXIT BACK
 CANCEL LIST
 + SMART +
 VOL MEDIA CH
 — DISPLAY — PAGE
 TV DVD CD- STB
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX- HDD USB BLUETOOTH
 7 8 9
 /- - HDMI - SAT PC
 GUIDE 0 FAV
 EPG MARKER
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
 Mandis shop
 www.mandis.tv