
KS01/KS03/KS04 QUICK SET UP

The default Master Code is 12345678

It is required that you change it to a code of your own before programming.

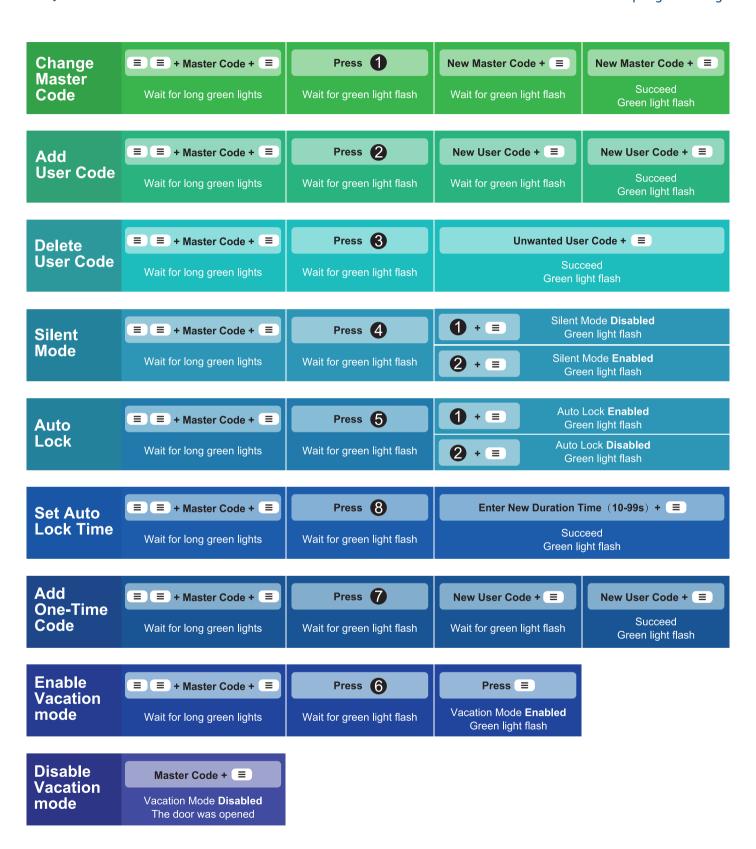

NOTES

- 1. Beeps only sound when the Silent Mode is disabled.
- 2. If the indicators flash red light, it means your setting failed and it will require to re-enter master mode if you would like to continue your programming.