 


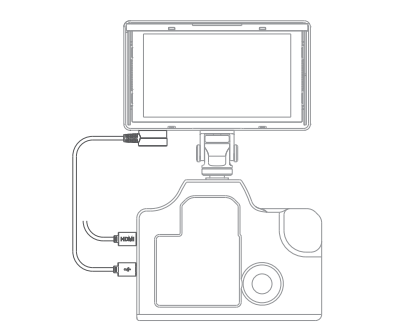

安装前
请根据相机型号选择与之匹配的相机控制线。

产品保修 尊敬的用户，本产品卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！		
产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
备注	销售日期	

注：此表应由销售商盖章确认。

前言
此产品属于即插即用配件，与本公司触摸屏监视器 GM55 搭配使用。连接此相机控制线，GM55 可通过控制菜单或设备面板的快捷键进行相机控制。请按需购买。请仔细阅读本说明书，以便能正确的操作，发挥本产品的优越性能。

产品特点
① 采用 TPE 圆线接头，可经受反复弯曲插拔；
② 采用喷砂工艺，不生锈，耐腐蚀；
③ 多层安全保护，防刮耐磨抗氧化；
④ 工艺精湛，持久耐用；
⑤ 严格测试，安全护航。

产品型号
提示：相机支持列表会持续更新，如有需要请登录公司网站查看相机控制线最新支持列表。

安装连接
注：
相机控制线与监视器链接方法：
向 ➊ 箭头方向按压
向 ➋ 箭头方向滑动可达到自锁

➊ ➋

POGOPIN 触点链接

• 掀开监视器端相机控制接口的胶套，转到一边。
• 分别连接相机控制线和 HDMI 线至相机和监视器；
• 将相机控制线接头与监视器端接口对齐后压入，向 DC 接口方向推即可卡住，再将相机控制线另一端与相机连接。如果线长请用扎带固定。


产品信息
本产品适用于相关《产品保修信息》(见后面说明) 所列产品，其他非属此范围的产品或部件 (如促销品、赠品及其他出厂后附加的部件等) 不在此保修承诺内。
保修期
产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。
如何获得保修服务
要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

型号	相机端口接口	产品长度	适配相机型号
GMC-S1	Multi	60CM	索尼 A7III；RX10；ATR；A9...
GMC-U1	Micro USB	60CM	EOS90D；EOS850D；EOS200DII；EOS 7D Mark II；
GMC-U2	Mini USB	60CM	佳能 6D Mark-II；佳能 1500D；EOS60D；3000D...
GMC-U3	USB Type-C	60CM	佳能 M2 Mark II；EOS-M6 Mark II；松下 S1R...


警告
▲ 请勿私自拆卸产品！
▲ 请保持干燥！
▲ 请勿在易燃易爆环境中使用！在这些场合下，请注意相关警告标识。
▲ 请仔细阅读并遵守由厂商提供的警告或指示。

操作使用
此产品属于即插即用配件，将相机控制线连接于监视器与相机相应的位置即可。
• 使相机和监视器均处于开机状态，看到所拍摄画面；
• 从屏幕右侧边缘向左侧滑动调出相机控制菜单界面，如正常连接，菜单底色变亮，可操作各功能。如需关闭请单击屏幕视频区域即可。
提示：如果未能调出相机控制菜单，请检查是否已开启触摸功能或“相机控制”是否为“开”。
• 当“相机控制”和“相机映射”为“开”时，将相机控制触摸按键功能映射到 F2-F6 中。
• 当“相机映射”为“关”时，F2-F6 为快捷功能。

 不适用保修的情况
如产品存在下列情况，本文件项下的保证和服务将不适用 ① 产品或部件超过相应保修期；② 错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插接外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③ 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④ 产品或部件原有识别信息被修改变更或删除；⑤ 无有效保修卡；⑥ 使用非法授权、非标准或非公开发行的软件造成的故障或损坏；⑦ 因不可抗力或意外事件造成的故障或损坏；⑧ 其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

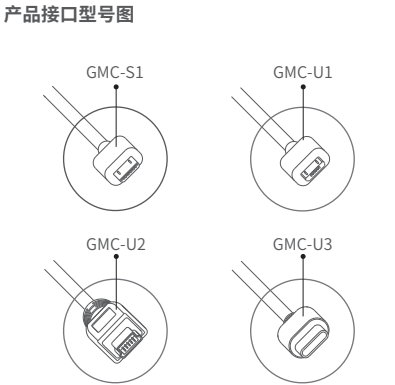


取出相机控制线
监视器背面卡扣推向另一侧，再把控制线接头推向边缘即可取出。

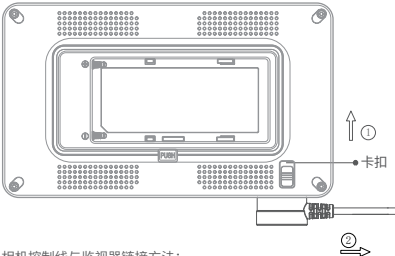 

相机控制线与监视器链接方法：
向 ➊ 箭头方向推卡扣
向 ➋ 箭头方向滑动即可拔出



 相机控制线安装说明
示例：搭配本公司触摸屏监视器 GM55 使用。



附：GM55相机控制功能按键介绍

F1: 相机控制开关 F3: 拍照 F5: 微调焦距 +1

F2: 录像 F6: 微调焦距 -1

F4: 自动对焦

F2 录像 (每点一次在录制和停止录制之间切换)

F3 拍照 (点击即拍照)

F4 自动对焦

F5 调焦 +1, 微调焦距 +

F6 调焦 +1, 微调焦距 -

调焦 +5, 快速调焦距 +

调焦 -5, 快速调焦距 -

注：如监视器升级，按键功能变动，或更详尽指引，请参照 GM55 实时说明书。

产品保修和服务支持信息 产品的保修期和服务类型按以下《产品保修信息》执行：			
产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线，同步线等带电性能的部件。	12	客户送修
其他	如电池盒、防风棉、防风毛罩、锁紧装置、手提绳、扎带、魔术贴、领夹、便携袋、包装等	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Forward

Thank you for purchasing!
This monitor camera cable is a plug and play accessory cable for Godox 5.5"4K HDMI Touchscreen On-Camera Monitor GM55. With this cable, the GM55 monitor can realize the function of camera control. Read this manual carefully before using to make sure the correct operation and exert the optimum function.

Product Features

- ① TPE fixed wire connector, ensures it has long using life span;
- ② Adopt sandblasting process, guarantee it anti-rust and corrosion resistance;
- ③ Protected completely, Scratch-proof and antioxidant;
- ④ Consummate craft, long-lasting;
- ⑤ Rigorous testing and security.

Product Mode and Compatibility


Model	Camera interface	Cable Length	Compatibility
GMC-S1	Multi	60CM	Sony A7III; RX10;A7R; A9...
GMC-U1	Micro USB	60CM	EOS90D; EOS850D; EOS 7D Mark II;
GMC-U2	Mini USB	60CM	Canon 6D Mark-II; Canon1500D; EOS60D; 3000D...
GMC-U3	USB Type-C	60CM	Canon M2 Mark II; EOS-M6 Mark II; Panasonic S1R...

Note: The compatibility list will continue to be updated. If necessary, please login www.godox.com for the latest compatibility list.


Warning

- ⚠ Don't disassemble!
- ⚠ Always keep this product dry!
- ⚠ Do not leave the product in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warning.
- ⚠ Please carefully read and observe the warning or direction offered by the manufacture.

 Product Interface


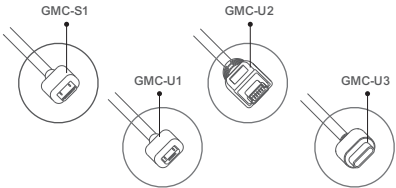


What's in the box

 

Operating instructions

  Example: Use with the GM55.

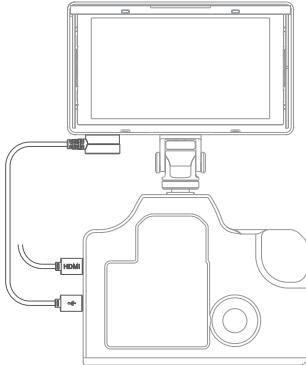


Before installation

Please select suitable cable according to the camera model.

Note:

 Camera Control Cable Connection with Monitor:
Insert the interface to monitor in the direction of arrow ①
Then slide the interface to lock it in the direction of arrow ②

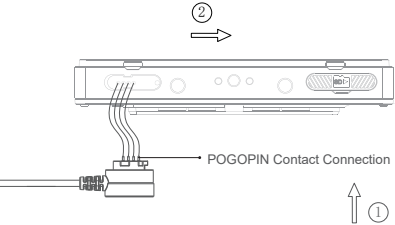


- Remove the rubber plug of the camera control port and turn to another side;
- Connect the camera control cable and the HDMI cable to the camera and monitor respectively;
- Insert the camera control cable into the camera control port of the GM55 and push to DC port direction to lock it; Then connect the other end of the camera control cable with the camera. If the cable is too long, please fix it with tie.

Operation and usage

Connect the camera and GM55 monitor with this camera control cable followed the instruction above.
• Turn on the camera and the GM55.
• Slide leftwards from the screen edge on the right to pop-up the camera control menu of GM55. Single-click the hidden menu in the video area can also pop up or hide the menu as required.
• When camera control and camera mapping is switched on, the touch camera control menu will not be displayed. Then, the buttons F2-F6 on the top of GM55 are shortcut buttons of camera control. Details camera control buttons description refers to the postscript of this instruction manual.


Take out the camera control cable

 Push the Self-lock Switch on the back of the monitor to the other side, then push the control cable interface to the edge to take it out.

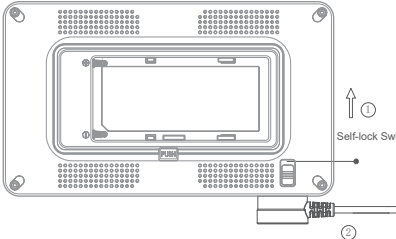

Disconnection Instruction:
Push the Self-lock switch in the direction of arrow ①
Slide the camera control cable interface in the in the direction of arrow ② and then gently take it out.

 Postscript: GM55 Camera Control Buttons Description

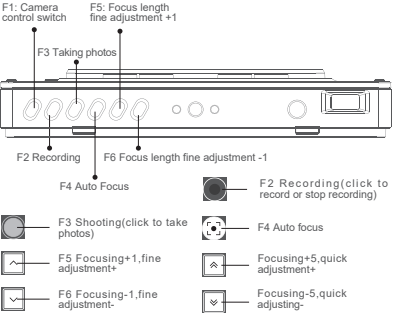

Note: Such as monitor upgrade, button function changes, or more detailed instructions, please refer to the GM55 real-time instruction manual for reference.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alteration, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, non-standard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period (month)	Warranty Service Type
Parts	Product Main Body	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Charger, Power Cable, Sync Cable, Electrical Parts etc.	12	Customer sends the product to designated site
Other Items	Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区福川工业区厂房2栋
电话: +86-755-29609320(8062) 传真: +86-755-25723423
邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China
Tel: +86-755-29609320(8062) Fax: +86-755-25723423
E-mail: godox@godox.com

godox.com Made In China

