

# FRONT

**BACK**

**FOLD**

**ijoy** **KARAOKE YAY**



# USER MANUAL

for use with  
 **Bluetooth®**  
enabled devices

ijoy

QUEST USA CORP.  
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA CORP. Brooklyn, NY.  
Limited lifetime warranty. To activate your product warranty go to our website [www.goijoy.com](http://www.goijoy.com) & register this product.

Made in China.

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "JOYO KARAOKE YAY" karaoke machine. This product can provide high quality listening and enjoyment for mobile phone, computer and multimedia. Before using this product, carefully read this manual to correctly manipulate and play its best performance. Please ask your local dealer or call us if you have any questions

## PACKAGE CONTENTS

**PACKAGE CONTENTS**  
 IJOY KARAOKE YAY SPEAKER  
 IJOY KARAOKE YAY MICROPHONE  
 Charging Cable X 1  
 User Manual X 1

## • PAIRING WITH YOUR BLUETOOTH ENABLED DEVICE

1. Make sure your phone's bluetooth settings are enabled.
2. Scan from your phone, tablet for "IJOY KARAOKE YAY" and select to pair.

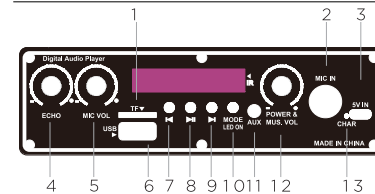
• **BATTERY CAUTION**

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Always confirm that the temperature is 5 degrees Celsius before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered. Always keep the battery out of reach of infants and small children.

• **BATTERY DISPOSAL**




Please do not attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

## •DEVICE FUNCTIONS



- |           |                |                 |
|-----------|----------------|-----------------|
| 1.TF CARD | 6.USB          | 11.AUX IN       |
| 2.MIC IN  | 7.PREV         | 12.VOLUME POWER |
| 3.DC 5V   | 8.P/P          | 13.CHARGE RED   |
| 4.ECHO    | 9.NEXT         |                 |
| 5.MIC.VOL | 10.MODE LED ON |                 |

- **FM Function**




- 1- Click "Mode" twice to enter radio mode.
- 2- Click play  button once and the speaker will automatically find the best channels and save them on 30 channels.
- 3- Once the channel 30 are set, the radio will automatically go back to the registered channel 1.
- 4- Flip between channels using the forward button  and the backward button .

### • OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of suffocation, keep plastic bag away from babies and children. Do not use this bag in cribs, beds, carriages or playpens. This bag is not a toy. Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



## • INSTRUCTIONS

1. To turn on, turn the volume knob.
2. To charge the battery, use the adaptor. When the battery is charging a red LED light will display. When charging is complete, the LED light will turn off.
3. For better reception of FM stations, use the FM antenna.
4. For MP3s, play through the speaker using the micro SD card or the USB stick.
5. Use the MODE button or remote control to switch between USB/TF/FM/AUX and BLUETOOTH modes.
6. Turn up the volume, from the volume knob or the remote. Volume from remote will be dependent on the level set via the volume knob.
7. Press  to listen to the previous track and  to skip to the next track from the speaker's control panel or from the remote.
8. To play or pause, press the  button from the control panel or remote control.
9. Please remember to turn off the speaker before removing the USB stick or Micro SD card.

- LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decrease in the accumulators effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator. **WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS.** For more information please visit, [www.goijoy.com](http://www.goijoy.com)

Tip: Must choose the formal manufacturer certified charger, output voltage of 5v. If the product is not in use for a long time, please charge it.

**ATTENTION VENDOR: PLEASE FOLD ON GREEN LINES AND PRINT DOUBLE SIDED  
DO NOT PRINT GREEN LINES WITH MANUAL**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment