

① How to deal with the loop have clicking sound?

◆ If the loop have clicking sound, please try to upgrade the system.

The operation process is shown on the linked page:

<https://lekatodeal.com/pages/lekato-guitar-looper-series-firmware-update-to-fix-tick-noise>

Please choose--M01698 3 Slots Auto Looper

◆ The USB cable is only used for data transmission and cannot be used for power supply.
(Using the USB cable for power supply will cause continuous ticking noise)

② Why the loop doesn't work?

◆ Please make sure the power supply you use is 9V central negative, otherwise the loop station won't work.

③ Does the package contain the power supply?

◆ The Power supply is NOT included in the package.