 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Tv System		TV/Radio /
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Browser		Smart / List
	Timer		Sleep / Timer
	Copy		D.Menu / Top
	Guide		Guide / EPG / -/-
	Vol-		Vol-
	Up		Up
	Vol+		Vol+
	Left		Left
	Enter		Shift + OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Text / Goto
	Slow		Shift + Play /
	Option		Shift + Setup / OPT / Tools
	Play		Play / Slow
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	I<</Prev		I<< / Preset-





Original	Replacement
 >>I/Next	 >>I / Preset+
 <</FR	 << / Tune-
 >>/FF	 >> / Tune+
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Time Shift	 +  Shift + Sleep / Timer
 Repeat	 Green / APP / Repeat
 Select	 OK
 Confirm	 +  Shift + Smart / List

Original	Replacement

