

 
Air Mattress

Instruction Manual

QDC-X16IN

QDC-D18IN

QDC-J22IN

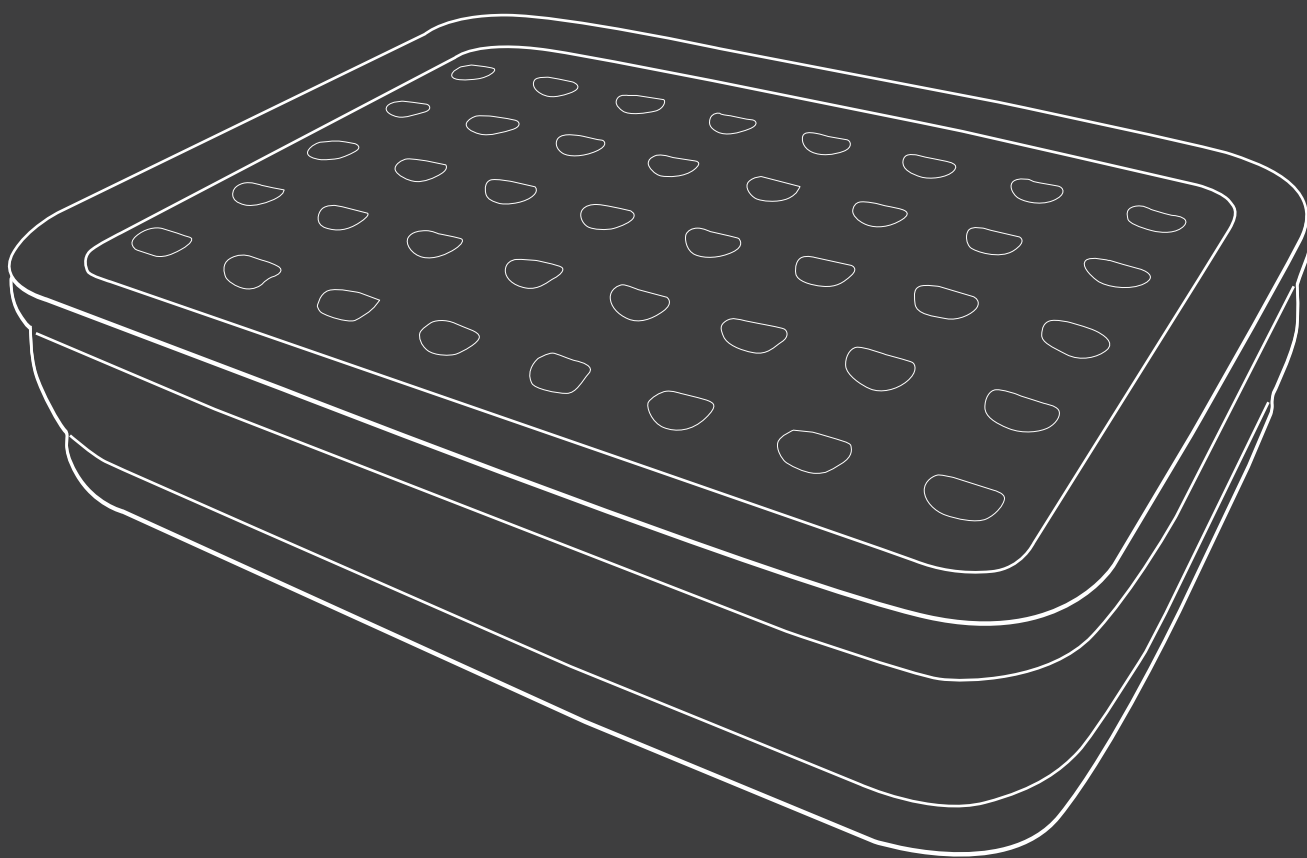

 EST 9:00AM--17:00PM

 HJ-Customer-Service@outlook.com

 (909)637-7665 | (909)637-7593

Notice

 
1. Before use, please ensure that the use of the environment is clean, there are no sharp and hard objects under and around the bed, (such as corners keys stone particles /glass, etc.), do not drag, grinding, thorns, to ensure that the ground or bed frame bed without nails and other sharp objects: sharp objects and sources of fire or heat are likely to cause punctures, scratches and burns in contact.
2. Remember not to inflate too full (especially in the summer), inflation time is about 3 minutes, do not carry out too strenuous movement in the bed. otherwise the bed will be overloaded and broken within the pulling belt, causing the bed bulge and cannot be repaired: When the weather temperature rises, to properly deflate some air.
3. In the use of built-in pump air bed please do not near water, avoid electric shock, do not near the source of fire.
4. Do not jump on the product for a long time, otherwise shorten its service life.
5. Use the product at room temperature (-5℃ 40℃), especially in the winter should pay attention to place at room temperature for 2-4 hours first.
6. Recommended load please do not exceed the plane pressure of 600 lbs, adults try not to walk on the edge, children do not bounce on it, because the inflatable bed is mainly subjected to plane pressure rather than point contact pressure.
7. Do not allow pets near the inflatable bed, the paws of pets may scratch the inflatable bed.
8. Inflatable beds should not be used with electric blankets to prevent damage to the air bed due to high temperatures.
9. When used outdoors, a mat under the bed to prevent puncture, inflatable beds are not floating row or life-saving equipment, it is recommended not to use in the water, pay attention to safety.

Maintenance

1. Washing/cleaning method: no fluffy surface of the bottom and sides, just use wet soapy water rag can be easily wiped clean; if the fluffy surface is soiled, it needs to be thoroughly cleaned with soapy water and let it dry naturally, do not use a hair dryer to blow the fluffy surface, cannot use the washing machine to clean the air bed, cannot use chemicals such as tanner water, detergent powder or any other abrasive powder.
2. It is recommended to put on a bed cover to protect the product and prolong its service life.
3. When not in use for a long time, the bed should be completely drained of gas and folded and placed in a storage cabinet without sharp edges/corners
4. Air mattress can be inflated immediately after purchase, but it is best to place 8 12 hours after the first inflation before use (to extend the service life), because the internal pulling belt and fusion joint needs a buffering process.
5. First time use, the air bed will be a little air loss, this is normal. because the pvc material has a little elasticity, just re-inflate it to full.

WARNING

- When the power cable is damaged, This is an electronic product. In order to avoid the risk of a fire, burn, injury or electric shock.
 - Unplug the power supply before inserting or removing any part.
 - This product is only suitable for the intended purpose described in the user manual; do not use any part not recommended by the manufacturer.
 - Keep the power cord away from any heated surface.
 - Do not use this pump if the inlet or outlet is blocked; make sure that there is no lint, hair, etc, blocking the inlet and outlet.
 - Do not drop or insert any foreign objects into this product.
 - Do not use this product in environments containing aerosol (spray agent) products or limited oxygen content.
 - In order to disconnect this product, place the control button in "OFF" position and unplug the pump.
 - Do not operate this product if the cable or plug is damaged, it is damaged or the pump is wet.
 - The product is only used indoor. To reduce the risk of electric shock, do not expose it in rain.
 - This pump is not suitable for continuous use. If this pump is used in a longtime, it may not be operated or be overheated. This pump operation period should not exceed 5min. To avoid excessive heating capacity built in this pump, must maintain the pump shutdown 10min between two full charge cycles.
 - This product has a polarized attachment plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

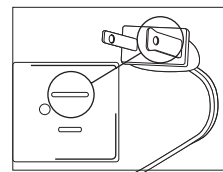

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

CAUTION

- Power supply: Input AC110-120V 60Hz.
- To reduce the risk of electric shock, please use this product indoors.
- Do not allow any child to operate this air pump.
- Make sure that there is no debris at the outlet and inlet in use.
- Store this product in a dry place.
- A child may be pinched between the air mattress and any adjacent vertical surface. There should be a space with at least one shoulder width between the air mattress and the wall, dressing table or other vertical object, to avoid pinching.
- Always make sure that the air mattress is fully inflated during use.

MAINTENANCE INSTRUCTIONS

No specific air pump maintenance is required. Air pump has no user serviceable parts.

MOVING AND STORAGE INSTRUCTIONS

Disconnect the power supply before moving, maintaining or adjusting this product.

 
Please fully cool and properly store this product if it is not used.

Please store this product in a dry and ventilated place;


Clean the outer surface of this pump with a cloth immersed with mild soap/detergent and water.

1 Part List

A x1 Air Mattress With Built In Pump

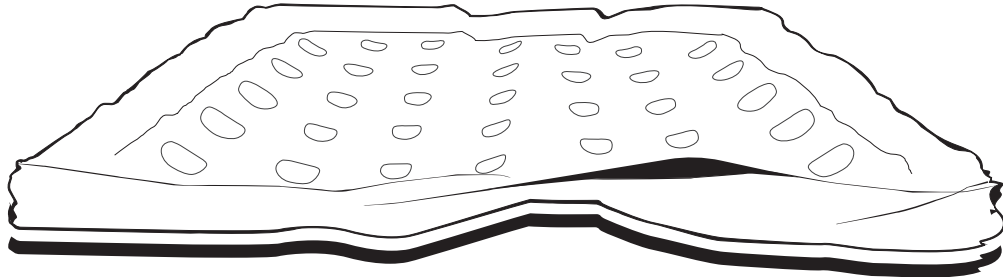

B x2 Carrying Bag

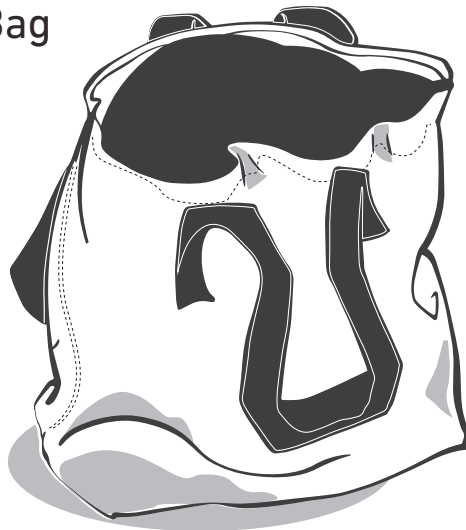 

C x1 Repair Patch

Repair Patch

Clear, self-adhesive
for repairing punctures

 
 
In the event of an accidental puncture, cut out a suitable size patch, Make sure you round the corners of your repair patch to avoid peeling. Make sure area to be patched is clean. Press patch firmly over the puncture. Do not inflate for 20 Minutes.

SET UP GUIDE

Your air bed has a built in air pump as well as a 2 stage valve, both for optional inflation and deflation.


The valve is composed of three parts:

- ① Upper cap
- ② Middle valve with valve lip
- ③ Bleeder valve

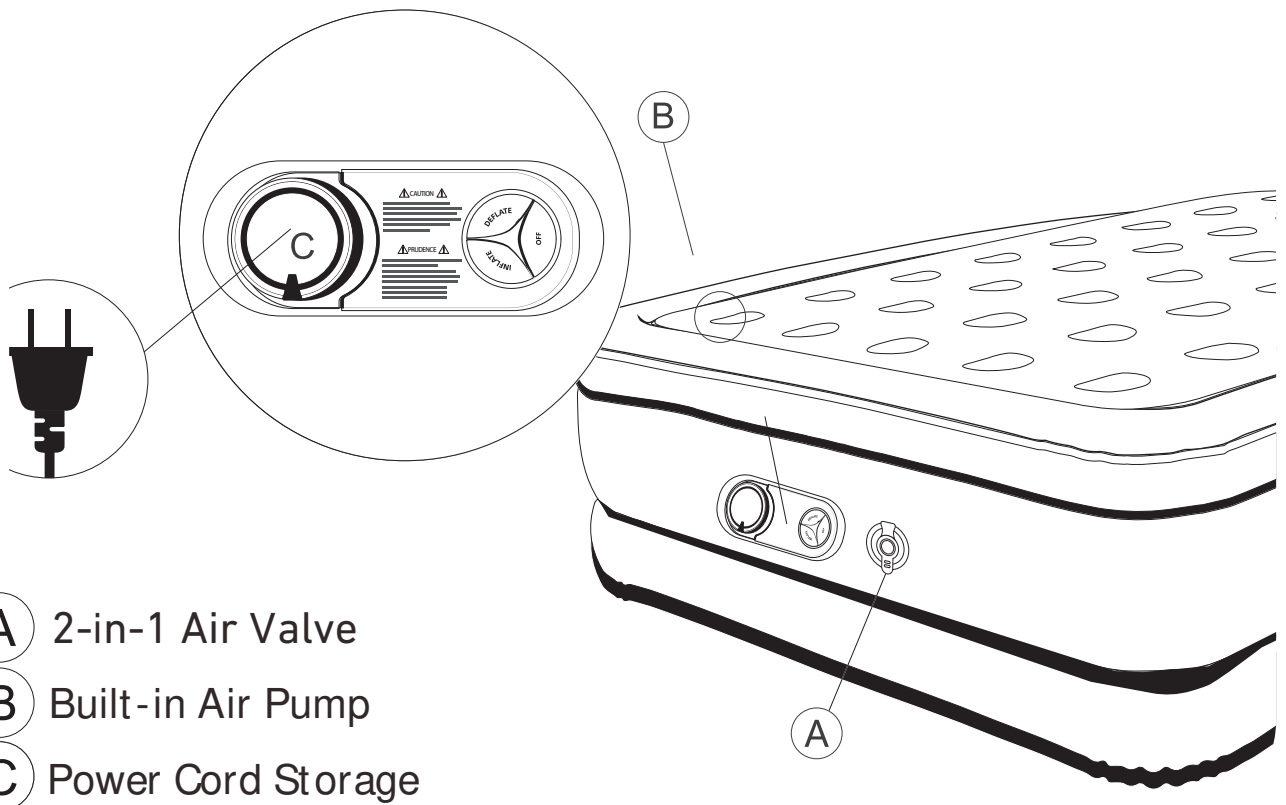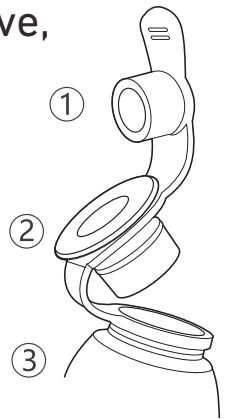


- A 2-in-1 Air Valve
- B Built-in Air Pump
- C Power Cord Storage

 VALVE USAGE GUIDELINES

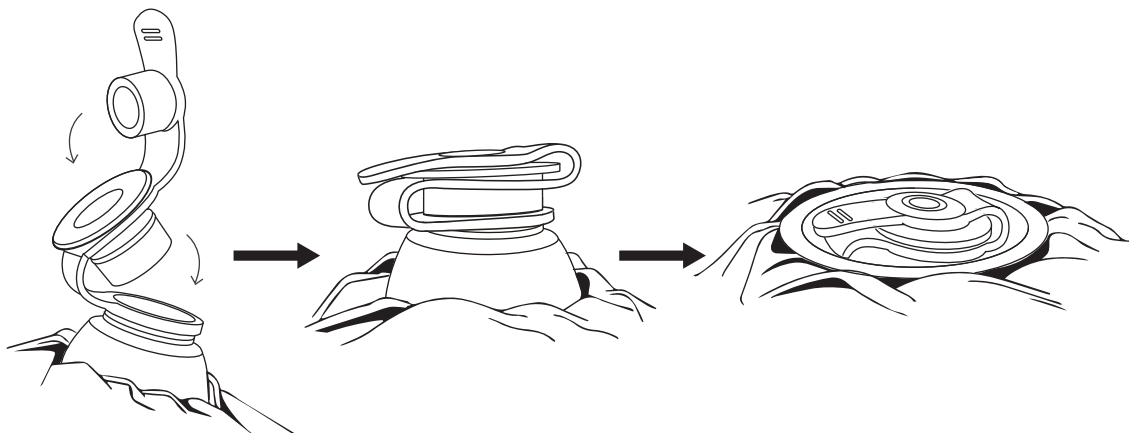


INFLATION

 
Step.1

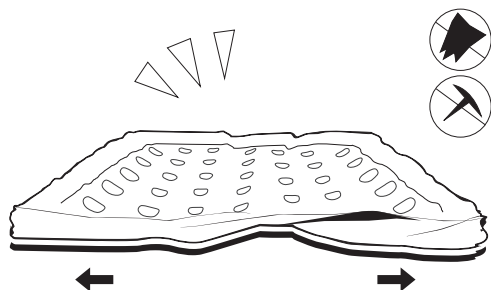


Step.2

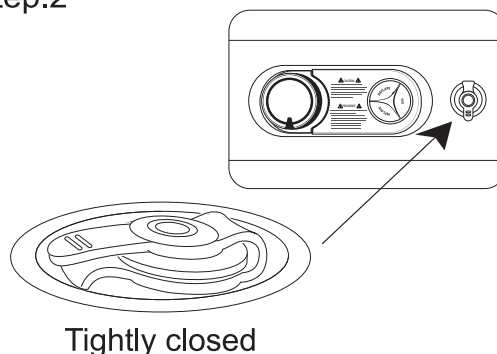 

Step.3

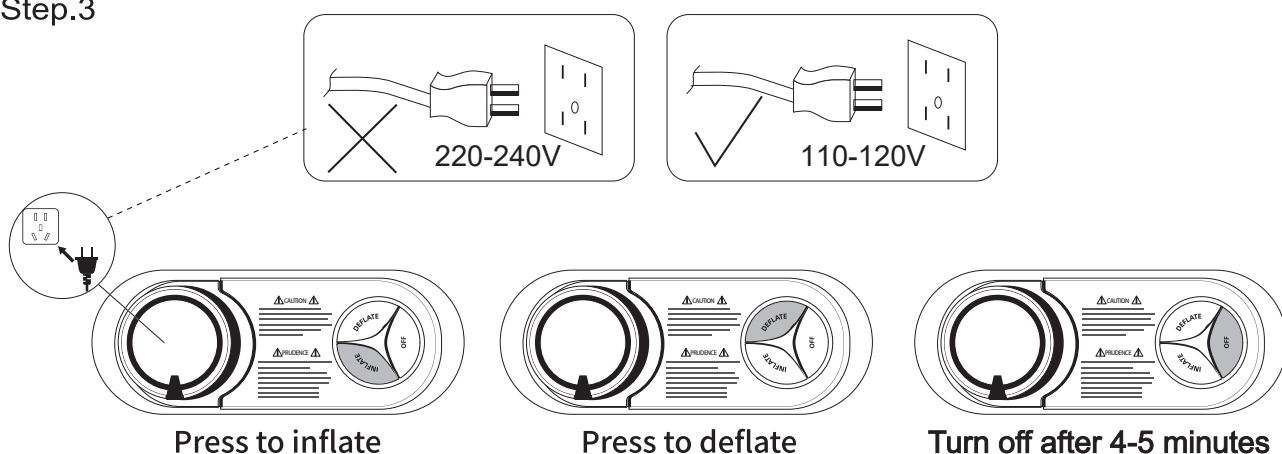 



DEFLATION

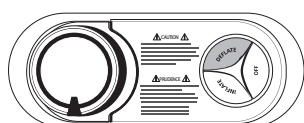 

Press to deflate



  Turn off after 4-5 minutes

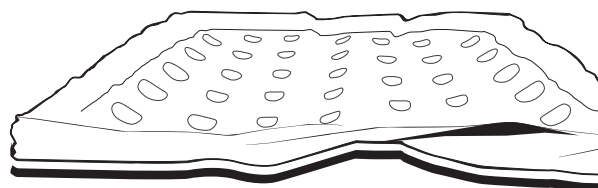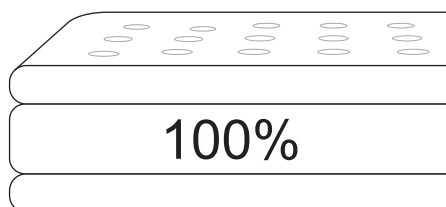


after 3-4 minutes


Model	Suggested Inflation Time
QDC-X16IN-T	110s
QDC-X16IN-Q	150s
QDC-D18IN-T	130s
QDC-D18IN-Q	200s
QDC-J22IN-Q	240s

FOLDING INSTRUCTIONS

 
Step.1

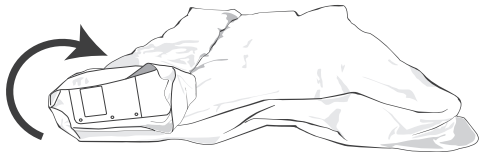


Step.2

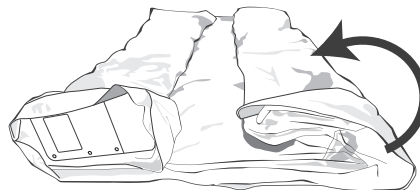 

Step.3

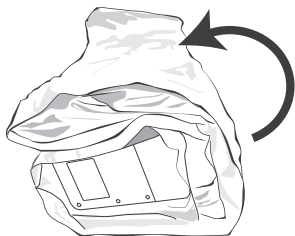 


Step.4

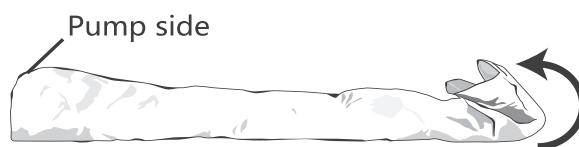 


Step.5



 Step.6

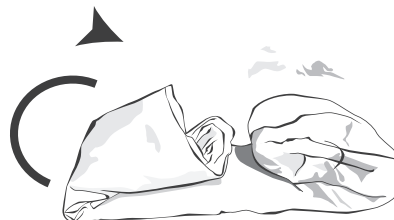


Step.7

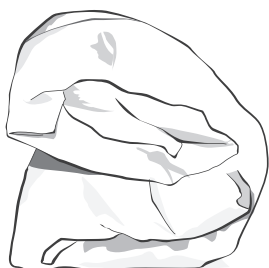 


Step.8 *Appearance of actual bag may vary



 
Note:

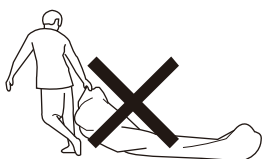

 
Do not drag the deflated air mattress on the ground.

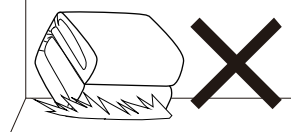

Do not rub the folding place.

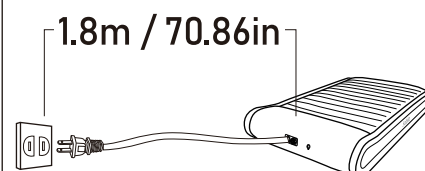 

FIRST INFLATION

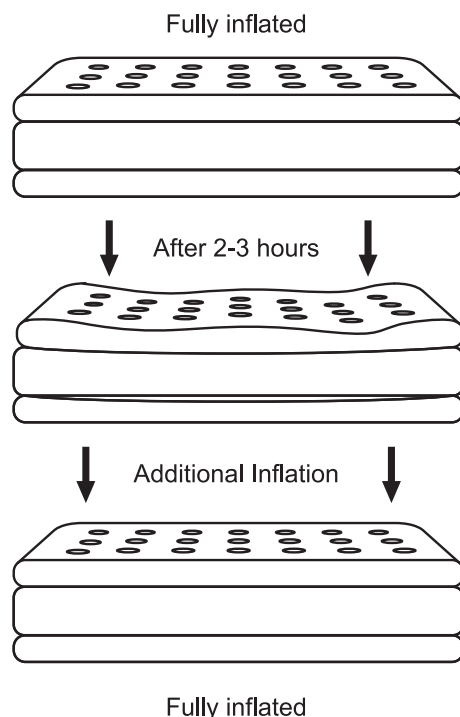 

CARE AND MAINTENANCE

1. Inspect your bed before each use.
2. Keep your bed away from any sharp or protruding objects. Large cuts, tears, or snags may not be repairable and will not be covered by your warranty.
3. When not in use, put the bed in a clean, dry place out of extreme temperatures.

CLEANING

1. DO NOT SUBMERGE MATTRESS IN WATER!
2. For spot cleaning, use a clean damp cloth to wipe the surface of the mattress. Apply a clear liquid dish detergent without dye if necessary.
3. Wet stained area thoroughly gently rub the stained area with detergent. Blot the area to remove the staining substance.
4. Rinse thoroughly and pat dry. Allow your bed to air dry completely after cleaning and before storing.

ADDITIONAL INFORMATION

 
IN CASE OF AIR LEAKAGE

Please check the following in case of air leakage:

1. Is the inflate/deflate valve on the built-in pump turned to the inflate position?
2. Is the secondary inflate/deflate valve cap closed?


Repair patches are included for minor repairs.

HOW TO CHECK AIR LEAKAGE AREA

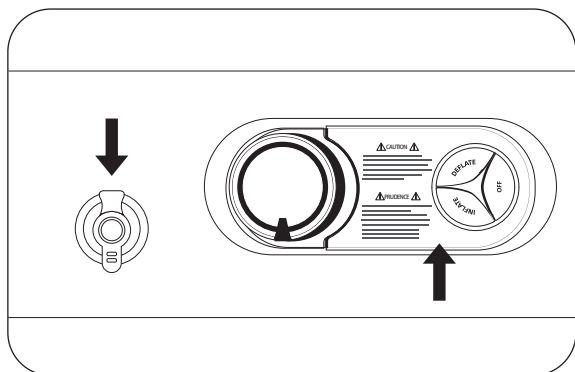


Notice

 Check if the valve and pump are closed.

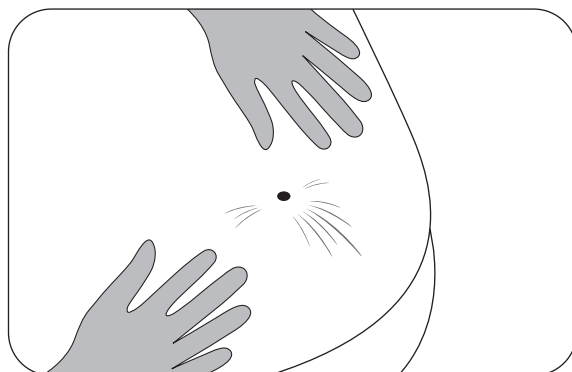

STEP 1

 Inflate the bed and check for air leaks by hand. The air leak is where you can feel a strong air stream coming out.

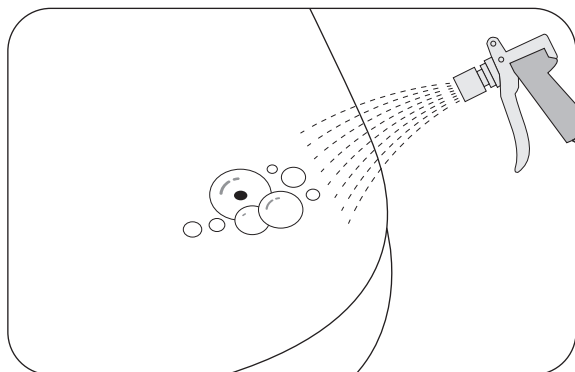

STEP 2

 
Inflate the bed and carry it to the yard. Prepare a water faucet or a bucket of water and then slowly pour it over the whole mattress to see where the bubbles come out.




STEP 3

Inflate the bed, then dip thick soap foam with a soft brush and evenly smear it on the inflatable bed, one area at a time. If you see big bubbles popping out or hear a squeaking sound, that is where air leaks are formed.

HOW TO FIX LEAKS

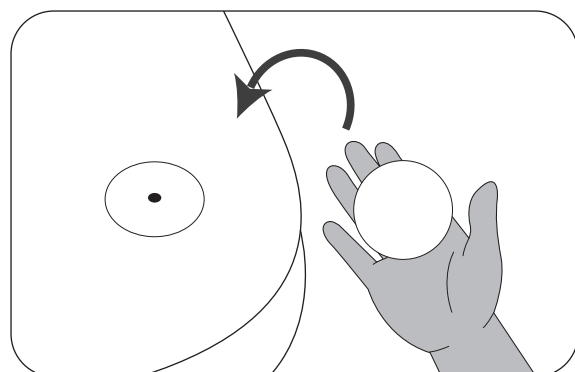

First find the location of air or water leaks, the air mattress well marked, and then the inflatable bed after the gas, the leak will be cleaned with clean water and natural drying, with scissors to cut a moderate patch (preferably cut for round), in the place of air leakage coated with special adhesive, the patch and special adhesive laminated, if the suede broken, the suede scraped clean, then use the material and glue, after two hours of pressurization can be left for twelve hours After re-inflation.

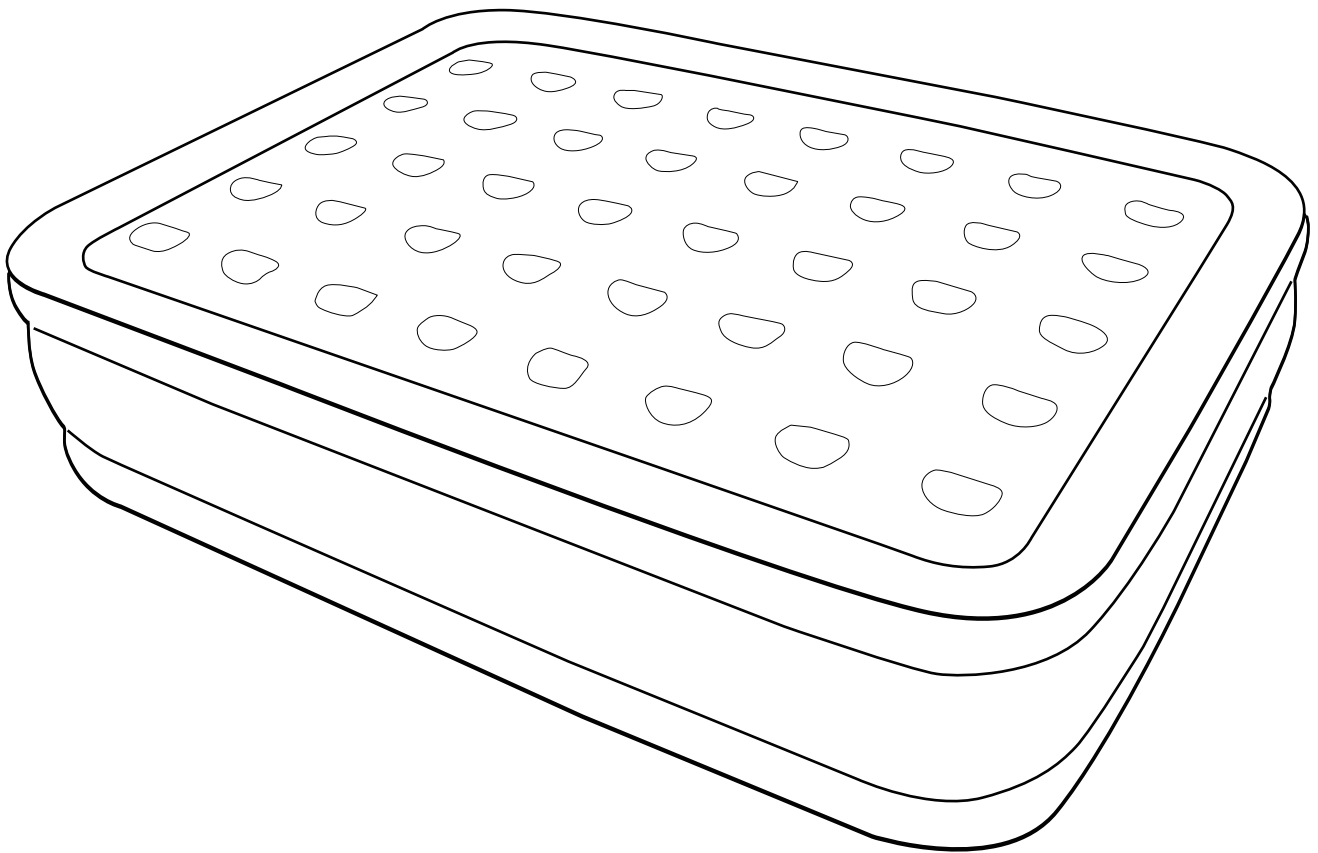 

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.