



7750 SERVICE ROUTER 7950 EXTENSIBLE ROUTING SYSTEM

MD-CLI QUICK REFERENCE GUIDE

3HE 15218 0000 TQZZA 01

Issue: 01

February 2019

Nokia is a registered trademark of Nokia Corporation. Other products and company names mentioned herein may be trademarks or tradenames of their respective owners.

The information presented is subject to change without notice. No responsibility is assumed for inaccuracies contained herein.

© 2019 Nokia.

Contains proprietary/trade secret information which is the property of Nokia and must not be made available to, or copied or used by anyone outside Nokia without its written authorization. Not to be used or disclosed except in accordance with applicable agreements.

Table of Contents

1	MD-CLI Overview	5
1.1	Enabling the SR OS MD-CLI	6
1.2	Disabling the SR OS MD-CLI	6
2	Navigational and Operational Commands	7
3	Entering and Leaving the Configuration Workflow	9
4	Configuration Workflow Commands	11
4.1	Commit Confirmed Commands	12
4.2	Configuration Management Commands.....	12
5	Output Modifiers	15

1 MD-CLI Overview

This guide provides a comparison of the Nokia SR OS Model-Driven Command Line Interface (MD-CLI) to those used by Junos OS and IOS XR.

For more information about the MD-CLI, see the following resources:

- *SR OS Release Notes* for your current release
- *MD-CLI User Guide*
- *MD-CLI Command Reference Guide*
- MD-CLI introductory videos: <https://www.youtube.com/playlist?list=PLgKNvI454BxcgfUQGMAEGE4yiV8c-ZDLu>

Table 1 describes command syntax symbols used in this guide.

Table 1 Command Syntax Symbols

Symbol	Description
	A vertical bar represents an OR, indicating that only one of the parameters in the brackets or parentheses can be selected.
()	Parentheses indicate that one of the parameters must be selected.
[]	Brackets indicate optional parameters.
Bold	Commands in bold indicate commands and keywords.
Italic	Commands in <i>italics</i> indicate that you must enter text based on the parameter.

In the following examples, **location** and **graceful-shutdown** are command names. For the **location** command, *keyword* must be one of the keywords **cf1**, **cf2**, or **cf3**. For the **graceful-shutdown** command, *boolean* must be one of the keywords **true** or **false**, although explicitly using the keyword **true** is optional.

```
location keyword  
keyword - (cf1 | cf2 | cf3)
```

```
graceful-shutdown boolean  
boolean - ([true] | false)
```

1.1 Enabling the SR OS MD-CLI

Perform the following procedure to enable the MD-CLI from the classic CLI.

1. Back up your configuration. Any existing configuration will be converted to the MD-CLI format.
2. Enable the MD-CLI and model-driven mode, using these commands in this order:

```
configure system management-interface cli md-cli auto-  
config-save  
configure system management-interface configuration-mode  
model-driven
```

3. Log out of the CLI.
4. Log back in to the CLI. The MD-CLI engine is now active.

1.2 Disabling the SR OS MD-CLI

Perform the following procedure to return to classic CLI mode while preserving the current router configuration.

1. Disable the MD-CLI and model-driven mode in the MD-CLI, using these commands in this order:

```
configure exclusive  
system management-interface configuration-mode classic  
commit
```

2. Log out of the CLI.
3. Log back in to the CLI. The classic CLI engine is now active.

2 Navigational and Operational Commands

[Table 2](#) compares the basic navigational and operational commands of the Nokia SR OS MD-CLI to those used by Junos OS and IOS XR.

The `//` command can be used to switch CLI engines to access classic CLI commands that are not yet available in the MD-CLI. Enter `//command` to run a single command in the other CLI engine. Command completion and `? help` are not available when using `//command`.

Switching CLI engines is described in the *MD-CLI User Guide*.

Table 2 Navigational and Operational Commands

	SR OS MD-CLI	Junos OS	IOS XR
Move back one or more levels	<code>back [number]</code>	<code>up [number]</code>	N/A
Return to the previous working context or to the operational root	<code>exit [all]</code>	<code>exit</code> <code>quit</code>	<code>end</code> <code>exit</code>
Move to the top level of the context	<code>top</code>	<code>top</code>	<code>root</code>
Access the per-session environment	<code>environment</code>	<code>set cli</code>	<code>terminal</code>
Switch CLI engines	<code>//</code>	N/A	N/A
Run a command in the other CLI engine	<code>//command</code>	N/A	N/A
Show the command tree under the present working context	<code>tree [flat]</code> <code>[detail]</code>	N/A	N/A
Exit the CLI session	<code>logout</code>	<code>exit</code> <code>quit</code>	<code>exit</code> <code>quit</code>

3 Entering and Leaving the Configuration Workflow

[Table 3](#) compares the commands for entering and leaving the configuration workflow of the Nokia SR OS MD-CLI to those used by Junos OS and IOS XR.

For more information about the implicit and explicit configuration workflows and the candidate configuration mode, see the *MD-CLI User Guide*.

Table 3 Entering and Leaving the Configuration Workflow

	SR OS MD-CLI	Junos OS	IOS XR
Candidate configuration modes	global exclusive private read-only	global (not a keyword) exclusive private	private (not a keyword) exclusive
Enter the implicit configuration workflow	configure <i>mode</i>	configure [<i>mode</i>] Default: global	configure [<i>mode</i>] Default: private
Leave the implicit configuration workflow	^Z exit [<i>all</i>]	exit quit	^C ^Z exit
Enter the explicit configuration workflow	edit-config <i>mode</i>	N/A	N/A
Leave the explicit configuration workflow	quit-config (at operational root)	N/A	N/A

4 Configuration Workflow Commands

[Table 4](#) compares the configuration workflow commands of the Nokia SR OS MD-CLI to those used by Junos OS and IOS XR.

Table 4 Configuration Workflow Commands

	SR OS MD-CLI	Junos OS	IOS XR
Navigate into a context	Enter the context by typing <i>context</i> For example: router bgp	<i>edit context</i> For example: edit protocols bgp	Enter the context by typing <i>context</i> For example: router bgp 65551
Set an element in the candidate datastore	Enter the context with a value by typing <i>context value</i>	<i>set context value</i>	Enter the context with a value by typing <i>context value</i>
Delete an element from the candidate datastore	<i>delete context</i>	<i>delete context</i>	<i>no context</i>
Show the candidate configuration from the present working context	<i>info</i>	<i>show</i>	<i>show configuration merge</i>
Show the candidate configuration with default and unconfigured values	<i>info detail</i>	<i>show display detail</i>	N/A
Show the candidate configuration with inherited values from configuration groups	<i>info inheritance</i>	<i>show display inheritance</i>	<i>show configuration running inheritance</i>
Show the candidate configuration in a flat format	<i>info flat</i> <i>info full-context</i>	<i>show display set</i>	<i>show configuration merge formal</i>
Show changes between datastores	<i>compare</i>	<i>show compare</i>	<i>show commit changes diff</i>
Discard changes in the candidate datastore	<i>discard</i>	<i>rollback</i> <i>rollback 0</i>	<i>abort</i>
Update the candidate baseline	<i>update</i>	<i>update</i>	N/A
Validate changes in the candidate datastore	<i>validate</i>	<i>commit check</i>	N/A

Table 4 Configuration Workflow Commands (Continued)

	SR OS MD-CLI	Junos OS	IOS XR
Commit changes to the running datastore	<code>commit</code> (also runs <code>validate</code>)	<code>commit</code> (also runs <code>check</code>)	<code>commit</code>
Roll back to a previous configuration	<code>rollback checkpoint</code> <code>startup</code>	<code>rollback checkpoint</code>	<code>rollback configuration to checkpoint</code>
Run an operational command	<code>/command</code>	<code>run command</code>	<code>do command</code>

4.1 Commit Confirmed Commands

[Table 5](#) compares the commit commands of the Nokia SR OS MD-CLI to those used by Junos OS and IOS XR.

Table 5 Commit Confirmed Commands

	SR OS MD-CLI	Junos OS	IOS XR
Start the commit confirmed	<code>commit confirmed [number]</code> Default timeout: 10 minutes	<code>commit confirmed [number]</code> Default timeout: 10 minutes	<code>commit confirmed [number] [minutes number]</code> Note: timeout is in seconds unless specified with minutes parameter
Accept a commit confirmed	<code>commit confirmed accept</code>	<code>commit</code>	<code>commit</code>
Cancel a commit confirmed	<code>commit confirmed cancel</code>	<code>rollback 1 and commit</code>	Exit configuration mode or clear the CLI session

4.2 Configuration Management Commands

[Table 6](#) compares the configuration management commands of the Nokia SR OS MD-CLI to those used by Junos OS and IOS XR.

Table 6 Configuration Management Commands

	SR OS MD-CLI	Junos OS	IOS XR
Paste configuration	Input is accepted in hierarchical, flat, full-context or compare format, opening ({} and closing {}) braces navigate	Input is accepted in display set format or using load merge terminal relative for hierarchical configuration	Input is accepted in formal format for hierarchical configuration
Load and merge a configuration file	load merge <i>url</i> commit	load merge <i>url</i> commit	load <i>url</i> commit
Load and replace a configuration file	load full-replace <i>url</i> commit	load override <i>url</i> commit	load <i>url</i> commit replace
Save configuration to a file	info > <i>url</i>	save <i>url</i>	copy running-config <i>url</i>
Show the startup configuration	admin show configuration	show configuration	show configuration persistent

5 Output Modifiers

[Table 7](#) compares the output modifiers of the Nokia SR OS MD-CLI to those used by Junos OS and IOS XR.

Table 7 **Output Modifiers**

	SR OS MD-CLI	Junos OS	IOS XR
Count occurrences	count	count	show utility wc
Match a pattern	match <i>string</i> Note: enclose the pattern in apostrophes for regular expression matches	match <i>regexp</i>	include <i>regexp</i>
Disable output pagination	no-more	no-more	N/A
Redirect output to a file	>	save	file

Customer Document and Product Support



Customer Documentation

[Customer Documentation Welcome Page](#)



Technical Support

[Product Support Portal](#)



Documentation Feedback

[Customer Documentation Feedback](#)

