




UNIVERSAL

LOW CURRENT SOURCE UNIT HARNESS

PART #: UTVS-HRN-LC-SRC

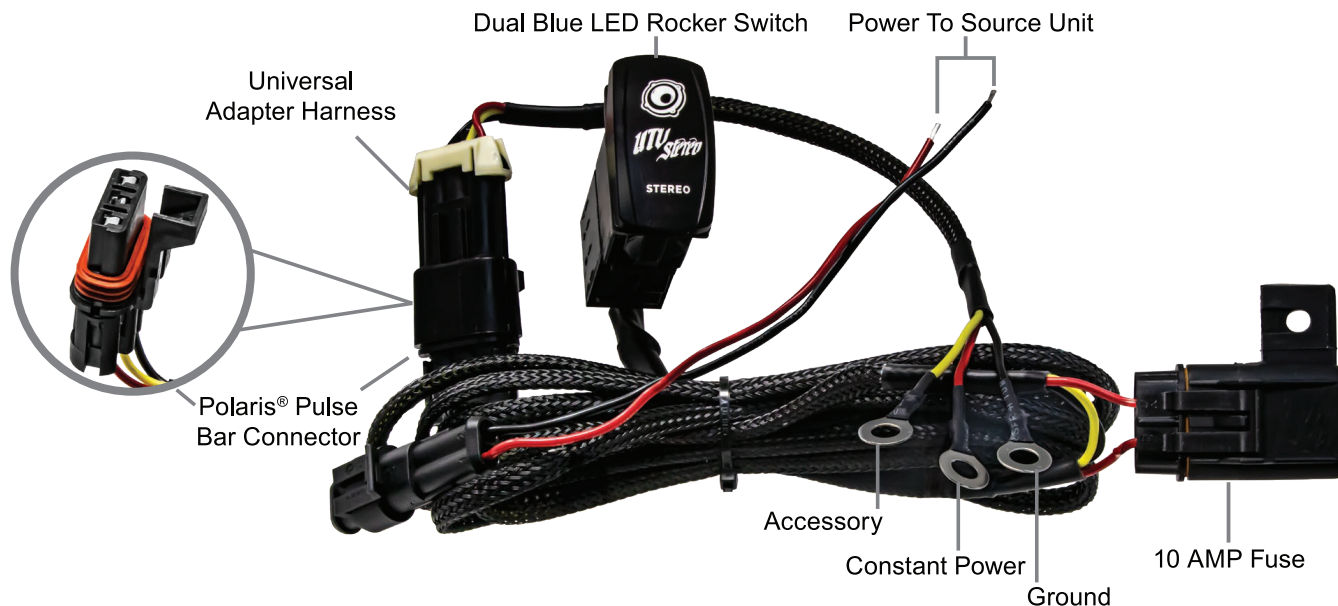

Step 1: Mount switch to your desired location.

Step 2: Route harness to your Polaris Pulse Bar or factory bus bar.

Install on RZR: Route Pulse plug from the switch and connect to the Pulse bar.

Universal Install: Route bus bar wires using the universal adapter from the switch to the factory bus bar.

Step 3: Connect power and ground of the source unit harness to the source unit.

**Use this configuration if you want the head unit to work on Constant power controlled by rocker switch.
Your head unit will work anytime regardless of key on.*

Red Ring Terminal goes to constant post - Constant Power (fused by 10 amp)

Yellow Ring Terminal goes to ACC post - Acc Power used to light up lower LED on switch

Black Ring Terminal goes to Ground Post

**Use this configuration if you want the head unit to work on ACC power controlled by rocker switch. The head unit will only work when key is on.*

Red Ring Terminal goes to ACC Post- Accessory Power (fused by 10 amp)

Yellow Ring Terminal goes to ACC Post- Acc Power used to light up lower LED on switch

Black Ring Terminal goes to Ground Post

Note: If you have our UTV Stereo 2nd battery kit installed in your vehicle, make sure your power source is properly connected to the accessory battery.

SCAN TO WATCH
THE PRODUCT VIDEO



NEED HELP? EMAIL TECH SUPPORT AT:
INFO@UTVSTEREO.COM OR CALL: 480.616.2299