




UNIVERSAL

LOW CURRENT SOURCE UNIT HARNESS

PART #: UTVS-HRN-LC-SRC

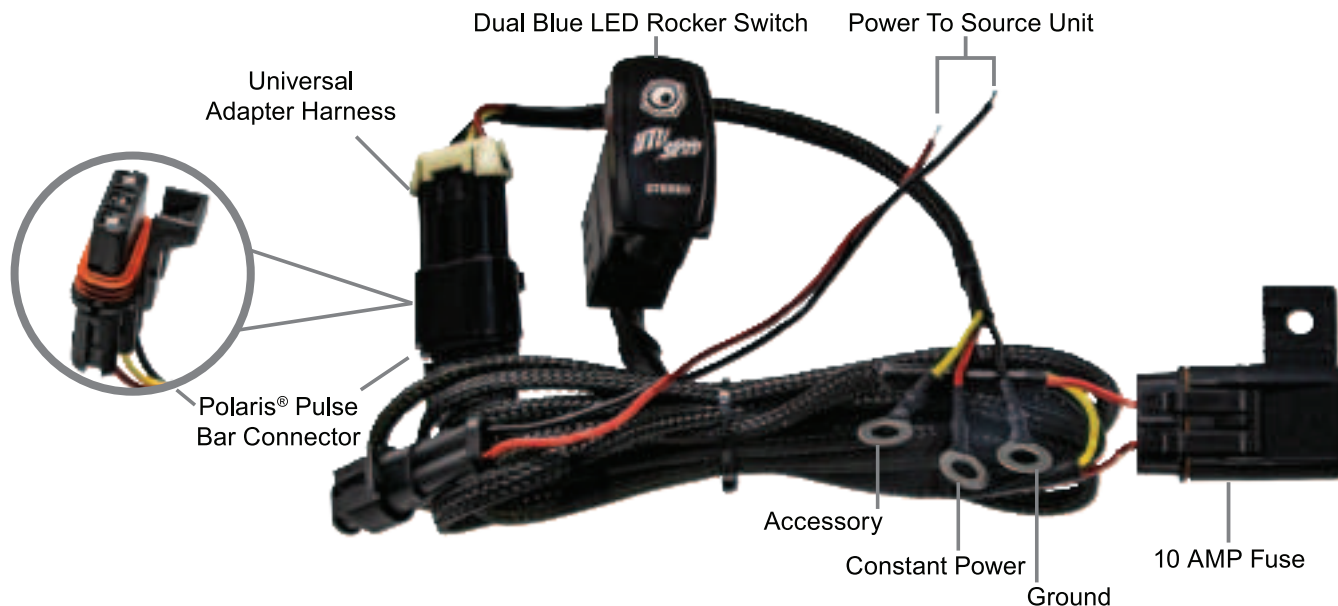

Step 1: Mount switch to your desired location.

Step 2: Route harness to your Polaris Pulse Bar or factory bus bar.

Install on RZR: Route Pulse plug from the switch and connect to the Pulse bar.

Universal Install: Route bus bar wires using the universal adapter from the switch to the factory bus bar.

Step 3: Connect power and ground of the source unit harness to the source unit.

**Use this configuration if you want the head unit to work on Constant power controlled by rocker switch. Your head unit will work anytime regardless of key on.*

Red Ring Terminal goes to constant post - Constant Power (fused by 10 amp)

Yellow Ring Terminal goes to ACC post - Acc Power used to light up lower LED on switch

Black Ring Terminal goes to Ground Post

**Use this configuration if you want the head unit to work on ACC power controlled by rocker switch. The head unit will only work when key is on.*

Red Ring Terminal goes to ACC Post- Accessory Power (fused by 10 amp)

Yellow Ring Terminal goes to ACC Post- Acc Power used to light up lower LED on switch

Black Ring Terminal goes to Ground Post

Note: If you have our UTV Stereo 2nd battery kit installed in your vehicle, make sure your power source is properly connected to the accessory battery.

**SCAN TO WATCH
THE PRODUCT VIDEO**



**NEED HELP? EMAIL TECH SUPPORT AT:
INFO@UTVSTEREO.COM OR CALL: 480.616.2299**