

KEURIG

Let's get brewing.

K•ICED™ Plus

SINGLE SERVE COFFEE MAKER

"Recipe book not included"

814100228

Quick Start Guide

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. **READ ALL INSTRUCTIONS.**
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Close supervision is necessary when any appliance is used by or near children.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.

1. **WARNING:** Keep all plastic bags away from children.
2. **CAUTION:** Keurig recommends using only Keurig® My K-Cup® Plus, Keurig® Keurig® K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause damage to the unit or void warranty.
3. **WARNING:** Use of K-Cup® pods should be no more than the max handle and the display should be reset (if applicable) should be reset (if applicable) after each use.
4. **WARNING:** There is extremely hot water or dry steam in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
5. **CAUTION:** There are sharp needles that puncture the K-Cup® pod against the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.

9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact service center.
10. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
15. Do not use appliance for other than intended uses.
16. Use brewer in upright position only.
17. Only use K-Cup® pods intended for this appliance. If one pod does not fit, do not force it into the appliance.

6. **WARNING:** If the appliance has a two-prong plug (one prong is wider than the other) to reduce the risk of electric shock, the plug is designed to fit into a polarized outlet only one way. If the plug does not fit one way, the outlet is not the right one. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
7. **POWER CORD INSTRUCTIONS:**
 - a. A short power supply cord is provided to reduce risk of electric shock resulting from becoming entangled in or tripping over a longer cord.
 - b. Longer detachable power supply cords or extensions or cords are available and may be used if care is exercised in their use.
 - c. If a longer detachable power supply cord or extension cord is used:
 - i. The marked wattage rating of the detachable power supply cord or extension cord shall be at least as great as the rated wattage of the appliance.

- I. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
- II. The longer cord should be arranged so that it will not drape over the counter top or tabletop, where it can be pulled on by children or tripped over.

- II. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, such as non-water based pods, heat a pod to avoid the possibility of dripping the hot liquids. DO NOT assume the next user will do this.



SAVE THESE INSTRUCTIONS

Before You Brew



1 Plug & Place

Place your product near a grounded three-prong electrical outlet. The plug must fit properly.

NOTE: The brewer will automatically shut off after 5 minutes of inactivity or you can hold down the BREW OVER ICE button to turn the brewer off at any time.



3 Lift & Lower

Lift and lower the handle. Do not insert a K-Cup® pod; the brewer will power on automatically.

(K-Cup not included)

2 Rinse & Fill

Remove the water reservoir cap, then fill the reservoir straight up to the max line.

Rinse reservoir with fresh water and fill to the MAX FILL line.

Replace cap and close lid, making sure it is locked into place with the brewer. Locks in.

NOTE: Do not use distilled water.



4 Cleansing Brew

The brewer will blink. Press the Brew button and select the blinking BREW button to start a cleansing brew. Pour the hot water into the cup. The one-time setup process is now complete and you are ready to brew!

NOTE: For the best experience, we recommend a cleansing brew after coffee before brewing other types of beverages or a hot water brew.

To Brew Over Ice




1 Place Tumbler & Pod

Add ice to a tumbler and place on the drip tray. Then remove the K-Cup pod from the K-Cup holder. Press the BREW button. The BREW button will blink and the brewer will begin brewing. Brewing is complete when the indicator is illuminated. Lift the handle and remove the K-Cup pod.

(K-Cup not included)

CAUTION: When brewing, there is extremely hot water in the K-Cup pod holder. Do not touch the pod holder or the handle during the brewing process. Do not drink the brew.

NOTE: For best results, we recommend using the cup with the K-Cup pod. A single brewed pod will provide full cup, and if the pod holder is filled up with the original hot water, you can avoid the flow of water and coffee grounds.

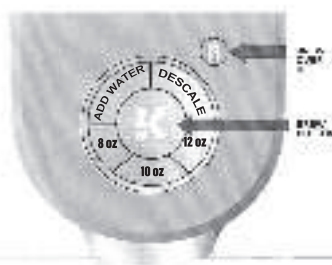

2 Brew & Enjoy!

The BREW button will blink. Press the BREW button. The BREW button will blink and the brewer will begin brewing. Brewing is complete when the indicator is illuminated. Lift the handle and remove the K-Cup pod.

HOW TO RECYCLE K-CUP PODS IN THREE STEPS

CAUTION: POD IS HOT. ALLOW TO COOL AFTER USE.

PEEL
Starting at puncture, peel lid and dispose.

EMPTY
Compost or dispose of grounds (Filter can remain.)

RECYCLE
Check locally to recycle empty cup. Visit Keurig.com/recycle to learn more.

*Not recycled in all communities.

To Brew Hot



1 Place Mug & Pod

Place a mug on the drip tray. Lift the handle and place a K-Cup pod in the K-Cup pod holder. Lower the handle completely to close the lid.

(K-Cup not included)



2 Brew & Enjoy!

The BREW button will blink. Select your brew size, then press the blinking BREW button. The BREW button will remain illuminated while brewing.

Brewing is complete when the indicator is illuminated. Lift the handle and remove the K-Cup pod.

HOW TO RECYCLE K-CUP PODS IN THREE STEPS

CAUTION: POD IS HOT. ALLOW TO COOL AFTER USE.

PEEL
Starting at puncture, peel lid and dispose.

EMPTY
Compost or dispose of grounds (Filter can remain.)

RECYCLE
Check locally to recycle empty cup. Visit Keurig.com/recycle to learn more.

*Not recycled in all communities.

CAUTION: While brewing, there is extremely hot water in the K-Cup pod holder. Do not touch the pod holder or the handle during the brewing process. Do not drink the brew.

NOTE: For best results, we recommend using the cup with the K-Cup pod. A single brewed pod will provide full cup, and if the pod holder is filled up with the original hot water, you can avoid the flow of water and coffee grounds.

- Accessory type and quantity may vary depending on the model.
- The images shown here are for illustrative purposes only and may be subject to change.

NOTE: The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

Brewer Features

BREW OVER ICE: Brew a refreshing cold coffee in minutes. The BREW OVER ICE feature automatically adjusts brew temperature — starting hotter to help extract full flavor then cooling down for less ice melt.

FAST & FRESH BREWED: Coffee made in minutes.

BACK-TO-BACK BREWING: Limited delay brews a second cup without need to wait for resetting.

TRAVEL MUG FRIENDLY: Accommodates travel mugs up to 7 fl. oz.

MAINTENANCE ALERT: Reminds you to descale after about 250 cycles.

AUTO OFF: Automatically turns your brewer off 1 minute after the last brew for energy savings.

HIGH ALTITUDE: To ensure your brew works properly at higher altitudes (5000' feet or above), High Altitude setting by pressing and holding the BREW button and 8oz button for 5 seconds.

Descaling Procedure

(Descaling Solution not included)

Before you begin, you will need to know your mug's fresh water. Keurig® Descaling Solution and mugs for work. Do not use paper cups. Be sure that there is no brew mode in the K-Cup pod holder. Please allow approx. 15-20 minutes for the descaling procedure.

STEP 1: Descaling Solution Rinse

Place the empty handle of Keurig® Descaling Solution into or empty water reservoir. Then fill the empty bottle with water and pour into the water reservoir. Do not insert a K-Cup® pod.

Place a large mug on the drip tray. To enter the Descaling Mode, brew with the brewer powered off by pressing and holding the BREW OVER ICE button. Then press and hold the 8oz and 12oz buttons together for 5 seconds until the DESCAL light turns on.

When the BREW button begins flashing, press the BREW button to start the descaling. The brewer will brew liquid into the mug. Repeat the descaling process.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

PRINTED IN MEXICO

Elbrd: J.M. SC: 06-28-2024

OBPN: AW0000000656 REV B

SHDML: KIPK900FBK_B

Add: KIPK900FWH_KIPK900FAGY_KIPK900FMGY

Caring for Your Brewer

To get the most out of your brewer, keep your brewer running at peak performance by following the care instructions below.

Frequency	Product	Details
After every brew	Keurig® Descaling Solution	Descale for best and consistent performance. Follow the instructions below.
After every brew	Keurig® Descaling Solution	Descale for best and consistent performance. Follow the instructions below.
After every brew	Keurig® Descaling Solution	Descale for best and consistent performance. Follow the instructions below.

Turn off Descaling Mode: Follow the full descaling procedure as outlined in a guide.

If the brewer has been in a storage or "off" brew mode for days, run a descaling brew before brewing your next brew.

For best results, wash the water reservoir and the drip tray with warm, soapy water and rinse clean. Do not use any abrasive or chemical cleaners to clean the outside of your brewer.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a towel or let it dry naturally.

STEP 1: Rest & Rinse

Empty the water reservoir and refill to the MAX FILL line with fresh water.

STEP 2: Fresh Water Rinse

Press the BREW button until it begins flashing. Repeat until the DESCAL light turns off. The brewer will now be in Descaling Mode and will be ready for use.

NOTE: The descaling action of Keurig® Descaling Solution may result in a "foam" dispersed from the brewer. This is normal as the solution is reacting with mineral deposits in the brewer. Do not drink the brewer's output until the descaling is complete. If the descaling process is not complete, the output will be cloudy. If this occurs:

- Turn off and unplug the brewer.
- If the brewer is in Descaling Mode, the water reservoir should be empty. Rinse the water reservoir thoroughly and refill with water.
- Plug the brewer back in, power on, and repeat the Step 2: Fresh Water Rinse cycle. The brewer should begin to function normally as the solution is rinsed out and the descaling is complete. If the problem persists, contact your local service center for assistance.

814100228

