



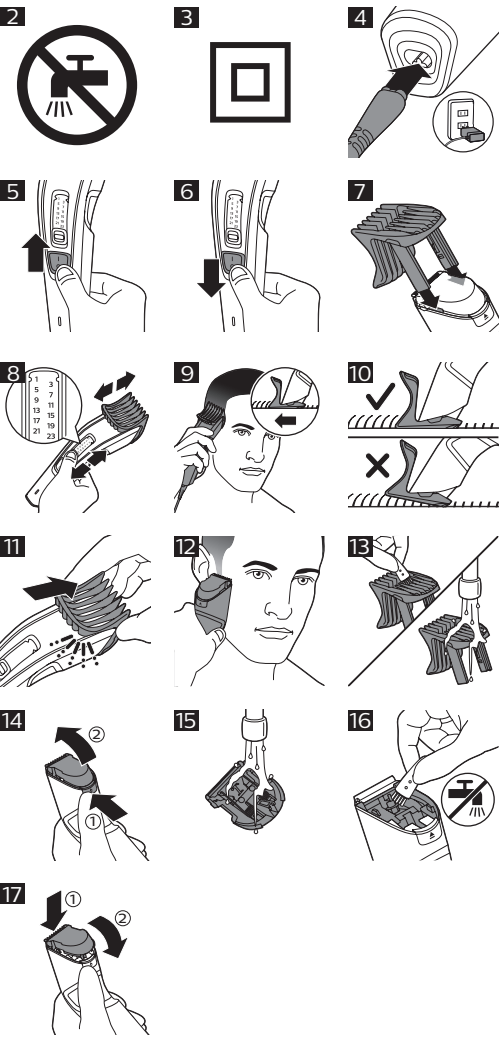

1

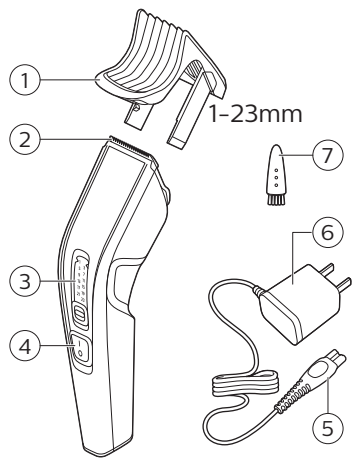

English

Introduction
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

General description (Fig. 1)

- 1 Trimming comb 1-23 mm
- 2 Cutting unit
- 3 Length setting adjustment slide
- 4 On/off slide
- 5 Small plug
- 6 Supply unit
- 7 Brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- Only use the detachable supply unit (HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Caution

- This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap (Fig. 2).
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Using the appliance

The hair length settings are indicated in millimeters, the comb cuts the hair to a length of 1 mm to 23 mm. The settings correspond to the remaining hair length after trimming.

Warning: Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Tip: Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.

Switching the appliance on and off

Note: You can only use the appliance when it is connected to the wall socket.

- 1 Insert the small plug into the appliance and put

- the supply unit in the wall socket (Fig. 4).
- 2 Push the on/off slide upwards to switch on the appliance (Fig. 5).
- 3 Push the on/off slide downwards to switch off the appliance (Fig. 6).

Trimming with the trimming comb

- 1 Attach the trimming comb to the appliance (Fig. 7).
- 2 slide the length setting adjustment slide to the desired length setting (Fig. 8).

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

- 3 Switch on the appliance (Fig. 5).
- 4 Move the appliance slowly and with light pressure against the direction of hair growth (Fig. 9).

Note: Make sure that the flat part of the comb always stays in contact with the skin to obtain an even result (Fig. 10).

Trimming without comb

Use the trimmer without the trimming comb to trim hair close to the skin (0.5 mm) or to contour the neckline and sideburns.

Caution: Be careful when you trim without a comb because the cutting unit removes every hair it touches.

Pull the comb off the appliance (Fig. 11). Switch on the appliance (Fig. 5). Touch the hair lightly with the trimmer. Make well-controlled movements (Fig. 12).

Cleaning

Warning: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Warning: Never immerse the appliance in water and do not rinse it under the tap.

Note: Only the cutting element and the comb can be cleaned with water.

- 1 Make sure that the appliance is switched off and disconnected from the wall socket.
- 2 Wipe the housing of the appliance with a dry cloth.
- 3 Remove the comb. Clean it with the cleaning brush and rinse it with water (Fig. 13).
- 4 Press the release button. The cutting unit comes off the appliance (Fig. 14).
- 5 Clean the cutting unit with the cleaning brush or rinse it under the tap (Fig. 15).
- 6 Clean the inside of the appliance with the cleaning brush (Fig. 16).
- 7 Shake off excess water.
- 8 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 17).

Replacement

Only replace a worn or damaged cutting unit with an original Philips cutting unit, available from authorized Philips service centers.

- 1 Press the release button. The cutting unit comes off the appliance (Fig. 14).
- 2 Insert the lug of the new cutting unit into the guiding slot and push the cutting unit onto the appliance (Fig. 17).

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance does not work when I switch it on.	The comb does not touch the skin when you move the appliance through the hair.	Make sure the comb is always fully in contact with the skin when you move the appliance through the hair.
	You only move the appliance in one direction.	Because not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).
	The setting of the comb has changed during trimming.	Check the setting of the comb. If you push the appliance too hard onto the scalp, you may accidentally change the setting of the comb.
	The comb is not assembled correctly.	Detach the comb and reattach it.
	The cutting performance decreases when the cutting unit and the comb are dirty.	Clean the cutting unit and the comb (see 'Cleaning').

Problem	Possible cause	Solution
The appliance does not work when I switch it on.	The appliance is not connected to the the wall socket.	Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 4).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.