


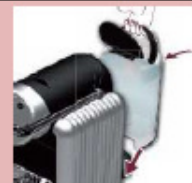

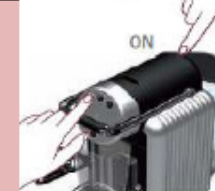







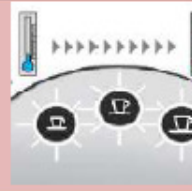


## Nespresso Zenius ZN100 - Descaling

1	2	3	4	5	6	7
						
Clockwise rotating red lights in buttons indicate that the machine needs to be descaled	To start the descaling process, switch the machine "OFF"  * please ensure the lever is closed.	Fill tank with 1 litre of water and 2 sachets of Nespresso descaling liquid	Attach water tank to the machine	Place an empty container (1.5 ltr) under the coffee outlet.	Press and hold the Ristretto button and switch the machine "ON". Ristretto button will light up red	Press the Ristretto button to start descaling process. Descaling liquid will flow from the coffee and hot water nozzle
8	9	10	11	12	13	14
						
When descaling is finished, the Lungo button will light up red	Empty the water receptacle and put it back under the coffee outlet	Empty the water tank and rinse it with clean water	Fill the tank with clean water and attach it to the machine	Press Lungo button to start rinsing process	When rinsing has finished, the flow will stop and Lungo button will remain lit up red	The machine can now be switched "ON". Lights in Ristretto, Espresso and Lungo buttons will flash white while the machine is heating up. It is then ready to use