

**Dell Chassis
Management
Controller (CMC) for
Dell PowerEdge FX2
Version 1.40**

Release Notes



Release Type and Definition

Dell Chassis Management Controller (CMC) for Dell PowerEdge FX2

The Dell Chassis Management Controller (CMC) for Dell PowerEdge FX2 is a system management hardware and software solution for managing the Dell PowerEdge FX2 chassis.

Version

Dell Chassis Management Controller for Dell PowerEdge FX2 version 1.40

Release Date

October 2016

Previous Version

1.33

Platform(s) Affected

Dell Chassis Management Controller (CMC) for Dell PowerEdge FX2 supports the following Chassis:

- Dell PowerEdge FX2
- Dell PowerEdge FX2s

Sleds:

- Dell PowerEdge FD332
- Dell PowerEdge FC430
- Dell PowerEdge FC630
- Dell PowerEdge FC830
- Dell PowerEdge FM120x4

IOMs:

- Dell PowerEdge FN 410S I/O Aggregator
- Dell PowerEdge FN 410T I/O Aggregator
- Dell PowerEdge FN2210S I/O Aggregator
- Dell PowerEdge FX2 1 Gb x8 RJ45 pass-through module
- Dell PowerEdge FX2 10 Gb x8 SFP pass-through module

License Requirements

CMC supports software licensing to use advanced systems management features. For more information, see the *Dell Chassis Management Controller for Dell PowerEdge FX2 User's Guide*.

What is Supported?

Supported Web Browsers and Operating Systems

- Microsoft Internet Explorer 9

- Microsoft Internet Explorer 10
- Microsoft Internet Explorer 11
- Microsoft EDGE
- Safari version 7.1
- Safari version 8.0
- Mozilla Firefox version 40
- Mozilla Firefox version 41
- Google Chrome version 49
- Google Chrome version 50

What's New

- Federal Information Processing Standards (FIPS) 140-2 cryptography. Certificate number XXX.
- Performing racresetcfg from CMC GUI interface.
- Updating the OpenSSL open source package to version 1.0.2f.
- Updating the OpenSSH open source package to version 7.1p1.
- Updating glibc to version 2.23 to address new security vulnerabilities.
- TLS 1.2 and TLS 1.1 by default.
- User configuration option to enable TLS 1.0 using RACADM.
- SNMPv3 configuration only in RACADM.
- Querying the health status of the chassis components using WSMAN.
- Initiating Quick Deploy of blade through RACADM.
- Configuring CMC using WSMAN for the following features:
 - Host Name of Chassis
 - IP Configuration
 - DNS
 - DNS Registration
 - NTP
 - Change Default Password
- Sending alerts when the power state of an IOM changes and when a power ON of IOM fails.
- Populating CMC Device name correctly in the inventory.

Release 1.32

- Quick link to the Dell Tech Center page from the CMC web GUI.

Release 1.30

- Firmware and driver refresh of COMMs cards on Dell's 13th generation of PowerEdge servers.
- Capture and replicate chassis configurations through XML, based on the Chassis Configuration Profile.
- Support for blinking server identification LED from Quick Link on the Homepage.
- Backup or restore through XML, based on the Chassis Configuration Profile.
- Create and deploy a library of Boot Identity Profiles (boot from iSCSI/SAN configurations) to enable quick restore of workload to a spare server.
- Populate iDRAC DNS setting from the CMC Quick Deploy page.
- Display iDRAC DNS name as the slot name.

- Option to view iDRAC LCLog results directly in CMC after applying a Server Configuration Profile.
- Support for Secure IOM mode. Secure IOM provides additional CMC security to support IOMs running in UC-APL secured environments.
- Support for launching IOA GUI on the Homepage and I/O Module overview page.

Fixes

- Fixed an issue that caused the Server Profile page to hang when a profile is applied to multiple servers.

Version 1.33

- Fixed an issue that occasionally prevented CMC from applying the desired Fan PWM after a CMC reset.

Version 1.32

- Fixed an issue with Server/Host operating system (OS) network flap, which occurs occasionally on Modular platforms for a short duration during CMC initialization.
- Fixed an issue with Server/Host OS network port off, which occurs after CMC is reset on full-height Modular platforms when the second network daughter card is not installed.
- Fixed an issue causing the CMC Web GUI to becoming unresponsive while using Active Directory login with WinRM.
- Fixed an issue causing memory full condition when the internal log files are oversized.

Version 1.30

- Fixed an issue with the "getmacaddress -m <server> -t iscsi" command displaying non-iSCSI MAC addresses after using the iSCSI filter.

Important Notes

- CMC network default setting is Static with IP address of "192.168.0.120". Complete the CMC network setup by directly connecting a client system on the same network. For more information, see the *Chassis Management Controller for PowerEdge FX2 Version 1.40 User's Guide* available at **dell.com/support/manuals**.
- Connecting the STK/Gb2 port of the CMC, located at the back of the chassis, to the management network can cause network disruption if not properly cabled and configured in CMC. Before using the STK/Gb2 port of the CMC, see the PowerEdge FX2 Version 1.40 Owner's Manual available at **dell.com/support/manuals**.
- The PCIe cards are allocated to sleds based on the sled type, for more information, see the Chassis Management Controller for PowerEdge FX2 Version 1.40 User's Guide available at **dell.com/support/manuals**. This is applicable to Dell PowerEdge FX2s chassis.
- Some advanced features require CMC enterprise license. For more information about the CMC licenses, see the *Chassis Management Controller for PowerEdge FX2 Version 1.40 User's Guide* available at **dell.com/support/manuals**.
- Storage features using Storage Sleds require a storage license. For more information about storage licenses, see the Chassis Management Controller for PowerEdge FX2 Version 1.40 User's Guide available at **dell.com/support/manuals**.
- When Certificate Validation is "Enabled", FQDN of the system should be provided. If the IP address of the Domain Controller is specified when the certificate validation is enabled, the Active Directory login may not work.
- The `cfgRacTuneIdracDNSLaunchEnable` object and the "iDRAC Launch Method" setting on the **Chassis Overview > Setup > General** CMC Graphical Interface requires the Chassis Configuration Administrator privilege.

- Microsoft Windows Server 2012, Windows Server 2008 R2, Windows 7 do not support TLS 1.2 and TLS 1.1. Install update below to enable TLS 1.2 and TLS 1.1 as a default secure protocols in WinHTTP in Windows. For details, see the Microsoft knowledge base article 3140245 at support.microsoft.com.
- Supports LDAP authentication with OPEN-DS. OPEN-DS must have DH key larger than 768 bits.

Known Issues

Issue 1:

Description

PCIe card device name displayed in iDRAC GUI and CMC GUI are not same for Broadcom/Qlogic 10G card.

Resolution

Refer to the iDRAC GUI, it is accurate and current.

Versions/Systems Affected

CMC for PowerEdge FX2s 1.1 or later

Issue 2:

Description

An error occurs while importing CMC configuration file using local racadm or remote racadm.

Resolution

This issue occurs when IPv6 is enabled or disabled from the configuration file. Enable or disable IPv6 using the command "racadm config -g cfgIPv6LanNetworking -o cfgIPv6Enable 0".

Versions/Systems Affected

CMC for PowerEdge FX2 1.1 or later

Limitations

Issue 1:

Description

In the Microsoft Edge browser, the Boot Identity Profiles page in the CMC GUI is slow when 1500 or more MAC addresses are created from the MAC pool for the Boot Identity profile.

Resolution

Create less than 1500 MAC address in the Microsoft Edge browser. Use other supported browsers for more than 1500 MAC addresses.

Versions/Systems Affected

CMC for PowerEdge FX2 1.40 or later

Issue 2:

Description

Racresetcfg does not work when the six RSA-4096 or four RSA-2048, and two 2048 DSA SSH public keys are uploaded to the CMC.

Resolution

Do not upload six RSA-4096 or four RSA-2048, and two 2048 DSA SSH public keys to the CMC.

Versions/Systems Affected

CMC for PowerEdge FX2 1.10 or later

Installation

Prerequisites

See the Dell Chassis Management Controller for PowerEdge FX2 Version 1.40 User's Guide for the following information:

- Prerequisites
- Hardware and software requirements
- Installation and configuration

Check for latest CMC firmware at **dell.com/support**.

Installation Instructions

1. Set up initial access to CMC.
2. Access CMC through a network.
3. Add and configure CMC users.
4. Update CMC firmware.

For more information, see the Chassis Management Controller for PowerEdge FX2 Version 1.40 User's Guide, available at **www.dell.com/cmcmmanuals**.

Contacting Dell

Note: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit **dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down menu at the top of page.
4. Select the appropriate service or support link based on your need.

Accessing Documents from Dell Support Site

You can access the required documents in one of the following ways:

- Using the following links:
 - For Chassis Management Controller documents - **dell.com/cmcmmanuals**
 - For iDRAC and Lifecycle Controller documents — **dell.com/idracmanuals**
 - For Enterprise System Management documents — **dell.com/openmanagemanuals**
 - For Serviceability Tools documents — **dell.com/serviceabilitytools**
 - For Client System Management documents — **dell.com/OMConnectionsClient**

- For OpenManage Connections Enterprise systems management documents — **dell.com/OMConnectionsEnterpriseSystemsManagement**
- For OpenManage Connections Client systems management documents — **dell.com/OMConnectionsClient**
- From the Dell support site:
 1. Go to dell.com/support/manuals.
 2. In the "Tell us about your Dell system" section, under "No", select "Choose from a list of all Dell products" and click "Continue."
 3. In the "Select your product type" section, click "Software and Security".
 4. In the "Choose your Dell Software" section, click the required link from the following:
 - Client System Management
 - Enterprise System Management
 - Remote Enterprise System Management
 - Serviceability Tools
 5. To view the document, click the required product version.
- Using search engines
 - Type the name and version of the document in the search box.

Information in this document is subject to change without notice.

© 2016 Dell Inc. All rights reserved.

This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.