



ANDERIC RRU401.7 | 4-Device Universal Remote Instructions Guide




Notice: For additional help, you may contact us at anderic.com. To download a PDF version of this manual, please go to the link below or scan QR code above. We recommend bookmarking below URL on your mobile device so you can quickly retrieve the instructions anytime you need it.

Anderic.com/rru401

Installing the Batteries, Screw and Cable attachment (Sold Separately)

See below diagram for help with installing the batteries, battery cover, screw, and cable attachment.

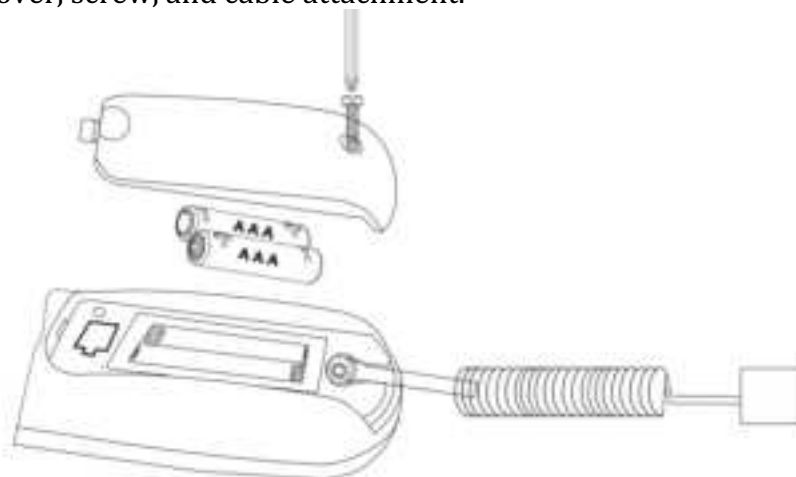

Programming - Code Input Method

This method allows for programming the remote using codes from the attached code list.

1. Turn on the device you want to control.
 2. Find the corresponding brand code from code list below, and write down.
TV: _____ DVD: _____ STB: _____ AUDIO: _____
3. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
4. Input the 4-digit code from code list

- a. If valid - Mode key light will go out directly.
 - b. If invalid - Mode key will blink three times quickly and go out, please try inputting the code again.
5. (TEST) Check to see if most of the keys work to the control your device, if not, please try another code under the same brand & repeat all steps. You may also try "Auto code search method" or "One button search method" below.

Note: During the programming mode, not pressing any button for 20 seconds will cause remote to exit programming mode.

Programming - Auto Code Search Method

Allows for programming without codes by scanning through all codes in the database.

1. Turn on the device you want to control.
2. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
3. Press [CH+] or [CH-] key and release, it will search forward or backward.
4. When the device powers off (or video starts playing), press [POWER] key to save and exit (During searching, you can press key [CH+] or [CH-] to change searching direction, and if press any other key, it will exit from searching mode).

Programming - One Button Search Method

Allows for programming by only pressing a single key. Only works for TV and Cable/STB codes.

1. Power on the device you want to control.
2. Press & release the mode key you wish to program (e.g., TV).
3. Find your corresponding brand number from below list, press and hold corresponding number key until unit powers off. Once unit powers off, release the key.
Note: while holding the number key, after 3 seconds the mode light goes out, it will enter the searching mode for that brand; mode light will now be flashing about once every second.
4. Check other keys to see if most can work correctly. If not, repeat steps 1-4.



DIGIT	TV	DVD/VCR	AUDIO	CABLE/STB
0	Insignia/Dynex	Insignia/Dynex	Bose	RCA/GE/Proscan
1	LG/Zenith	LG/ Sylvania	Denon	Motorola
2	Panasonic/ Mitsubishi	Panasonic	LG	DirecTV
3	Philips/Magnavox	Philips/Magnavox	Onkyo	Dish Network System/Echostar
4	Samsung	Pioneer	Panasonic	General Instruments
5	Sanyo	RCA	Philips	Hughes Network Systems
6	Sharp	Samsung	Pioneer	Scientific Atlanta/Cisco
7	Sony	Sharp	Samsung	Magnavox/Philips
8	Toshiba	Sony	Sony	Amino/ADB
9	Vizio	Toshiba	Yamaha	Panasonic

Code display

Use this method to display the code that is programmed.

1. Press and release the mode key you would like know code for (e.g., TV).
2. Press key "[MENU]" and "[1]", the Mode key flash times indicate the first digit of the code.
3. Press key "[MENU]" and "[2]", the mode key flash times indicate the second digit of the code.
4. Press key "[MENU]" and "[3]", the mode key flash times indicate the third digit of the code.
5. Press key "[MENU]" and "[4]", the mode key flash times indicate the fourth digit of the code.

NOTE: If the current digit is 0, the mode key will not flash.

Multi-mode Combine Power

When enabled, this feature allows for powering on/off multiple devices with a single press of the POWER button.

Enable - Multi-mode Combine Power

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 0". Mode key remains lit.
3. Press all mode keys (i.e., TV, STB, DVD) you wish to enable multi-mode combine power.
4. Press [POWER] key to save and exit.

Disable - Multi-mode Combine

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 0". Mode key remains lit.
3. Press [POWER] key to save and exit, Mode key blinks two times and goes out.

Device mode lock

When enabled, this feature allows for locking a device mode so that it cannot be re-programmed. It can be used as a safety feature for accidental programming. If enabled, device lock must be disabled first before mode can be programmed again.

1. Press and hold the mode key (e.g., STB) you wish to enable/disable device mode lock for, for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 1".
 - a. If enabled - The mode light goes out directly
 - b. If disabled - The mode light blinks two times

Channel Punch-through

When enabled, all channel keys: 0-9, [-], [RECALL],[CC], [SAP], [CH +]&[CH -] will always send the code of mode assigned, no matter what mode the remote currently resides.

Example: After programming channel punch-through to STB mode, if remote is presently in TV mode when pressing a channel key, remote will send the code for STB instead of TV.

1. Press and hold the mode key (e.g., STB) you wish to enable/disable channel punch-through for, for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 2".
 - a. If enabled - The mode light goes out directly.
 - b. If disabled - The mode light blinks two times.

Volume Punch-through

When enabled, all volume keys: [MUTE], [VOL+]&[VOL-] will always send the code of mode no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., TV) you wish to enable/disable volume punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 8 3".
 - a. If enabled - The mode light goes out directly.
 - b. If disabled - The mode light blinks two times.

Media Punch-through

When enabled, all media keys: [STOP], [RECORD], [<<], [||<<], [PAUSE], [>>|], [>>], [PLAY] will always send code of mode assigned, no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., DVD) you wish to enable/disable media punch-through for, for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 4".
 - a. If enabled - The mode light goes out directly.
 - b. If disabled - The mode light blinks two times.

Roku® Punch-through (+ D-Pad)

When enabled, all Roku related keys: [EXIT] (⏻), [<<], [PLAY],[PAUSE], [>>], [INFO](*), [HOME],[REPLAY], [NETFLIX], [UP], [DOWN], [LEFT], [RIGHT]&[OK] will always send code of mode assigned, no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., STB) you wish to enable/disable Roku punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 7 0".
 - a. If enabled - The mode light goes out directly.
 - b. If disabled - The mode light blinks two times.

Roku Punch-through (NO D-Pad)

When enabled, all Roku related keys: [EXIT] (⏻), [<<], [PLAY],[PAUSE], [>>], [INFO](*), [HOME], [REPLAY], [NETFLIX] will always send code of mode assigned, no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., TV) you wish to enable/disable Roku punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 7 1".
 - a. If enabled - The mode light goes out directly.
 - b. If disabled - The mode light blinks two times.

All-Key Punch-through

When enabled, all keys will always send the code of mode assigned, no matter what mode the remote currently resides. Note: All-Key Punch-through has the lowest priority amongst all punch-through types. You may enable other punch-through modes to work alongside and they will have higher priority.

1. Press and hold the mode key (e.g., TV) you wish to enable/disable all-key punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 7 3".

- a. If enabled - The mode light goes out directly.
- b. If disabled - The mode light blinks two times.

Individual Key Punch-through

Individual Key Punch-through allows for individually assigning keys to “punch-through” to the mode of your choosing. After enabling punch-through to a given key, the key will always send the code to the assigned device no matter what mode the remote currently resides.

Note: Individual Key Punch-through has the highest priority amongst all punch-through types.

Enable - Individual Key Punch-through

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the key.
2. Input code “9 8”,
3. Press the corresponding key you wish to enable punch-through for,
4. Press the mode key you want to assign it to (e.g., TV, STB, AUX); mode light goes out directly.

Note: To re-assign a key to a different mode, just repeat steps 1-4.

Disable - Individual Key Punch-through

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the key.
2. Input code “9 0 0”,
3. Press the key you want to disable the punch-through for; mode light blinks two times to confirm.

Learning function

Learning allows for programming of individual keys using your existing remote's codes.

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Press and release [MENU] key, the mode key blinks slowly, the remote is now in learning mode.
3. Press and release key you want to be learned, mode light now remains on.
4. Align both remotes by pointing them at each other, with a distance of about 2 inches apart with IR LEDs directly aligned.
5. Press and hold the corresponding key on the target remote control until mode light blinks three times, then flashes slowly; means code learned successfully, continue to step 6.
 - a. If unsuccessful - mode light flashes two times quickly & exits from learning mode; this may indicate not enough memory space, please delete some learned keys. Please start over from step 1.
6. Repeat steps 3-5 to learn all your needed keys while model light blinks slowly, then

7. Press mode key (e.g., TV) to save and exit.

Delete individual learned key

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Press and release [MENU] key, the mode key blinks slowly, the remote is now in learning mode.
3. Press and hold the key you want to delete learned code from,
 - a. If successful - The mode light blinks three times, remote saves and exits.
 - b. If unsuccessful - The mode light flashes two times and exits.
4. Repeat steps 1-3 to delete other learned keys.

Delete all learned keys from a single device

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Press and release [MENU] key, the mode key blinks slowly, the remote is now in learning mode.
3. Press and hold the mode key you want to delete all learned keys from (e.g., TV) until the mode light blinks three times and exits.

Delete all learned keys from all devices

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 8", mode light blinks two times slowly to confirm and exits.

Macro function

Macros allow for multiple keys to transmit with the pressing of one dedicated key. Example, with a single press of the assigned key, the remote could Power on TV, Change input, Volume Increase, Power on Cable Box & Input channel 530.

Setting a Macro Key while in a specific Mode only (Fixed Device)

What is Fixed Device? This setting allows for assigning a macro key to be used while in the designated mode only. Example, if "FAV" key is assigned to "TV" mode to send macros. "FAV" key will operate as normal if remote is in any other mode such as STB, DVD or AUDIO. "FAV" key will only send the assigned macro if remote is in "TV" mode when the key is depressed.

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 5",
3. Press key to assign macro function to, the LED flashes once and remains on;
4. Press the mode key (e.g., TV), then follow by pressing the keys in order in which you want the remote to transmit them. If you want to change modes during the sequence, press the corresponding mode key (e.g., DVD) in sequence and then continue with pressing remaining keys you wish.

5. When complete, Press and hold any Mode key (e.g., TV) for about 3 seconds to save and exit.

Setting a Macro Key that works while in any mode (Non-fixed device)

What is a non-fixed device? This setting allows for always sending the function of the macro key no matter what mode (i.e., TV, DVD, STB, AUDIO) the remote resides.

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 6",
3. Press key to assign macro function to, the LED flashes once and remains on;
4. Press the mode key (e.g., TV), then follow by pressing the keys in order in which you want the remote to transmit them. If you want to change modes during the sequence, press the corresponding mode key (e.g., DVD) in sequence and then continue with pressing remaining keys you wish.
5. When complete, Press and hold any Mode key (e.g., TV) for about 3 seconds to save and exit.

Example: Assigning "FAV" key to Power on TV, Change input, Increase volume by 1, Power on Cable Box, Input channel 530. Press the following keys in sequence:

Hold [TV] for 3 seconds, [9], [9], [6], [FAV], [TV], [POWER], [INPUT], [VOL +], [CBL], [POWER], [5], [3], [0] & finally, press and hold [TV] for 3 seconds to save.

Delete programmed macro key:

Simply skip step 4 from above procedure.

Macro functionality notes:

- This remote allows up to 5 keys having macro functionality.
- This remote can program a maximum of 15 steps per each macro.
- If programming a macro over a previously assigned macro, it will replace it.

Backlight adjustments

Toggle backlighting on/off

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 5".

Toggle backlighting length of time: 3 - 10 seconds

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 6".

Toggle backlighting brightness: 100/75/50/25%

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 7".

Reset to Factory Default Status

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 9 9"; all mode lights will light and stay lit for about 3 seconds then go out to confirm successful reset.

FOR ADDITIONAL HELP AND SUPPORT VISIT ANDERIC.COM. ANDERIC® IS A REGISTERED TRADEMARK OF DAN'S ELECTRONICS ETC. INCORPORATED. ALL RIGHTS RESERVED.

Code List

Roku Enhanced TV

Element	2726, 2802, 2804
Haier	2783, 2823
Hisense	2848, 2722, 2782, 2804 2847, 2726, 2802,
Hitachi	2803, 2806, 2814, 2815 2816, 2818, 2819, 2821 2822, 2826, 2833, 2847 2849
Insignia	2723, 2724, 2752, 2805 2807, 2808
JVC	2848, 2654, 2723
LG	2726, 2848
Magnavox	2654, 2829, 2813
ONN	2848, 2848, 2726, 2802, 2804
Philips	2848, 2726, 2802, 2804
Proscan	2848, 2726, 2802, 2804
RCA	2848, 2726, 2802, 2804
Roku Player	2730, 2851, 5246
Sanyo	2848, 2726, 2802, 2804
Sharp	2725, 2733, 2780, 2781 2809
TCL	2654, 2802, 2726, 2802, 2804, 2848
Westinghouse	2848, 2726, 2802, 2804

TV

A_Nity	2428 2438 2439 2445
Accurian	2252
Acer	2144
Action	2078
Admiral	2493 2608 2504 2505 2523 2624 2012 2024
Advent	2042 2058 2186 2048 2057 2282

Advertura	2481
Aiko	2011 2553
Aiwa	2465 2460 2154
Akai	2465 2570 2577 2578 2609 2054 2035 2215 2044 2157 2266 2284 2002 2030 2109 2216 2220 2332 2478 2525 2513 2611
Akio	2488
Aaron	2034 2063
Alatron	2465
Aleron	2486
Ambassador	2020
America Action	2458
Ampro	2020
Anam	2566 2567 2568 2570 2571 2572 2573 2574
Anderic	2002 2096 2155 2191 2192 2308 2314 2362 2372 2387 2609
Aoc	2199
Aomni	2361 2041 2044 2086 2111 2083 2046 2302 2453 2541
Apex Digital	2692
Apple TV	2481
Ascent	2181 2226
Astar	2413
Asus	2184 2380 2263 2124 2023 2020 2011 2404 2363 2320 2293 2286 2260 2252 2244 2241 2079 2065 2051 2027 2466 2294 2126 2506 2513 2541 2314 2337
Audiovox	2018
Auria	2286
Aventura	2609
Axion	2493 2493 2015 2507 2608
Belcor	2136 2089 2461
Bell&Howell	2640
Benq	2483 1484
Bloomingdale	2020
Blue Light	
Bradford	

Brilliant	2087
Brockwood	2609
Broksonic	2473 2024 2271 2284 2287 2021 2268 2280 2510 2512 2513 2516 2608 2610 2613 2653
Byd:Sign	2134
C&M	2034
Candle	2481 2501 2002 2609 2525
Carnivale	2002
Carver	2007
Casio	2108
Cce	2027
Celera	2044
Celebrity	2000 2491
Champion	2154
Chang Hong	2044 2502
Chimei	2498
Cisco	2776
Citizen	2002 2003 2008 2011 2213 2214 2279 2284 2481 2611 2539 2608 2609
Clairtone	2467
Clarion	2020
Claris	2442
Coby	2182 2202 2339 2341 2342 2344 2346 2347 2348 2349 2350 2351 2352 2353 2354 2383 2422 2423 2432 2433 2831
Commercial Solutions	2004 2166
Contec	2467 2456 2020
Concerto	2609
Craig	2020 2419
Crosley	2007 2000
Crown	2020 2003 2536 2539 2610
Curtis	2361 2139 2355 2371 2399 2428 2434 2447 2450 2106

Curtis Mathes	2493 2465 2035 2007 2012 2004 2015 2023 2013 2210 2148 2297 2002 2017 2003 2025 2102 2008 2580 2504 2507 2513 2523 2539 2608 2609 2611 2623
Daewoo	2466 2015 2023 2011 2210 2027 2029 2270 2003 2030 2279 2454 2675 2513 2539 2541 2609
Daytron	2539 2609
Dell	2121 2094 2258 2373 2104
Denon	2013
Diamond Vision	2304
Digistar	2185
Digital Lifestyles	2240
Directv Rc50	2636
Directv Rc70h	2637
Disney	2211 2265 2323
Dumont	2001 2531 2534 2505 2609
Durabrand	2682 2018 2019 2024 2020 2186 2211 2090 2506 2528
Dwin	2470
Dynex	2734 2748 2770 2774 2254 2309 2248 2171 2327 2597
Electroband	2467 2491 2000
Electrograph	2234 2199
Electrohome	2024 25392186 2212 2214
Electron	2399
Element	2426 2326 2402 2264 22192598 2599 2600 2849

Emerson	2682 2688 2622 2621 2609 2003 2015 2018 2019 2020 2021 2023 2024 2027 2158 2210 2211 2259 2264 2268 2270 2271 2272 2279 2280 2289 2299 2304 2325 2326 2426 2466 2467 2473 2486 2488 2531 2566 2506 25072509 2513 2539 2163 2240
Emprex	2080
Encross	2191 2314 2155 2308
Envision	2002 2055
Epson	2487 2098
Esa	2054 2018 2289 2299
Fisher	2015 21542507 2521 2524 2526 2535 2538 2558
Fluid	2402
Fujitsu	2457 2488 20522032 2067
Funai	2682 2689 2656 2000 2300 2488 2566 2158 2018 20202123 2267 2299
Futuretech	2020
Gateway	2234 2235
Ge	2483 2480 2465 2166 2019 2004 2005 2023 2044 2148 2183 2269 2273 2504 2541 2505 2512 2513 2516 2523 2528 2609 2612 2625
Gfm	2259 2264 2018 2211 2299 2325 2566
Gibraltar	2001 2002 2505 2609
Go Video	2256 2475
Goldstar	2464 2019 2002 2003 22772533 2539 2609
Gpx	2386 2410
Gradiente	2501 2499
Grundig	2032
Grunpty	2488 2020

Haier	2783 2416 2233 2232 2231 2338 2340 2411 2090 2047 2374 2579 2581 2594 2595 2596 2605 2186 2823
Hall Mark	2019 2609
Hanns.G	2247
Hannspree	2149 2150 2397 2229 2247
Harley Davidson	2488 2267
Harman Kardon	2007
Harvad	2020
Havermy	2012
Hci	2565
Helios	2474 2073
Hello Kitty	2023
Hewlett Packard	2205 2096 2174 2095 2097
Hisense	2690 2691 2722 2782 2544 2326 2041 2135 2209 2316 2424 2356 2366 2543 2606 2792 2804 2847 2848
Hitachi	2685 2677 2680 2608 2609 2493 2462 2463 2462 2206 2101 2013 2031 2147 2267 2395 2003 2049 2165 2455 2500 2507 2586 2593 2539 2554 2803 2806 2814 2815 2816 2818 2819 2821 2822 2826 2833 2835 2836 2847 2849
Hp	2174 2095 2097
Hyundai	2418 2066 2112 2130 2506 2507 2537 2547 2605
I-Inc	2230
Ilo	2158 2171 2127 2197 211 2217 2301
In_Nity	2007
Initial	2197 2301

Insignia	2723 2724 2752 2758 2761 2771 2772 2773 2254 25972309 2164 2204 2184 2248 2018 2024 2157 2176 2139 2107 2209 2265 2299 23272364 2365 2368 2394 2412 2315 2305 2791 2805 2807 2808 2844
Inteq	2001 2505
Iris	2329
Isymphony	2406 2416 2405
Ix	2081
Janeil	2481
Jbl	2007
Jcb	2491 2000
Jcm	2334 2329
Jc Penney	2502 2504 2539 2609 2611 2625
Jensen	2042 2058 2139 2382 24112057 2132 2282
JVC	2699 2701 2700 2703 2702 2757 2501 2245 2195 2336 2343 2028 2335 2024 2006 2116 2212 2274 2443 2444 2040 2512 2820 2834 2835 2836 2849
Kds	2175 2219
Kec	2020
Kenwood	2002 2609
Klh	2044 2046
Kimin	2633 2634 2635
Kloss	2481
Kinka	2461
Kolin	2502,2503 2567 2568 2569
Konka	2157 2038 2530
Kost	2120 2173
Kreisen	2080
Ktv	2467 2020 2002 2003 2539 2610

LG	2667 2668 2669 2670 2671 2672 2673 2674 2675 2676 2698 2726 2738 2739 2740 2762 2477 2164 2357 2367 2019 2001 2122 2417 2034 2070 2104 2138 2243 2283 2303 2504 2477 2474 2482 2485 2505 2508 2608 2609 2398 2790 2797 2840
LG Bed1	2629
LG Bed2	2630
LG Bed3	2631
LG Bed4	2632
Liteon	2095
Lloyd'S	2267
Lodgenet	2493
Lodgingstar	2407
Logik	2493 2547 2548 2608
Luce	2088
Luxmax	2609
Lxi	2016 2007 2019 2004 2015 2502 2504 2505 2507 2523 2609
Mag	2175 2219
Magnasonic	2682 2272 2279
Magnavox	2769 2609 2617 2525 2539 2459 2459 2488 2262 2167 2168 2261 2385 2359 2234 2007 2018 2005 2437 2400 2301 2299 2289 2281 2272 2267 2155 2051 2002 2037 2180 2117 2105 2837
Magnin	2269
Majestic	2493 2493 2609
Marantz	2167 2007 2036 2159 2002 2068 2069 2224 2370
Matsushita	2457 2022 2028
Maxent	2234 2236 2043 2110 2224
Mb Quart	2263
Megapower	2034
Megatron	2456 2019 2013

Mei	2467
Memorex	2493 2488 2248 2278 2275 2019 2015 2024 2014 2186 2211 2212 2265 2266 2271 2287 2081 2277 2507 2608 2609 2611
Mga	2456 2019 2014 2002 2269 2609
Midland	2465 2004 2001 2005 2003 2504 2505 2539
Midsouth T1/Tv2/Tv3	2641 2642 2643
Millrock	2564
Mintek	2197 2301
Minutz	2480
Mitsubishi	2657 2745 2767 2520 2523 2456 2465 2115 2012 2019 2014 2250 2062 2503 2517 2603 2609
Mittsui	2509 2506 2546 2621 2622
Monivision	2034 2063
Montgomery Ward	2493
Motorola	2012 2523 2612
Mtc	2467 2008 2002 2539 2609 2611
Multi Tech	2020
Nad	2016 2103 2019 2074 2502 2609 2623
Naxa	2416 2318 2392 2408
NEC	2482 2479 2036 2159 2221 2250 2338 2002 2080 2505 2616 2532 2609 2612 2620
Nettv	2234 2043 2462
Nexus Electr	2326
Nikko	2019 2011 2002 2502 2505 2507 2609
Niko	2190
Noblex	2507 2522 2529 2540 2549 2552 2653 2555 2557
Norcent	2191 2041 2096 2155 2192 2061 2193 2229 2317 2486 2506

Norwood Micro	2127 2131
Ntc	2011
Nuvision	2324 2208
Ölevia	2662 2100 2113 2143 2487 2567 2568 2569 2618 2198
Ölevia(Lcd)	2618
ONN	2825 2830 2848 2850
Onwa	2020
Optimus	2457 2022 2028 2278 2275 2015 2272 20172507 2623
Optique	2329
Optoma	2149
Optonica	2484 2476 2012 2523 2620 2624
Orion	2488 2473 2024 2171 2271 2287 2425 2021 2268 2280
Panasonic	2731 2777 2583 2523 2512 2457 2469 2172 2129 2022 2028 2335 2278 2292 2275 2005 2123 2288 2463 25622507 2509 2511
Panasonic_Id	2584
Park	2318
PC 100	2852 2853
Pdi	2559
Penney	2483 2480 2016 2019 2008 2004 2005 2148 2002 2003 2269 2277
Philco	2459 2459 2158 2007 2018 2123 2211 2299 2002 2506 2513 2519 2523 2525 2539 2609 2612 2530 2621 2622
Philips	2655 2684 2759 2617 2576 2486 2262 2167 2168 2360 2228 2261 2385 2359 2158 2007 2018 2033 2155 2289 2301 2400 2173 2253 2298 2384 2488 2489 2560 2798 2810 2811 2812 2829 2848
Pilot	2002 2003 2539 2609

Pioneer	2463 2169 2031 2119 2159 2017 2074 2488 2496 2609 2623
Planar	2191 2128
Polaroid	2178 2175 2044 2124 2127 2135 2139 2157 2073 2182 2219 2241 2242 2244 2320 2451 2319 2311 2305 2302 2239 2238 2185 2145 2141 2140 2137 2120 2464 2490 2507 2571 2572 2573 2574 2619
Portland	2023 2011 2210 2003 2513 2539 2609
Prima	2248 2233 2232 2042 2058 2048 2057 2282
Princeton	2034 2039
Prism	2005
Proscan	2745 2334 2166 2326 2416 2004 2148 2322 2428 2439 2002 2025 2273 2508 2504 2512 2609 2817 2824 2832 2841
Proton	2019 2025 2609
Popk	2749
Proview	2175 2219 2598 2599 2600
Pulsar	2001 2505 2609
Pyle	2331 2388 2106
Quasar	2484 2457 2512 2612 2620 2624
Radio Shack	2129 2022 2028 2278 2275 2005 2504 2507 2539 2609 2620 2624
Radioshack	2019 2004 2015 2020 2267 2002 2003

RCA	2683 2747 2764 2463 2369 2401 2333 2328 2326 2416 2012 2004 2005 2210 2407 2428 2399 2439 2449 2297 2296 2295 2263 2246 2183 2157 2148 2031 2010 2305 2273 2269 2114 2102 2092 2504 2541 2609 2612 2513 2523 2623 2627 2628 2633 2634 2635 2393 2166 2793 2786 2793 2801 2845 2849
RCA BED 1	2706
RCA BED 2	2710
RCA BED 3	2711
Rca Com. R130d1	2717 2718 2719 2720 2721 2648 2649 2650 2651 2652
Rca Com. R230d2	2707 2713 2714 2715 2716 2508 2644 2645 2646 2647
Rca Km38R01/02	2695 2696
Rca Led Bed1	2706 2633
Rca Led Bed2	2710 2634
Rca Led Bed3	2711 2635
Rca R130j1	2729
Rca R130k1	2727
Rca R130k2	2728
Rca R230d1	2693
Rca R230d2	2694
Rca Oncorp Bed1	2708 2709
Realistic	2019 2015 2020 2002 2003 2507 2539 2609 2620 2624
Revolutionhd	2199
Rhapsody	2467
Roomcox	2626
Roku Player	2730 2851
Rrvr2p	2664
Runco	2493 2482 2001 2159 2002
S/M	2491 2492
Sampo	2234 2002 2003 2043 2509
Sansui	2843

Sanyo	2658 2763 2795
Samsung	2661 2735 2750 2753 2754 2755 2760 2778 2611 2614 2465 2465 2310 2054 2201 2035 2028 2019 2008 2045 2056 2093 2266 2297 2390 2002 2003 2026 2187 2522 2527 2539 2609 2784 2788 2796
Samsux	2003
Sansui	2018 2024 2171 2161 2212 2265 2267 2271 2284 2287 2843 2414 2425 2280 2542 2545 2607
Sanyo	2485 2099 2007 2015 2009 2050 2154 2269 2495 25102507 2521 2524 2526 2535 2538 2558 2601 2602 2615 2658 2763 2795
Sceptre	2381 2345 2082 2111 2152 2378 2194
Scotch	2019
Scott	2473 2488 2019 2020 2222 2021 2539 2609
Sears	2488 2016 2007 2018 2019 2004 2015 2087 2267 2277
Seiki	2426 2402 2019 2427 2452 2827
Seleco	2150
Sens	2260
Sharp	2687 2697 2725 2732 2733 2737 2780 2781 2620 2624 2484 2456 2471 2472 2358 2059 2012 2196 2003 2068 2170 2362 2375 24602466 2467 2563 2515 2523 2532 2539 2550 2551 2603 2609 27872789 2800 2809
Sheng Chia	2012
Sherwood	2403 2160
Shogun	2609 2611
Sigmac	2419 2421

Signature	2493 2007 2523 2608 2609
Signet	2120
Skyworth	2251 2558
Sole	2088 2173 2199 2313
Sony	2660 2679 2765 2575 2480 2486 2053 2133 2491 2454 2218 2267 2000 2249 22762458 2468 2477 2479 2828
Soundesign	2488 2019 2020
Sova	2294
Soyo	2177 2230 22572587 2588 2589 2590 2591 2592
Spectricon	2175 2219
Squareview	2018
Sss	2020 2609
Starlite	2020
Studio Experi	2063
Sunbritetv	2198 2381 2345 2162
Superscan	2072 2012 2289
Supersonic	2233 2318 2408 2411 2431 2446 2601
Supremacy	2481
Supreme	2491 2000
Sva	2474 2041 2073 2299 2026 2047 2075 2076 2077
Sylvania	2682 2469 2566 2539 26092459 2259 2123 2289 2158 2264 2007 2018 2135 2211 2272 2281 2299 2002 2026
Symphonic	2682 2158 2018 2020 22672272 2289 2566
Syntax	2198 2100 2113 2143 2567 2568 2569
Tandy	2012 2523
Tatun	2511 2512 2513
Tatung	2235 2127 2097 2128 2153 2376 2612

TCL	2654 2092 2148 2114 2102 2369 2409 2183 2166 2004 2005 2210 2012 2401 2393 2333 2328 2305 2296 2295 2273 2269 2246 2010 2031 2564 2802
Technics	2022 2005
Technol Ace	2488
Techview	2306
Techwood	2005 2609
Teco	2091
Teknika	2493 2456 2488 2007 2008 2020 2014 2011 2003 2539 2608 2609 2611
Telefunken	2465 2035
Telerent	2493
Thomas Ame	2267
Tmk	2486 2019 2609
Tnci	2001
Toshiba	2842 2794 2775 2751 2686 2681 2678 2665 2616 2611 2604 2585 2575 2556 2523 2518 2514 2507 2502 2490 2478 2470 2465 2457 2391 2307 2297 2290 2285 2284 2221 2207 2179 2156 2151 2146 2138 2122 2118 2103 2064 2060 2028 2016 2015 2008
Tosonic	2467
Totevision	2003
Trical	2456
Trutech	2211 2225 2312 2562 2563
Tvs	2024
Univerasl	2483
Us Logic	2127
Vea	2493
Vector Research	2002
Venturer	2260 2263
Veos	2087

Victor	2501 2006
Vidikron	2007 2159
Vidtech	2019 2609
Viewsonic	2309 2234 2184 2314 2072 2084 2142 2155 2189 2200 2203 2227 2308 2337 2435 2049 2071 2471 2472 2514 2515 2516 2593
Viking	2481
Viore	2406 2416 2217 2318 2355 2405 2109 2255 2494
Visionquest	2415
Vistron	2321
Vivitek	2156
Vizio	2659 2666 2741 2742 2768 2072 2084 2235 2237 2379 2389 2396 2441 2497 2455 2569 2560 2561
Vuon	2418
Wards	2000 2001 2002 2004 2005 2007 2008 2015 2016 2019 2020 2074 2102 2103 2148 2459 2480 2483 2484 2488 2493 2502 2608 2609 2620 2623 2624 2625 2016
Waycon	
Westing House	2663 2734 2779 2023 2084 2085 2086 2111 2125 2133 2188 2223 2330 2338 2361 2377 2405 2416 2420 2429 2448 2582 2838 2839 2846 2849
White	2682 2024 2027 2210
Westinghouse	2270 2453 2466 2513
Wyse	2155
Yamaha	2002 2049 2609
Zenith	2736 2756 2475 2476 2493 2000 2001 2002 2004 2011 2013 2019 2024 2101 2122 2138 21552164 2210 2267 2270 2271 2280 2357 2459

Zonda	2513 2523 2528 2539 2605 2609 2611 2620 2638
Others	2501 2491 2799

Emerson	3004, 3018, 3000, 3007, 3021, 3129
Fisher	3009, 3015
Fuji	3003, 3002
Funai	3000, 3129
Garrard	3000
GE	3011,3003, 3020
GFM	3129
Go Video	3020
GoldStar	3004
Gradiente	3000
Harley Davidson	3000
Harman/Kardon	3014
HI-Q	3009
Hitachi	3000, 3006
Hughes Network Systems	3006
Humax	3055
Instant Replay	3003
JVC	3013
KEC	3004, 3021
Kenwood	3013
Kodak	3003, 3004
Lloyd's	3000
LXI	3004
Magnavox	3003, 3005, 3014, 3000, 3129
Magnin	3020
Marantz	3003, 3014
Marta	3004
Matsushita	3003, 3017
MEI	3003
Memorex	3003, 3017, 3004, 3010, 3005, 3009, 3020, 3000, 3015
MGA	3020, 3007
MGN Technology	3020
Minolta	3006
Mitsubishi	3013, 3007
Motorola	3003, 3010
MTC	3020, 3000
Multitech	3000
NEC	3015, 3013
Nikko	3004

VCR (Video Cassette Recorder)

Accurian	3000
Admiral	3010
Adventura	3000
Aiko	3021
Aiwa	3004,3000
Allegro	3005
America Action	3021
American High	3003
Asha	3020
Audiovox	3004,3021
Beaumark	3020
Bell & Howell	3015
Broksonic	3018
Calix	3004
Canon	3003
Carver	3014
CCE	3021
Citizen	30043021
Craig	3004,3009, 3020
Crosley	3014,3000
Curtis Mathes	3011,3003,3017,3020, 3021
Cybernex	3020
Daewoo	3008,3021
Denon	3006
DirecTV	3055
Durabrand	3005
Dynatech	3000
Electrohome	3004,3007
Electrophonic	3004
Emerex	3001

Audio Authority	3177
Audiovox	3054 3061
Bbk	3100
Bel Canto Design	3125
Blaupunkt	3054
Blue Parade	3031
Broksonic	3051
California Audio Labs	3022
Cambridge Audio	3187
Cinea	3071
Cinevision	3072 3075
Citizen	3051 3147
Coby	3090 3093 3098 3110 3174
Craig	3071
Curtis	3154 3201 3202 3203
Curtis Mathes	3091
Cyberhome	3067 3094 3079
Cyberpower	3139
Daewoo	3072 3075 3099
Dell	3139
Denon	3022 3156 3134 3186 3210 3043
Digitalmax	3136
Digix	3171 3209
Disney	3050 3105 3200 3160
Dynex	3183
Electrohome	3147
Emerson	3050 3152 3035
Enterprise	3035
Fisher	3048
Funai	3233 3235 3236 3050 3233 3235 3236
Gateway	3089 3096 3139
Ge	3025 3054 3066
Gfm	3050
Go Video	3088 3056 3057 3072 3075 3082 3096 3060 3036
Goldstar	3056 3075
Gpx	3154
Greenhill	3054

Grundig	3028
Harman/Kardon	3034 3052 3101 3193 3199
Helios	3151
Hello Kitty	3071
Hewlett Packard	3139
Hitachi	3032 3047
Hiteker	3049
Howard Computers	3139
HP	3139
Humax	3128
Hush	3139
Ibuypower	3139
Ilo	3109
Initial	3054
Insignia	3050 3056 3183 3145 3168 3240
Integra	3149 3040 3031 3138 3134
Irradio	3046
JBL	3052
JVC	3165 3097 3039 3130 3030 3074 3102 3107 3124 3191 3194 3215
Jwin	3196
Kawasaki	3061
Kenwood	3022 3027
Klh	3054 3061 3078
Koss	3218 3217
Lasonic	3065
Lexicon	3175
LG	3231 3056 3130 3075 3148 3035
Linksys	3139
Liquid Video	3217
Liteon	3096 3112 3136
Logitech	3184
Magnavox	3028 3024 3050 3046 3111 3118 3205 3221
Marantz	3028 3167 3172 3204
Mcintosh	3106
Media Center Pc	3139

Memorex	3051 3071 3105 3152 3162 3197
Microsoft	3025 3143 3139
Mind	3139
Mintek	3054
Mitsubishi	3122
Nad	3056 3181
Naxa	3154
Nesa	3054
Niveus Media	3139
Norcent	3093 3115
Northgate	3139
Nyko	3163
Ölevia	3162
Onkyo	3149 3132 3040 3024 3138 3153 3179
Oppo	3033 3100 3150 3175
Oritron	3218 3217
Panasonic	3135 3022 3207 3127 3024 3053 3137 3036 3219 3220
Philco	3050
Philips	3141 3028 3169 3144 3024 3050 3046 3096 3104 3108 3111 3205 3038 3221 3118
Pianodisc	3079
Pioneer	3016 3170 3125 3031 3042 3120 3190 3222
Polaroid	3078 3084 3090
Polk Audio	3028
Presidian	3050 3136
Proceed	3049
Proscan	3025
Protron	3115
Qwestar	3218
RCA	3025 3031 3138 3054 3061 3152 3182 3192 3070 3223 3241 3244 3245
Re-BI	3177
Replaytv	3036
Ricavision	3139

Rio	3075
Rotel	3039
Samsung	3229 3232 3234 3019 3032 3142 3088 3166 3161 3022 3082 3116 3126 3146 3157 3173 3178 3189 3206 3069 3224 3238 3239
Sansui	3051
Sanyo	3048 3051 3076
Schneider	3046
Sensory Science	3096
Sharp	3050 3155 3041 3103
Sherwood	3081 3089 3195 3212
Sherwood Newcastle	3089
Shinsonic	3026
Sonic Blue	3075 3036
Sony	3230 3121 3133 3026 3087 3073 3059 3080 3113 3123 3114 3044 3139 3226 3225 3227 3228
Stack9	3139
Supersonic	3211
Sylvania	3050
Symphonic	3050
Systemax	3139
Tagar Systems	3139
Teac	3061
Technics	3022 3053
Theta Digital	3031
Tivo	3117 3038 3044
Toshiba	3024 3185 3198 3158 3138 3051 3095 3117 3119 3128 3131 3140 3164 3139 3242
Touch	3139
Urban Concepts	3024
Venturer	3061
Viewsonic	3139 3020
Viore	3176
Vizio	3180 3086 3243
Voodoo	3139
Wb Electronics	3177

Xbox	3025 3143
Yamaha	3022 3159 3028 3023 3046 3029 3111 3112 3208 3068 3035
Zenith	3024 3056 3075
ZT Group	3139

Left Coast Products	4013
LG	4295 4342 4363 4400
Mitsubishi	4281 4282 4435
NEC	4282 4426
Optoma	4269 4313 4413 4414 4425
Panasonic	4271 4296 4303 4306 4328 4329 4330 4339 4340 4349 4358 4359 4366 4377 4378 4384 4385

Philips	4288
Pioneer	4280
Polk Audio	4260
Plus	4307
Polaroid	4314
Polyvision	4414
Promethean	4427 4428
Proximap	4284 4429
Sanwa	4374
Sanyo	4285 4289 4297 4303 4316 4317 4331 4332 4333 4336 4343 4350 4360 4361 4370 4371 4387 4388 4401 4402 4403 4423 4430
Sharp	4274 4298 4304 4324 4325 4326 4338 4344 4345 4346 4347 4356 4357 4365 4298 4372 4373 4382 4383 4389 4390 4392 4393 4395
Smart	4310 4311 4312
Sony	4270 4299 4318 4319 4320 4353 4354 4355 4364 4379 4397

Toshiba	4286 4300 4305 4321 4322 4380 4381 4404 4405 4406 4407
---------	--

Viewsonic	4273 4314 4314 4386 4386 4431 4432 4433
-----------	--

Vivitek	4275
Yamaha	4287 4301 4323 4408

PROJECTOR

3M	4273 4314 4386 4420
A+K	4282
ACER	4290 4409
ASK	4284 4291
Benq	4410 4421 4422
Boxlight	4273 4283 4289 4308 4314 4332 4333 4350 4360 4361
Canon	4277 4434
Casio	4272
Compaq	4309
Denon	4156 4118 4175
Dell	4278 4398 4399
Dukane	4273 4314 4343 4386
Eiki	4285
Eizo	4282
Epson	4268 4292 4334 4335 4351 4352 4367 4368 4412
Great Wall	4411
Hitachi	4095 4031 4273 4293 4314 4386 4362 4369 4386 4391
HP	4279
Infocus	4272 4284 4300 4424
JVC	4280 4294 4315 4337 4341 4394
K inderman	4415 4416 4417 4418 4419
Lasko	4438 4439 4440 4441 4442

AUDIO (AV Receivers, Soundbars, Bookshelf audio)

Adc	4008
Aiwa	4003 4005 4001 4018 4083 4057 4052
Alco	4055
Altec Lansing	4161 4177
Amc	4017
Amphion Media Works	4074
Amw	4074
Anam	4079
Anderic	4238 4239 4240 4241 4242 4243 4245 4246
Anthem	4215
Apex Digital	4027 4059 4092
Apple	4019
Arcam	4023 4005
Audiosource	4235
Audiotronic	4023
Audiovox	4055
Bose	4108 4081 4024 4056 4100 4009
Boston Acoustics	4122
Capetronic	4008
Carver	4023 4005 4001 4018
Coby	4054 4174 4180 4206 4117
Curtis	4054
Daewoo	4025
De_Nitive Technology	4233
Denon	4183 4158 4047 4182 4134 4061 4220 4222 4021 4131 4191 4191 4156 4118 4175
Durabrand	4076
Dynavox	4207
Dynex	4190
Fisher	4095
Garrard	4007
Gateway	4068 4075
Gpx	4204

Haier	4227
Harman/Kardon	4130 4039 4145 4000 4005 4012 4040 4169 4224 4228 4013 4193
Ihome	4143
Ilive	4202
Insignia	4015 4017 4087 4116 4123 4125 4154 4185 4187 4203 4106
Integra	4096 4044 4157 4178 4002 4038
Isymphony	4132 4144
JBL	4248 4252 4130 4000 4040 4230
JVC	4086 4129 4049 4199 4138 4063 4104 4111 4211 4008 4121 4189 4194 4261 4262 4263
Kenwood	4042 4078 4036 4077
Klh	4055 4058
Klipsch	4196
Koss	4064 4048
LG	4247 4126 4172 4135 4036 4214 4205 4255
Linn	4005
Liquid Video	4064
Magnavox	4251 4023 4030 4005 4018 4067 4099 4008
Marantz	4023 4030 4005 4018 4035 4115 4013 4105 4120
Martin Logan	4229
Mcintosh	4035
Memorex	4076
Micromega	4023
Musicmagic	4018
Myryad	4023
Nakamichi	4042
Nexxtech	4087
Norcent	4054 4087
Nova	4054
Onkyo	4238 4239 4096 4044 4157 4178 4146 4219 4002 4038 4011 4071

Optimus	4014 4008 4010
Oritron	4064 4048
Panasonic	4188 4147 4082 4032 4041 4069 4086 4217 4198 4195 4179 4128 4114 4091 4090 4072 4043 4034 4223 4271 4296 4302 4306
Philips	4242 4151 4023 4030 4012 4018 4029 4099 4136 4137 4171 4213 4013 4005
Pinnacle Speakers	4236 4237
Pioneer	4254 4109 4014 4020 4053 4142 4166 4008 4010
Polk	4253
Polk Audio	4253 4005 4035 4133 4225 4013
Pro_Cient	4234
Proscan	4026
Rca	4165 4167 4176 4079 4014 4026 4020 4055 4112 4141 4212 4216 4008 4066 4010 4265 4266
Regent	4076
Rio	4103
Samsung	4245 4246 4250 4168 4102 4181 4037 4201 4119 4039 4065 4186 4163 4276 4327 4348 4375 4376 4396 4259
Sansui	4005 4018
Sanyo	4095
Sharp	4197
Sherwood	4017 4068 4075 4084 4107 4123 4200
Sherwood Newcastle	4075 4123
Sonic Blue	4103
Sony	4243 4244 4164 4244 4080 4089 4088 4124 4098 4155 4159 4016 4060 4028 4101 4003 4085 4127 4073 4170 4184 4208 4221 4226 4270 4256 4257 4258
Speakercraft	4234

Stereophonics	4014
Sun_Re	4042
Teac	4007 4055 4070
Technics	4082 4041 4069
Thorens	4023
Toshiba	4020 4093 4232
Venturer	4055
Vizio	4240 4241 4249 4148 4173 4264
Wards	4003 4005
Yamada	4006
Yamaha	4113 4152 4006 4192 4004 4097 4033 4045 4050 4051 4153 4209 4210 4218 4231 4160 4022 4062 4110 4149 4162 4094 4150 4126 4036 4103
Zenith	4126 4036 4103
Zvox	4139 4140 4436 4437

STB (Set-Top-Box, Cable, Satellite)

2wire	5102
A-Mark	5012 5018
Abc	5255 5256 5020 5011 5012
Abs	5062
Access Hd	5249 5104
Accuphase	5011
Accurian	5089
Acorn	5020
Action	5020
Active	5020
Adb	5110
Alienware	5062
Alphastar	5036
Americast	5272 5046
Amino	5251 5252 5253 5086 5097 5080
Apex	5248 5247

Archer	5020
Arion	5193
AT&T	5279 5042 5102
Atlas M4ab06	5185
Bcc	5023
Bell South	5272 5046
Bell Expressvu	5037 5057
British Telecom	5011
Buffalo	5091
Captiveworks Cw-600s	5176 5153 5176
Casti	5109
Century	5012
Chaparral	5019
Cisco	5099 5044 5100 5002
Clearmaster	5045 5319
Clearmax	5045
CoolBox	5045
Coolsat	5194 5156 5094
Coolmax	5045
Comcast	5278 5254
Crossdigital	5305 5053
Cyberpower	5062
D-Link	5084 5090 5105
Denon	5205
Digeo	5274 5058 5106
Digital Stream	5245 5108
Directv	5087 5088 5072 5026 5031 5032 5032 5021 5035 5092 5040 5098 5050 5052 5015 5053 5073 5074 5076 5077 5078 5281 5282 5283 5284 5285 5286 5287 5288 5289 5290 5291 5292 5293 5294 5295 5296 5297 5299 5302 5303 5304 5305 5306 5056 5309 5310 5311 5312 5313 5314 5315 5316 5317
Director	5266 5027 5001
Dish	5246 5318
Dish Network System	5083 5037 50575245 5248 5249
Dishpro	5083 5037
Echostar	5083 5037 5057
Epson	5085
Expressvu	5037
Fortec Star	5152 5096

Fosgate	5023
Funai	5072
Gateway	5062
Ge	5293 5018 5228 5026 5031
General Instrument	5266 5270 5263 5255 5302 5027 5039 5023 5011 50015043
Gibraltar	5011
Gmi	5045
Goi	5037
Goldstar	5259 5018
Hamlin	5257 5262 5013 5022
Hewlett Packard	5062 5061
Hitachi	5299 5011 5012 5013 5035 5040
Houston	5037
Howard Computers	5062
Hp	5062 5061
Hts	5037
Hughes Network Systems	5297 5306 5316 5317 5056 5035 5092 5076 5077 5078
Humax	5093
Hush	5062
I3 Micro	5086
Ibuypower	5062
Innova	5015
Insight	5027 5039
Insignia	5075
Iptv Cisco	5148
Jerrold	5266 5270 5263 5255 5302 5027 5039 5023 5011 5001 5043
JVC	5037 5057
Koolconnect	5080
LG	5243 5244 5317 5059 5074 5075
Linksys	5062 5070
Magnavox	5296 5034
Media Center Pc	5062
Memorex	5254 5010
Mcintosh	5043
Microsoft	5062 5103
Mind	5062
Mitsubishi	5011 5035

Motorola	5260 5266 5270 5263 5274 5275 5301 5302 5068 5101 5071 5027 5039 5023 5058 5051 5100 5000 5001 50035043 5042
Multitech	5045
Myrio	5086 5097
Neosat 2-Pro 2000	5166
Netsat	5015
Neusat Sp-6000	5188
Next Level	5302 5043
Niveus Media	5062
Northgate	5062
Nova Vision	5012
Novaplex	5012
NtDigital	5192
Pace	5277 5261 5256 5099 5044 5020 5012 5100
Panasonic	5254 5258 5278 5292 5295 5010 5012 5018 5016 5100 5021 5033 5054
Pansat	5095
Paragon	5254 5010 5012 5029
Penney	5010
Philips	5276 5265 5289 5306 5303 5311 5316 5065 5025 5056 5035 5092 5037 5040 5050 5034 5015 5076
Pioneer	5277 5271 5259 5269 5099 5044 5018 5030 5048
Prime	5184
Primestar	5043
Proscan	5026 5031
Pulsar	5254 5010
Quasar	5254 5010
Radioshack	5302 5045 5031 5037 5043
RCA	5250 5290 5300 5310 5060 5026 5031 5056 5037 5073 5076 5087 5041
Regal	5264 5262 5023 5024 5022
Ricavision	5062
Roku	5247 5081 5246
Runco	5254 5010

Samsung	5259 5281 5304 5305 5306 5307 5311 5312 5315 5011 5018 5100 5076 5063 5082
Scientific Atlanta	5277 5271 5267 5256 5099 5044 5028 5020 5042 5011 5010 5012 5100
Sejin	5086
Sensory Science	5055
Sharp	5048
SKY	5015
Smc	5079
Sonicview Sv-360 Elite Pvr	5180 5138
Sony	5273 5294 5313 53145047 5032 5088 5062 5066 5069
Sprucer	5018
Stack 9	5062
Starcom	5255 5011
Star Choice	5302 5043
Star Trak	5036 5043
Supercable	5263 5023
Supermax	5045
Surewest	5080
Sylvania	5085
Systemax	5062
Tagar Systems	5062
Technotrend	5154
Telefonica	5141 5154 5171 5175 5154 5132
Thomson	5060 5026 5031
Tivo	5306 5311 5056 5076 5077 5078