





Setting Awning Limits

Motor LEFT

On LH motor, the hole closest to the manual crank sets the "OUT" limit, while the back hole adjusts the "IN" Limit

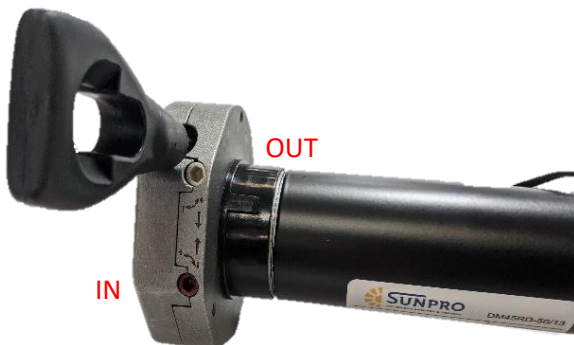

Motor LEFT

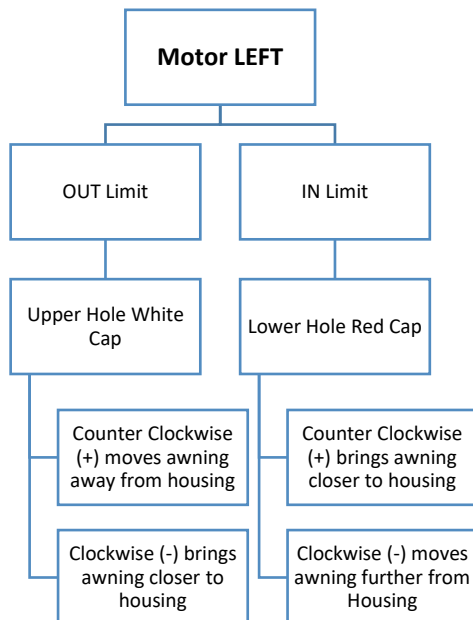


Motor RIGHT

On RH motor, the hole closest to the manual crank sets the "IN" limit, while the back hole adjusts the "OUT" limit.



Motor RIGHT

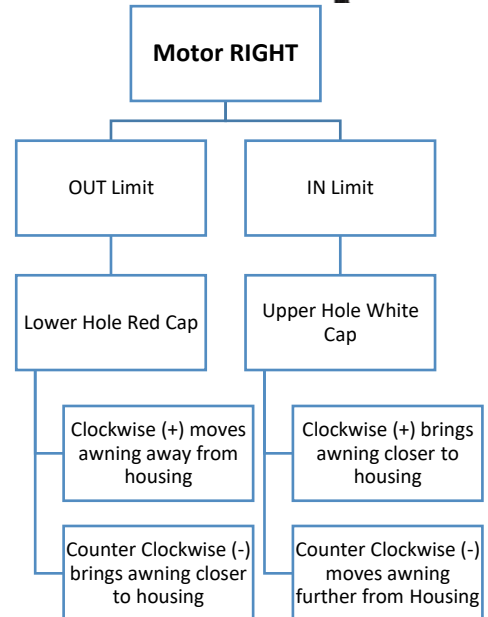

All negative (-) adjustments will only be noticed when the awning is under motion and comes to a stop. At that time, the awning will respond to positive (+) adjustments either towards the housing during IN limit or away from housing during OUT limit. **MOTOR MUST BE MOVING WHEN SETTING NEGATIVE (-) LIMITS**