

 
## Remote control

The Topaz AM10 is supplied with a remote control that operates this unit and its built-in tuner. In addition, the buttons with Blue coloured icons can operate a matching Topaz CD5 or CD10 player.

Always use Alkaline batteries.

### CD5/CD10 (Blue coloured icons)

To operate the Topaz CD5 or CD10 players only. For more information, refer to the Topaz CD5 and CD10 user's manual.



#### Mute

Mutes audio on the unit. Press again to cancel mute.



Vol

#### Volume

Increases or decreases the volume of the unit. Also used to change the bass, treble and balance settings when these are selected.

### Menu

Toggles between Bass, Treble and Balance options. Use the volume buttons to change the level of the selected option.

### Source buttons (CD, Tuner, BD/DVD, MP3/Aux, Phono)

Press the relevant button to select the desired music source.

