

DIGIT

糖豆蓝牙数字键盘

EH 113 Bluetooth Number Pad & Calculator


Specifications

Key:	20 keys, mechanical switches
Backlight:	LED monochrome backlight
Battery capacity:	800mAh
Charging time:	about 2 hrs
Interface:	Micro USB
Modes:	Bluetooth mode / wired mode
Bluetooth Device Name:	Digit@LOFREE
Size:	148x92x35mm
Net weight:	approximately 180g

Package Content

Bluetooth Number Pad & Calculator:	x1
USB Cable:	x1
Packaging:	x1
User Manual:	x1
Warranty Card:	x1

Product illustration

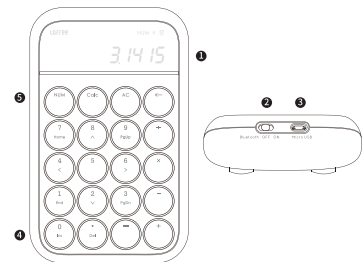

❶ LCD: display the calculation process and result under the calculator function.

❷ Toggle Switch

Toggle to ON: Activate the wired mode
Toggle to OFF: Power off. Does not affect charging.
Toggle to Bluetooth mode: Activate bluetooth mode. Long press (3 seconds) the combination keys Fn+1/Fn+2/Fn+3 to connect the Bluetooth with up to 3 devices. Short press (one tap) combination keys Fn+1/ Fn+2/Fn+3 to switch between 3 Bluetooth devices.

❸ Micro USB interface:

Wired mode connection: Connect to the computer with the USB cable under 'On' status
Charging status indication: When the power is lower than 20%, the LED flashes rapidly, the LED flashes slowly during charging, and it goes off when fully charged.

❹ FN Key combination:

Press and hold the combination keys Fn+1/Fn+2/Fn+3 for Bluetooth connection, and the Fn icon is located on the side of the '0' key.

❺ Calculator and Keypad function:

Short press the 'CALC' key to switch to the calculator function, short press the NUM key to switch to the keypad function.

LED indicator	NUM	Bluetooth	Calc
Static	Keyboard numeric	Bluetooth is connected	Calculator
Flash	-	Standby	-
Off	Keyboard Editor	Bluetooth off	-

Usage Guidelines

Charging

When the battery power is lower than 20%, the LED indicator (micro USB interface) will rapidly flash. Please use the standard USB cable to charge the product. During the charging process, the LED indicator flashes slowly and goes off when fully charged. The product can be charged at both times, when it's ON or even when it's OFF.

Power saving mode

In Bluetooth mode: Backlight goes off after 3 minutes of inactivity while Bluetooth remains connected. Press any key to reactivate the backlight. The device enters the sleep mode after 5 minutes of inactivity and the Bluetooth will be disconnected, press any key to wake up the device.

In wired mode: the product does not enter power saving and sleep mode (the backlight always on)

Backlight brightness

The backlight has 2 brightness levels. Press and hold the Fn key, then press the '+' key to increase the brightness. Press and hold the fn key, press the '-' key to reduce the brightness.

Calculator functions

Calc key: Short press once to switch to the calculator function, in which the product can be used independently as a calculator;
Delete key: To delete the last digit of the current input
AC key: To clear the current calculation result
NUM key: Under the calculator function, short press the NUM key to switch the product back to the numeric keypad function.

Errors

When the number of digits exceed ten or the calculations are incorrect, the display will read 'E' to indicate error. Press the 'AC' key to recalculate.

Keypad Guidelines

❶ Wired mode

Turn the toggle to ON then use the USB cable that comes with the product to connect to the laptop/device. Short press the NUM key to activate the wired mode.

❷ Bluetooth mode

Turn the toggle to the bluetooth mode. The keyboard allows you to connect it with up to 3 devices at the same time with the combination keys Fn +1 / Fn+2 / Fn+ 3.

A Bluetooth connection

The following is an example of connecting the first device with Fn+1Toggle the switch to Bluetooth mode, press and hold the

combination keys Fn + 1 for 3 seconds to enable pairing. The Bluetooth indicator should flash. This is when you should detect Digit@lofree on your device and connect. When you need to connect Digit with the second device, you can do so by following the same steps and using Fn + 2 combination keys. And use Fn + 3 to connect with the third device.

B Bluetooth switch

Remember the order of the connected devices and switch between the corresponding devices by simply pressing Fn+1 /Fn+2/ Fn+3.

LOfree™

深圳市洛斐客文化有限公司
Shenzhen Lofree Culture Co., Ltd.
深圳市宝安区西乡街道宝源路1065号F518时尚创意园F8栋202
202-F8, F518 Idea Land, 1065 Bao Yuan Road, Shenzhen

服务热线: 4006002083
www.lofree.com.cn www.lofree.co
f lofree.co t lofreeco @lofree.co

