

● ●  
TWSMT  
STEEL

**VK63**  
SEIKO MOVEMENT

# TW STEEL


**TW Steel is a watch brand harmoniously combining both design and innovation. 'The Watch in Steel' leads the oversized market with style and quality guaranteed. TW Steel values the most important relationship of all – the one with the consumer. To express this, we hereby give you all the information that you need to enjoy your TW Steel watch to the fullest.**

## **MAINTENANCE**

TW Steel uses the best materials and carries out strict controls before the watch leaves the factory. The way in which you wear or treat your TW Steel will determine whether the appearance of the watch is maintained in the future, or whether it will deteriorate. In order to enjoy wearing your TW Steel as long as possible, we include a number of tips: If the watch comes into contact with hard or corrosive materials, this can cause damage, which, if it occurs regularly, will become clearly visible in the form of scratches.

Your watch should be cleaned with a soft cotton cloth that is not impregnated with any cleaning material. Absolutely no cleaning materials should be used. It is advisable to regularly polish your watch with a soft cotton cloth. The watch is a precision mechanical instrument and should be treated as such. Adjusting the time or date, opening or closing the crown or crowncap, should not be done roughly, but carefully.

## DISPLAY AND CROWN / BUTTONS

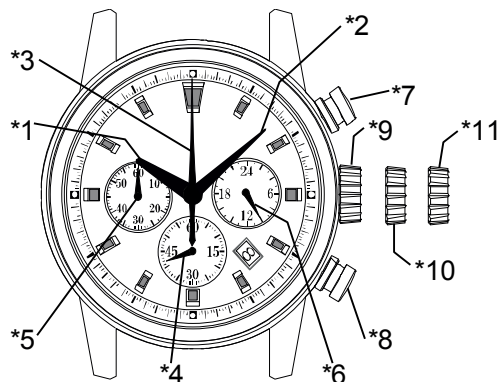

Note

|                                         |                  |                                              |
|-----------------------------------------|------------------|----------------------------------------------|
| *1: Hour hand                           | *6: 24 hour hand | *7: Button (A) (START / STOP)                |
| *2: Minute hand                         |                  | *8: Button (B) (RESET)                       |
| *3: Chronograph second hand             |                  | *9: Crown at normal position                 |
| *4: Small second hand                   |                  | *10: Crown at first position (Date setting)  |
| *5: Chronograph minute hand (60 minute) |                  | *11: Crown at second position (Time setting) |
| *6: 24 hour hand                        |                  |                                              |

## HOW TO SET THE TIME

- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.

(Check that AM / PM is set correctly.)

- 3) Push the crown back into the normal position.

\*If the crown is pulled to the second position while the chronograph is started, the chronograph hands will continue to move. This is not a malfunction.

## HOW TO SET THE DATE

- 1) Pull out the crown to the first click position.
- 2) Turn the crown clockwise for date setting.

\*Do not set the date between 9:00 P.M. and 3:00 A.M. as this will cause a malfunction.

- 3) Push the crown back into the normal position.

## HOW TO RESET (AFTER BATTERY CHANGE)

It is possible to reset by the following two methods.

- Method 1 {
- 1) Set the crown to the normal position.
  - 2) Touch the AC terminal of circuit block and the switch spring with conductive tweezers to reset the circuit.
  - 3) The small second hand will move at two-second interval for 10 seconds.
- Method 2 {
- 1) Pull out the crown to the second click position.
  - 2) Press the button (B) for two seconds and release the button.
  - 3) Push the crown back into the normal position.
  - 4) The small second hand will move at two-second interval for 10 seconds.

\*If the crown is operated within this 10 seconds, the two-second interval movement will not activate.

\*\*It is not necessary to set the chronograph hands after the battery is exchanged.

\*\*\*If the chronograph hands position are incorrect, following below procedure all the chronograph hands will be reset to "0" position.

Button (A) → Button (A) → Button (B)  
(START) (STOP) (RESET)

## HOW TO USE THE CHRONOGRAPH

Press the buttons in the following order: A → A → B

- 1) Press button (A) to start the chronograph. The chronograph second hand will start moving.
- 2) (6 hour 20 minutes 10 seconds)  
Press button (A) again to stop the chronograph. The chronograph hands stop to indicate the elapsed time.
- 3) Press button (B) to reset the the chronograph. All the chronograph hands will be reset to "0" position.

\*The chronograph can measure up to 60 minutes.

\*\*The chronograph stops after a measurement for 60 minutes.

\*\*\*During the chronograph operation, button (B) (reset) can be pushed. There is no problem with the function.