

EZ9A061820023

Key

The vehicle is equipped with 2 regular keys or 1 regular key and 1 key with remote control

1. Ordinary key

Equipped with remote control key

Ordinary key

Ordinary keys are mainly used to activate the anti-theft control system and starting system of the engine, and can also be used to perform locking/unlocking operations on the driver's door, passenger's door, side sliding door, and tailgate. When using a regular key on any door other than the driver's door, only that door will be locked/unlocked. A regular key can also be used to lock/unlock the fuel tank cap.

With remote control key

The remote control is the control component of the car's central door locking system, which can lock and unlock all doors.

The remote key can remotely control the vehicle's central locking system and also remotely control the lifting of doors and windows.

Extension/retraction of key head with remote control key (hereinafter referred to as key head)

Press the release button on the key with remote control, and the key head can extend from the main body.

To retract the key head, press the release button on the key with remote control and rotate the key head into the main body.

Replace the remote control battery

If you need to replace the battery, you should follow the following procedure:


1. Extend the key head;
2. Use force to remove the key body from the main body;
3. Pry open the upper and lower panels of the main body (using one yuan coins);
4. Pour out the printed circuit board with battery from the lower panel; Be careful not to pry out the circuit board with metal objects.

5. Remove the old battery and install a new one; Reminder: It is recommended to use the CR2032 battery model. Pay attention to the positive and negative terminals of the battery.

6. Place the printed circuit board with battery into the lower panel of the main body;

7. Close the upper and lower panels of the main body; Be careful not to miss the waterproof pad inside the panel of the key body.

Press the key body into the key body.

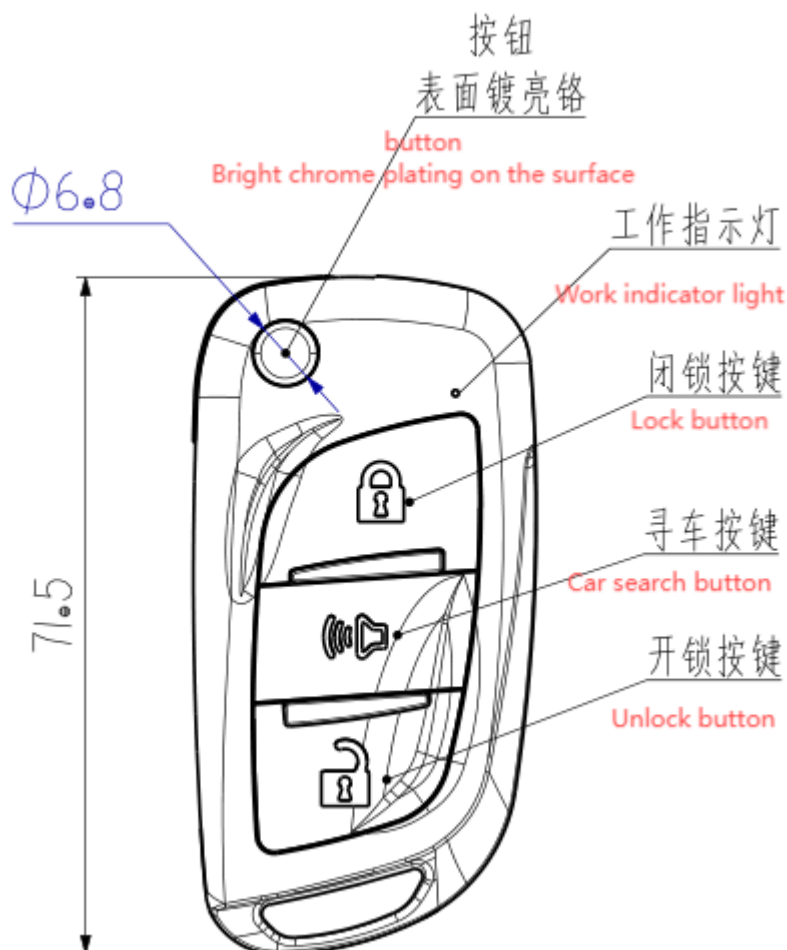

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.