 
 


# Carabiner Lock

## User's Manual

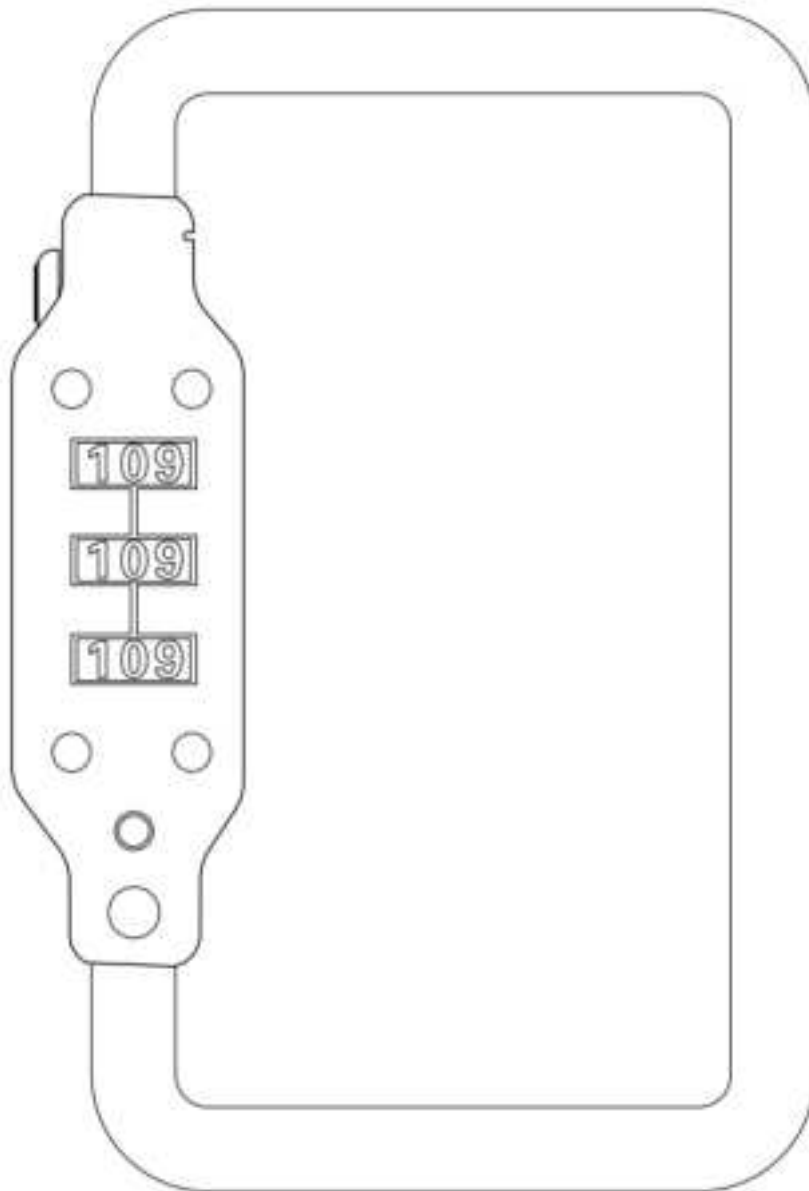


## How to Set the Lock

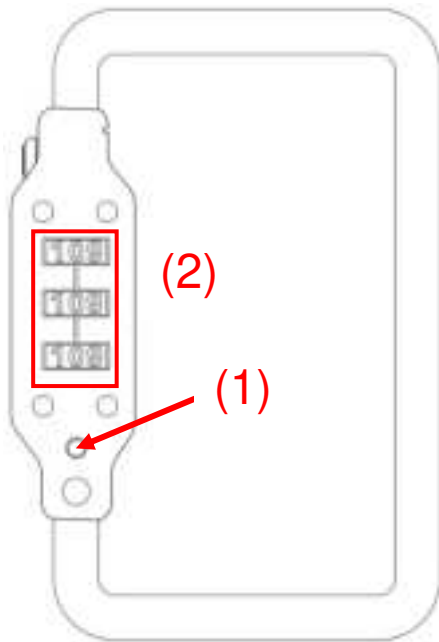

The default code is 0-0-0. To set your own combination:

1. Use a ballpoint pen to press the reset pin.
2. While holding the pin down, set your desired combination by aligning the numbers with the line.
3. Release the pin to save your combination.

## How to Use the Lock

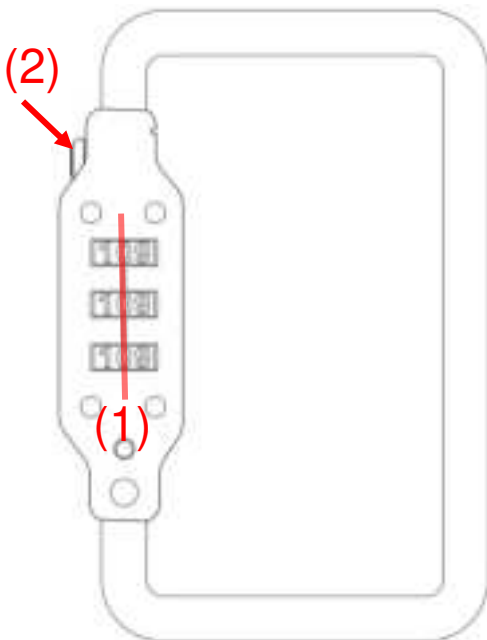

1. Align your combination with the convex line in the window.
2. Press the open button and detach the lock from the carabiner.
3. Release the button, secure your item onto the carabiner, and reattach the lock.
4. Scramble the dials to secure the lock.