 


Roku™ Indoor Camera

Quick Start Guide

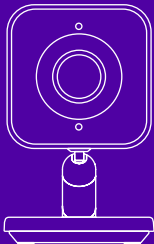

What's included

 
- A** Roku Indoor Camera*
- B** USB-C charging cable
- C** Power adaptor
- D** Mounting screws and anchors
- E** Mounting plate

What you'll need


Phillips screwdriver (if mounting)
Your smartphone
2.4 GHz WiFi network

* For indoor use only.

A



B

 

C

 


D




E



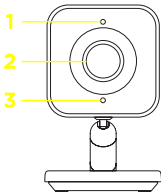


FRONT

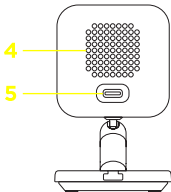 

BACK

- ① Status light
- ② Lens
- ③ Microphone

 - ④ Speaker
- ⑤ USB-C port

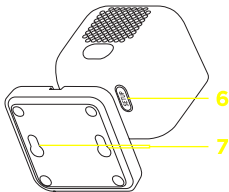

BOTTOM

- 6** Setup button
- 7** Mounting holes
(attach to **E** mounting plate)

Let's get started

STEP 1: Download the Roku Smart Home app

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.

You'll need



Smartphone & app



Data rates may apply.

STEP 2: Install your camera

In the Roku Smart Home app, tap the “+” button, “**Add Device**,” then “**Cameras & doorbells**” to find “**Indoor Camera**.” Follow the instructions to finish setup.

What's that light mean?

Before setup	Status
BLUE - Pulsing	Ready to connect
YELLOW - Slow blinking	Booting up / Updating firmware
WHITE - Fast blinking	Connecting to network

After setup	Status
RED - Blink (3 times)	Error

Unlock the full potential
of your camera with a
Roku Smart Home Subscription.

Learn more at

Need help?



Setup
videos



Common
questions



Tips and
tricks

Visit

Roku

© 2024 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.



4100001091_04