

开放式真无线耳机 OPENEAR Arco 使用说明书	耳机展示 LED指示灯 Type-C充电口 L(左耳) R(右耳) 耳机LED灯 触摸按键	产品信息 产品型号：OPENEAR Arco 耳机类型：开放式真无线耳机 BT版本：V5.4 连接范围：≈10米 耳机使用时间：≥5小时 (80%音量) 耳机充电时间：1小时 充电仓使用时间：可充耳机7次 充电仓充电时间：1.5小时 充电电压：DC 5V	佩戴示意图 将耳挂置于耳后，向后旋转耳机，使它轻贴于耳朵上方。 开机电量播报 开机后自动播报耳机实时电量。 电量100%-70%，提示音：battery high. 电量69%-40%，提示音：battery medium. 电量39%-10%，提示音：battery low.
	操作步骤 开/关机 开机：打开充电仓面盖，耳机自动开机。 提示音：Power on, pairing; 关机：将耳机放入充电仓并合上面盖，耳机自动关机。 或长按耳机按键5秒，耳机关机。提示音: Power off. BT连接 打开蓝牙菜单，选择“OPENEAR Arco” 进行连接， 提示音：connected . 两种音效切换 四击左/右任一耳机按键，可切换室内/户外模式，开机默认室内模式。提示音：indoor mode（室内模式） outdoor mode（户外模式）。	上/下一曲 上一曲：三击左耳。下一曲：三击右耳。 音量加/减 音量加：双击右耳。音量减：双击左耳。 唤醒语音助手 长按任一耳机3秒，激活手机语音助手。 播放/暂停音乐 单击任一耳机。 接听/挂断/拒接来电 接听/挂断来电：单击任一耳机。 拒接来电：长按1.5秒任一耳机。	低电量提示 当电池低于20%时，每隔3分钟白灯闪烁一下，提示音“low battery”。 耳机充电 将耳机放入充电仓并合上面盖，充电时耳机绿灯常亮；充满电时，白灯常亮。 充电仓充电 请使用DC 5V适配器和Type-C充电线为充电仓充电。 充电仓充电时，白灯常亮，充满白灯灭。 →

Truly Wireless Open Ear Headphones OPENEAR Arco User Manual	Headphones LED Indicator Type-C Charging L R Earbud LED Indicator Touch Control	Specifications Model: OPENEAR Arco Type: Truly Wireless Open Ear Headphones Version: V5.4 Connection: ≈10m Earbud Play Time: ≥5H (80% volume) Earbud Charging: 1H Case Charge Earbud: 7 Times Case Charging: 1.5H Charging Voltage: DC 5V	How to Wear Put the earhook behind the ear until it fits your ear. Battery Level Notification Automatically announce the real-time battery level of the headphones after power on. Battery 100%-70%: Prompts: battery high. Battery 69%-40%: Prompts: battery medium. Battery 39%-10%: Prompts: battery low.
	Operations Power On/Off The earbuds are automatically power on when opening case. Prompt: power on pairing; The earbuds turn off when placed into the charging case and closed the lid. Or press and hold the button on the earbuds for 5 sec. Prompt: power off. BT Connection Select "OPENEAR Arco" in BT menu to connect. Prompt: connected. Two Sound Modes The earbuds is built-in 2 different sound modes . In indoor mode, you will hear more bass effects. In outdoor mode, you will get higher volume. The default mode is indoor mode. Touch 4x of any earbuds to switch from indoor mode to outdoor mode.	Previous/Next Track Previous Track: Touch 3x of Left earbud. Next Track: Touch 3x of Right earbud. Volume Up/Down Volume Up: Touch 2x of Right earbud. Volume Down: Touch 2x of Left earbud. Activate Voice Command Activate Voice Command: Touch 3s of any earbuds. Play/Pause Music Touch 1x of any earbuds. Answer/Hang Up/Reject A Call Answer/Hang Up A Call: Touch 1x of any earbuds. Reject A Call: Touch 1.5s of any earbuds.	Low Battery When battery is lower than 20%, prompt: battery low. Earbud Charging Place the earbuds into the charging case and close the lid. The green LED light on the earbud is on when charging. White LED is on after fully charged. Case Charging Please use DC 5V adapter for charging. White LED is on charging. The LED is off when fully charged. →