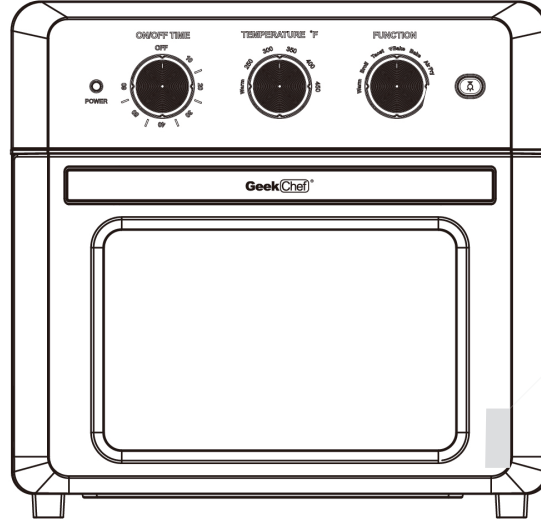


<div>Table of contents</div> <div><div>User Manual</div><div>Model No.: FM1800</div><div>Item No.: GTO18</div></div> <div></div>	<div>Table of contents</div> <div><div>Product Specification</div><div>2</div></div> <div><div>Safety Instructions</div><div>3</div></div> <div><div>Product Components</div><div>6</div></div> <div><div>How to use</div><div>10</div></div> <div><div>Cleaning and Maintenance</div><div>11</div></div> <div><div>Trouble Shooting</div><div>12</div></div> <div><div>Limited Warranty</div><div>13</div></div>		<div>2</div> <div>Specification</div> <div><div>Model No.</div><div>FM1800</div></div> <div><div>Item No.</div><div>GTO18</div></div> <div><div>Rated Voltage</div><div>120V~60Hz</div></div> <div><div>Rated Power</div><div>1500W</div></div> <div><div>Oven Capacity</div><div>18L / 19QT</div></div> <div><div>Product Dimension</div><div>366X355X368MM</div><div>14.4*13.9*14.5(inch)</div></div>
---	---	--	---

10

How to use

Air Fry

Place the Air Fryer Basket onto the Baking Pan or Oven Rack. Air Fry in rack Position 2.

Set the Function Dial to Air Fry. Set Temperature Dial to desired temperature. Then turn the Timer Dial to the desired cooking time to turn on the oven and begin Air Frying. The oven power light will illuminate. The timer will ring once when the cycle is complete and the oven will power off when the time expires. To stop Air Frying, turn the Timer Dial to the OFF position.

Cooking Chart

The chart below lists recommended cooking times and portions for various types of foods that can be used in this Air Fryer Countertop Oven.

Food	Function Setting	Recommended Amount	Cooking Time	Recommended Accessories	Rack Position
French Fry	Air Fry	300g	15min	Air Fry Basket	Middle
Chicken Wing	Air Fry	670g	20min	Air Fry Basket	Middle
Pizza	Bake	8inch	6min	Oven Rack	Middle
Bread	Toast	4 slices	6min	Oven Rack	Middle

11

Cleaning and Maintenance

1. Unplug your Air Fryer Countertop Oven and allow it to completely cool before cleaning. Do not use abrasive cleaners, as they will damage the finish. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply the cleaning agent to a cloth, not directly onto the Air Fryer Countertop Oven. Do not use excess pressure when cleaning the area of the control panel as it could cause the text to be removed over time.

2. To clean the interior walls and bottom of the oven (remove the Crumb Tray first) use a damp soapy cloth or sponge. Never use harsh abrasives or corrosive products including oven cleaner sprays. These could damage the oven surface. Never use steel wool pads on the Air Fryer Countertop Oven or accessories.

3. The Oven Rack, Baking/Drip Pan, Air Fryer Basket and Crumb Tray should be hand-washed in hot, sudsy water or use a nylon scouring pad or nylon brush. These parts are not dishwasher safe.

4. Always clean the Crumb Tray after each use. Excess food particles could cause smoking and will be hard to remove from tray. To remove baked-on grease or burnt food particles you can soak the Crumb Tray in hot, sudsy water or use nonabrasive cleaners. Never operate the oven without the Crumb Tray in place.

5. The top interior of the Air Fryer Countertop Oven should be cleaned to remove excess grease that may accumulate after cooking greasy foods. Doing so will prevent smoking in the oven during subsequent uses.

12

Trouble Shooting

PROBLEM	PROBABLE CAUSE	
The oven will not turn on.	1	Make sure the oven is plugged in.
Foods are not completely cooked.	1	Increase cooking temperature or time.
Foods are over-cooked or burned.	1	Decrease cooking temperature or time.
	2	Make sure food items are not too large and are not touching the heating elements.
Foods are cooked unevenly.	1	Preheat the oven
	2	Make sure food items are not too closely packed into a tray, rack or other container.
White smoke is coming out of the oven.	1	The oven may produce some white smoke when you use it for the first time. This is normal.
	2	Excess oil or fatty foods may produce white smoke. Make sure the inside of the oven is cleaned properly and not greasy.
Black smoke is coming out of the oven.	1	Immediately turn off the oven and then unplug it. Cool the oven to room temperature. Wait for smoke to clear before opening the oven door or pulling out the tray, basket or rack.

13

Limited Warranty

HOME EASY LTD warrants to the original consumer or purchaser this Geek Chef Air Fryer Countertop Oven is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, HOME EASY LTD, at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 844-801-8880 and choose the appropriate prompt, or email info@homeeasy.net. Please have your Product's model number, your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAN PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

14

Limited Warranty

THIS LIMITED WARRANTY DOES NOT APPLY TO

1.Failure of product to perform during power failures and interruptions or inadequate electrical service

2.Damage caused by transportation or handling.

3.Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.

4.Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity

5.Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.

6.Abnormal cleaning and maintenance as described in the user's manual.

7.Use of accessories or components that are not compatible with this product.

The cost of repair or replacement under these excluded circumstances shall be borne by the consumer.